






GLOBAL PARTS DISTRIBUTORS, LLC


# Tech Tip

## 6512102 & 6512103 Compressor Clutch Coil Harness Connection

OEM:

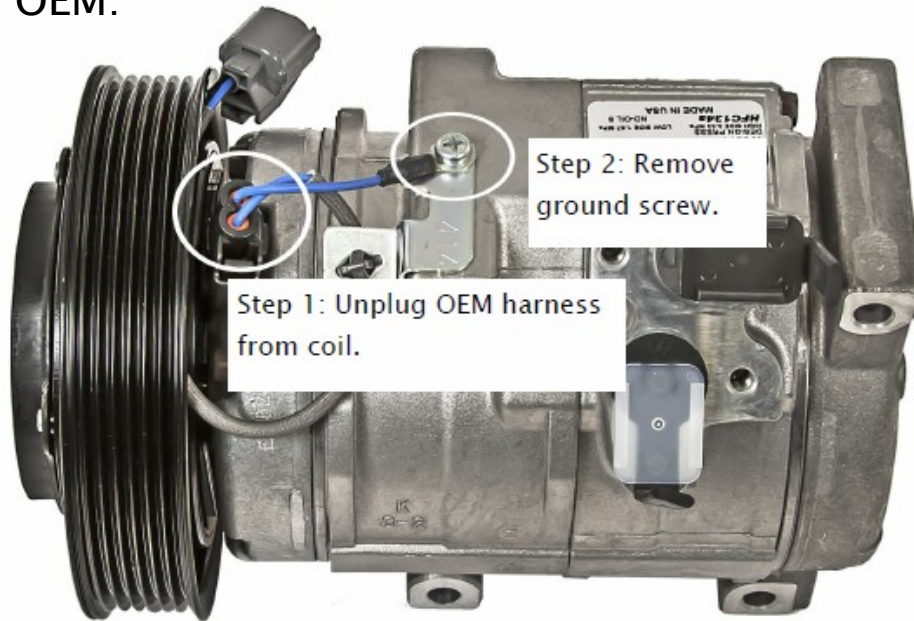

gpd:

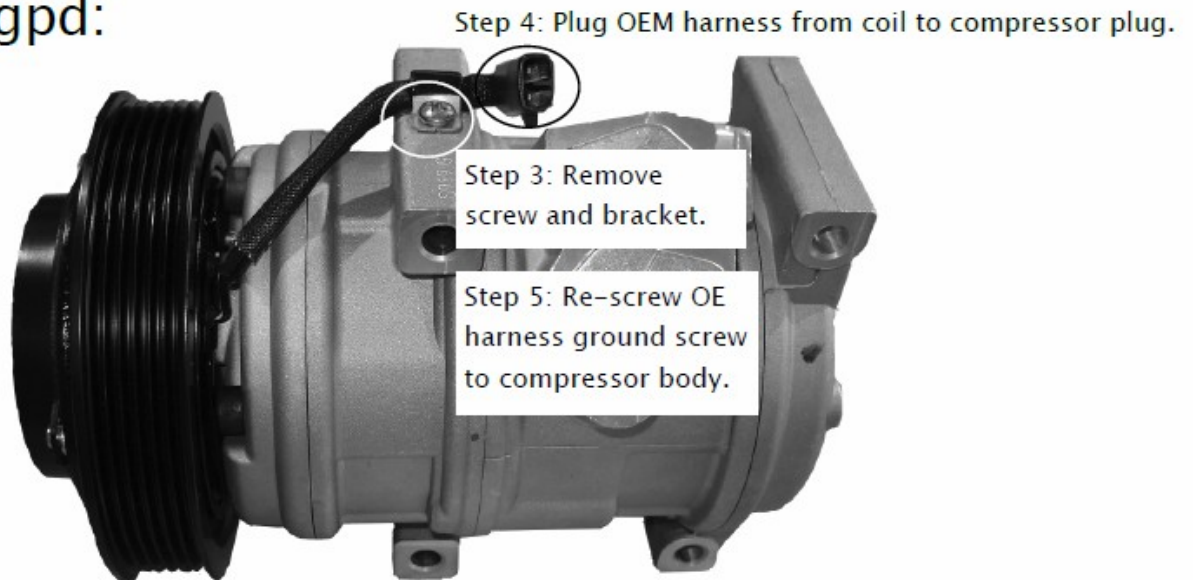

1. Unplug the OE clutch coil harness connection.
2. Remove screw and bracket from OE compressor.
3. Remove screw and bracket from gpd compressor.
4. Plug OE harness from old compressor into new gpd compressor plug.
5. Properly ground harness to gpd compressor as shown.

Manufacturer names, logos and part numbers are for reference only. All prices, taxes and availability are subject to change without notice. This document and any files transmitted with it are confidential and intended solely for the use of the individual or entity to which they are addressed. If you have received this document in error, please delete it immediately. Note that any views or opinions presented in this document are solely those of the author. Any unauthorized review, use, disclosure or distribution is prohibited. GPD accepts no liability for any damage caused by any virus or other means transmitted by this document.

Discover other replacement A/C and heating parts on our website.