

GT 3 Installation Hub Model 10-7013 **Model 10-7012 *** Model 10-7010 **** Model 10-7016

Parts List

Hub (1) Hub cover (1) Mounting screws (3) Washer (1) (10-7013 only) Ground wire (1)

FITMENT:

Autos

Dodge
Chrysler

*** 1961-66 *** Most models

 Trucks
 **** 1974-87
 **** Std. Col. Dodge / Plymouth

 Vans
 4 wd pick-up, Trailduster, Ramcharger, Dakota

Notice

Airbag equipped vehicles: GT Performance Products steering wheels and hubs are not designed for use on Airbag equipped vehicles. Due to Safety and Legal reasons, we do not recommend changing, altering or removing the airbag from any vehicle.

PRE-INSTALLATION INSTRUCTIONS

- A) Read all instructions completely prior to installation process!
- B) Align wheels on vehicle straight ahead and disconnect battery.
- C) Removal of Original or Custom Steering Wheel: Refer to shop manual for your vehicle or manufacturer of custom steering wheel. NOTE: A steering wheel or gear puller may be required.

INSTALLATION

- 1) Note "top" marking on hub (2 vertical dimples which indicate top), and position hub and hub cover onto shaft.
- Position steering wheel onto hub, carefully routing wire thru hole on right side of wheel, install washer and shaft nut loosely to hold assembly in position.
- Place horn button base w/ O-ring onto wheel and install using the (3) three mounting screws, placing the ground wire under one of the screws. (Photo C) Photo C



 Tighten shaft nut and mounting screws. CAUTION: Do not over tighten mounting screws; this will cause damage to the hub.

> TORQUE REQUIREMENTS Shaft nut: 25 / 30 ft. lbs. Mounting screws: 10 / 12 ft. lbs.

- 5) Connect wires to bottom of horn button and carefully push horn button onto base over O-ring until the horn button is flush with surface of wheel. (Photo D) Note: If necessary, slightly wet the O-ring to ease installation.
- CAUTION: Be careful not to pinch wires when installing horn button onto base.



Photo D

NOTE: <u>TO REMOVE HORN BUTTON</u>: Insert small, non-marring plastic blade, or screw driver between notch on bottom of horn button and wheel surface and carefully pry to release.