

INSTALLATION

GT3 Installation Hub - Models 10-7014, 20-7014

Parts List

Hub (1) Mounting screws (3) Ground wire (1)



FITMENT:

Autos Dodge

1970-87 All Models w / standard column

Chrysler (except Omni, Horizon, Rampage, Daytona, Plymouth Shelby, Charger, Shadow, Sundance)

Trucks

Dodge 1970-87 Chrysler

Dodge Plymouth 2wd standard column

Fullsize pick-ups, Dakota

Plymouth

1978-87 Vans with standard column including

Caravan and Voyager

Notice

Airbag equipped vehicles: GT Performance Products steering wheels and hubs are not designed for use on Airbag equipped vehicles. Due to Safety and Legal reasons, we do not recommend changing, altering or removing the airbag from any vehicle.

PRE-INSTALLATION INSTRUCTIONS

- A) Read all instructions completely prior to installation process!
- B) Align wheels on vehicle straight ahead and disconnect battery.
- C) Removal of Original or Custom Steering Wheel: Refer to shop manual for your vehicle or manufacturer of custom steering wheel. **NOTE:** A steering wheel or gear puller may be required.

- Note "top" marking on hub (2 vertical dimples which indicate top), and position hub onto shaft.
- Position steering wheel onto hub, carefully routing wire thru hole on right side of wheel, and install shaft nut loosely to hold assembly in position.
- Place horn button base w/ O-ring onto wheel and install using the (3) three mounting screws, placing the ground wire under one of the screws. (Photo C) Photo C



Tighten shaft nut and mounting screws. CAUTION: Do not over tighten mounting screws; this will cause damage to the hub.

TORQUE REQUIREMENTS Shaft nut: 25 / 30 ft. lbs. Mounting screws: 10 / 12 ft. lbs.

Connect wires to bottom of horn button and carefully push horn button onto base over O-ring until the horn button is flush with surface of wheel. (Photo D) Note: If necessary, slightly wet the O-ring to ease installation.

CAUTION: Be careful not to pinch wires when installing horn button onto base.

Photo D



Reconnect battery and test operation of horn and turn signal

NOTE: TO REMOVE HORN BUTTON: Insert small, non-marring plastic blade, or screw driver between notch on bottom of horn button and wheel surface and carefully pry to release.