





Load Slings

Manual


| Model Number | Capacity per pair |
|--------------|-------------------|
| HW93801 | 1 Ton |
| HW93802 | 2 Ton |



Made in the U.S.A.

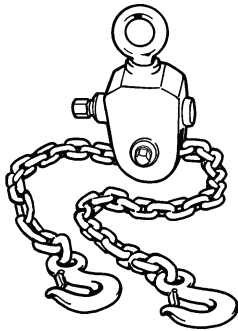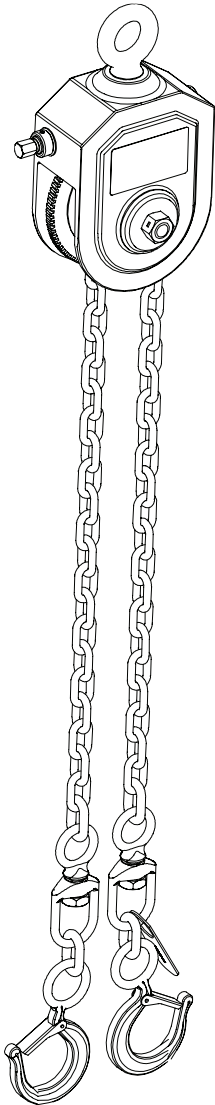

HW93801

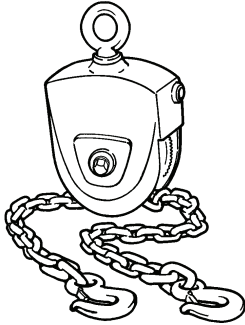

HW93802



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Read this manual and follow all the Safety Rules and Operating Instructions before using this product.

SAFETY AND GENERAL INFORMATION

Save these instructions. For your safety *read, understand, and follow* the information provided with and on this load sling before using. The owner and operator of this equipment shall have an understanding of the sling and safe operating procedures before attempting to use. The owner and operator shall be aware that use of this product may require special skills and knowledge. Instructions and safety information shall be conveyed in the operator's native language before use of this sling is authorized. If any doubt exists as to the safe and proper use of the load sling, remove from service immediately.

Inspect before each use. Do not use if broken, bent, cracked, or damaged parts (including labels) are noted. Any load sling that appears damaged in any way, operates abnormally or is missing parts, shall be removed from service immediately. If you suspect that the sling was subjected to a shock load (a load applied suddenly, unexpectedly), immediately discontinue use until the sling has been checked by a factory authorized service center (contact distributor or manufacturer for list of Authorized Service Centers). It is recommended that an annual inspection be done by qualified personnel. Labels and owner's manuals are available from manufacturer.

PRODUCT DESCRIPTION

Hein-Werner Load Slings are designed for use with a crane or hoist to support large, bulky loads. Horizontal tilt may be adjusted to compensate for off-center loads or for an alignment angle during assembly or disassembly.

SPECIFICATIONS


| Model | Capacity | Chain Size | Chain Length | Min. Height | Max. Height | Weight |
|---------|----------|------------|--------------|-------------|-------------|---------|
| HW93801 | 1 Ton | 5/16" | 65' | 12" | 19" | 31 lbs. |
| HW93802 | 2 Ton | 5/16" | 100' | 16-1/4" | 25-1/2" | 31 lbs. |

WARNING

- Study, understand, and follow all instructions before operating this device.
- Do not exceed rated capacity.
- Support load with BOTH ends of the chain. Do not attempt to lift load with only one end of chain.
- Do not use impact wrench to adjust chain.
- Do not exceed 90° angle between chains when lifting load.
- Do not adjust load beyond position where either chain is 60° from vertical.
- Do not use for overhead lifting.
- Move suspended loads in a slow, controlled manner.
- No alterations shall be made to this device. Use only chains approved by the manufacturer.
- Failure to heed these markings may result in personal injury and/or property damage.

ADVERTENCIA

- Leer, comprender, y seguir las instrucciones antes de utilizar el aparato.
- El manual de instrucciones y la información de seguridad deben estar comunicado en lengua del operador antes del uso.
- No seguir estas indicaciones puede causar daños personales o materiales.

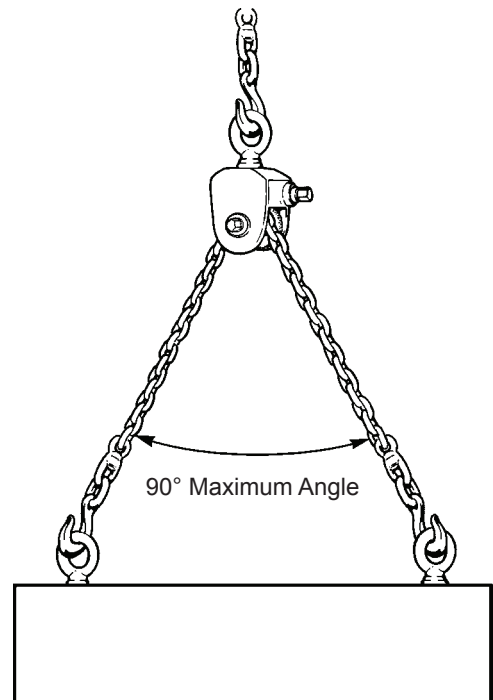

BEFORE USE

1. Verify that the product and the application are compatible, if in doubt call Hein-Werner Technical Service.
2. Inspect sling thoroughly before each use. Do not use if there are bent, broken or cracked components (including labels). Ensure that parts move freely.
3. Read the operator's manual completely and familiarize yourself thoroughly with the product and the hazards associated with its improper use **before** using this product.
4. Always refer to the vehicle owners or service manual for location of proper lift and support points.

OPERATION

1. Attach the sling's lifting eye to the hook on the lifting device.
2. Attach the hooks on the ends of the sling's chains to suitable locations on the object. The weight of the load must be balanced as it's lifted.
3. Use a speed handle and socket on the 5/8" hex drive to tilt or level the sling. Using a power impact wrench will damage the sling.

MAINTENANCE

The sling requires no maintenance under normal use. The worm and gear are permanently lubricated at the factory. However, if the sling has been disassembled for repair, the following procedures must be performed:

1. Refer to the parts list in this document. Use Lubriplate Grease No. 130-A (or equivalent) to coat the worm gear and the inner contact surfaces of the collars.
2. During reassembly, when replacing roll pins in the collars, align the slot of each pin with the centerline of the worm shaft.

Load Sling Replacement Parts

| Item | Part No. | | Description | Qty |
|------|----------|---------|-------------|-----|
| | HW93801 | HW93802 | | |
| 1 | 31627 | 40568 | Frame | 1 |
| 2 | 10973 | 10973 | Pin | 2 |
| 3 | 23524 | 31803 | Worm | 1 |
| 4 | 23728 | 23728 | Collar | 2 |
| 5 | 23525 | 40569 | Chain Block | 1 |

| Item | Part No. | | Description | Qty |
|------|----------|---------|---------------|-----|
| | HW93801 | HW93802 | | |
| 6 | 211184 | 211186 | Pin | 1 |
| 7 | 211185 | 211187 | Screw | 2 |
| 8 | 31609 | 31800 | Chain w/Hooks | 1 |
| 9 | 10258 | 13324 | Washer | 2 |
| 10 | | 214146 | Spacer Shim | 2 |
| 11 | | | Lifting Hook | 2 |

