

# Mounting Instructions LED Daytime Running Lights/parklight








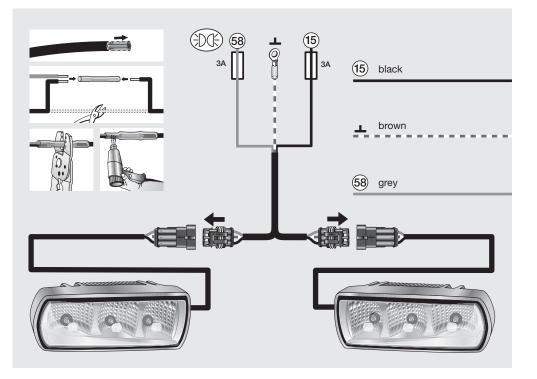

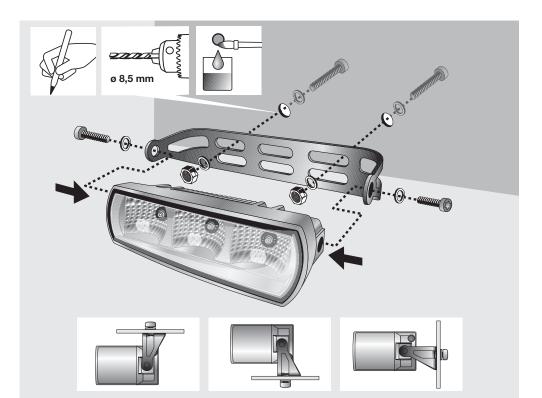

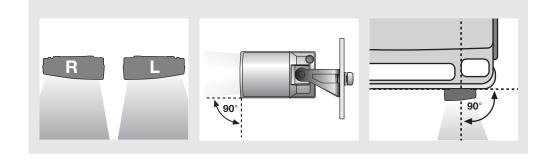

## Electrical connection Page 3

Lay and connect the cables in accordance with the connection diagram.

According to the connection diagram, the daytime running lights are switched on automatically with the ignition.

#### Caution!

Daytime running lights

- are not a substitute for low beam at dawn/dusk or during darkness.
- they shine only when the vehicle lighting is switched off and the ignition is switched on.
- they switch off **automatically** when switching on the vehicle lighting.


- are approved in accordance with ECE R87.
- may be fitted in accordance with EC Directive EC R97/28 and ECE R48.

We recommend that the installation instructions are carried along with the vehicle documentation.

#### Installation Page 4

Determine the installation position and mark the fastening points.

Pre-drill using a 3 mm drill bit and drill out to 8,5 mm.
Seal drilled metal parts with rust protection agent.

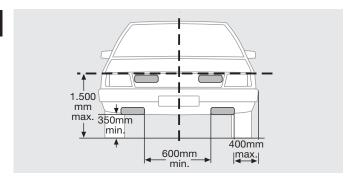

### Function LED Daytime running light

| Input, daytime running light | Input, position light | Function of the light |        |
|------------------------------|-----------------------|-----------------------|--------|
| 0 V                          | 0 V                   | Light                 | off    |
| 0 V                          | Supply voltage        | Light                 | off    |
| Supply voltage               | 0 V                   | Daytime running light | active |
| Supply voltage               | Supply voltage        | Daytime running light | off    |

| Supply voltage                               | Input, daytime running light                          |
|--|---|
| 12 V   | < 360 mA, < 5 W                                       |
| 24 V   | < 360 mA, < 11 W                                      |
| Operating temperature range -40 °C to +50 °C | Protective class IP 6K 9K (splashproof and dustproof) |