


HELLWIG INSTALLATION INSTRUCTIONS

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

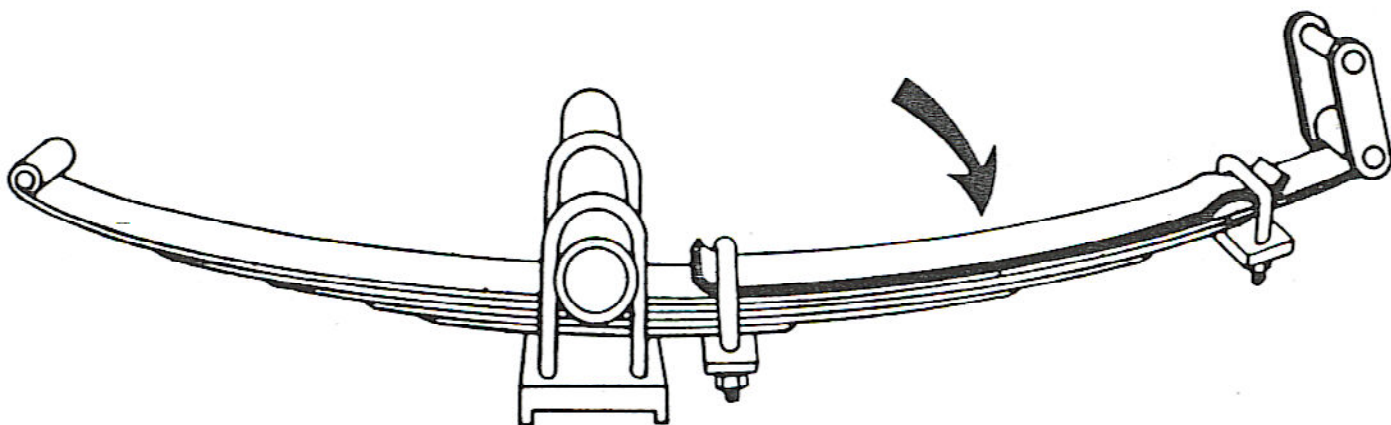

TORQUE RATINGS

5/16 Inch 20 ft. lbs
3/8 Inch 35 ft. lbs

7/16 Inch 45 ft. lbs
1/2 Inch 75 ft. lbs

9/16 Inch 90 ft. lbs
5/8 Inch 120 ft. lbs.

SAFETY: BEFORE BEGINNING YOUR INSTALLATION, BE SURE TO SET THE PARKING BRAKE & CHOCK THE WHEELS.

NOTICE: Do Not Attempt To Install This Unit On Any Vehicle With Composite (Plastic) Leaf Springs.

1. Jack up vehicle by frame until the wheels are ready to leave the floor. Lay helper leaves on rear of spring.
2. Install U-bolt, crossbar, nuts and washers over leaf nearest axle. Install other U-bolt, crossbar, nuts and washers over leaf nearest rear sprig hanger.
3. Tighten U-bolts nearest axle completely. **Be sure to use double nuts on these U-bolts.**
4. Lower vehicle and adjust for height and load. Use double nuts where provided.
5. Double-check your installation. Bounce the vehicle and check for clearance on all chassis components.
6. Recheck your installation after one week and every thirty (30) days thereafter.

IMPORTANT NOTE: Hellwig Helper Springs are designed to increase the "Level Load" carrying capacity of your vehicle. Never load the vehicle this unit is installed on beyond the manufacturer's maximum gross vehicle weight rating.