



## Tensioner Cover 97-158 (Black) 97-157 (Polished)

Works ONLY with Gates 38163 tensioner.

Cover is to be installed after belt has been installed and fully tensioned.

### Assembly:

 

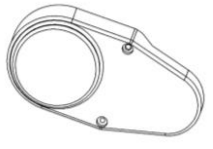
**Step one:** Turn threaded retainer as shown and insert behind tensioner arm.

**Step two:** Rotate retainer clockwise until square key locates into tensioner opening.

**Step three:** While holding the retainer, position the cover and start the lower M3 screw. Follow by installing the upper M3 screw.

**Step four:** Torque each screw to 9 in-lbs while centering the top screw head in the opening.

### Parts List:

PICTURE	DESCRIPTION
	Socket Cap Screw, M3 x 0.5 x 20
	Retainer Plate
	Tensioner Cover

