



Tensioner Cover 97-158 (Black) 97-157 (Polished)

Works ONLY with Gates 38163 tensioner.

Cover is to be installed after belt has been installed and fully tensioned.

Assembly:

 

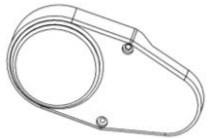
Step one: Turn threaded retainer as shown and insert behind tensioner arm.

Step two: Rotate retainer clockwise until square key locates into tensioner opening.

Step three: While holding the retainer, position the cover and start the lower M3 screw. Follow by installing the upper M3 screw.

Step four: Torque each screw to 9 in-lbs while centering the top screw head in the opening.

Parts List:

| PICTURE | DESCRIPTION |
|---|------------------------------------|
|  | Socket Cap Screw, M3 x 0.5 x 20 |
|  | Retainer Plate |
|  | Tensioner Cover |

