



1. Locate vehicle taillight [wiring harness](#) (A). This harness will have the same connector end as the Wiring Kit.
2. Remove protective cap from the vehicle taillight wiring harness. Connectors will disconnect by pressing or lifting on a locking tab and pulling apart.
3. Apply a small amount of grease to all electrical connections to help prevent corrosion.
4. Plug Wiring Kit (B) into mating vehicle plug. Be sure the connectors are fully inserted with locking tabs in place.
5. Plug completed wire harness (C) into the trailer connector.
6. Test all functions with engine running to ensure proper operation.

TIPS:

- Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.
- A heavy duty flasher may be required to eliminate rapid flashing.
- Always unplug boat trailer connector before backing trailer into the water.