- Install mounting plate on tailshoft. Three of the mounting bases
  on your transmission extension housing will match three of the
  hales in the mounting plate. If more than one possibility of
  mounting positions exists, select the one that suits you. Fasten
  plate with the three spacers placed between the plate and the
  bases on each 5/16 holt.
- 2. Install shifter onto mounting plate. Lighten mounting bolts
- Assemble arms with their respective rods using steel bushings and spring clips. Thread rod-adjusting buttons onto rods to about the middle of the thread length.
- Install arm/rod/button assemblies on the transmission shafts beginning with the 1-2 linkage. Rotate the transmission shafts to locate Neutral (mid-position stop between extreme forward stop and extreme regrared stop)." Fosten arms with stock hardware.
- Reverse Arm Only Neutral position of arm is ALL THE WAY FORWARD.
- Insert steel bushings in the holes in the shifter levers. Adjust all levers to Neutral position (middle of travel). Insert Neutral alignment rod (Pt. 1725) through notches in frame and holes in levers.
- Adjust each rod adjusting button to permit an easy slip-in fit into the proper steel bushing. TRANSMISSION ARMS MUST REMAIN IN NEUTRAL POSITION WHILE ADJUSTING BUTTONS, Fosten buttons in levers with spring clim.
- Remove neutral alignment rod. Test shifter. Stick should move freely from side to side at Neutral between 1-2 and 3-4 shifting paths.) Push stick straight down and pull toward the operator to engage the Reverse lever. If shifter functions properly, proceed to paragraph 8.

If the stick CANNOT be moved freely between 1-2 to 3-4 or Reverse path, one or more of the rod adjusting buttons must be turned to make a correction. Move the stick forward to 3rd, then back to 4th, then to Neutral. Insert Neutral olignment rod. If rod CANNOT be inserted freely, the 3-4 rod adjusting button is incorrectly adjusted. Similar testing of 1-2 shift will prove alignment of 1-2 rod adjustment.

To check Reverse rod button adjustment, place stick at Neutral. Disconnect Reverse rod adjusting button from Reverse lever. Grosp rodand push toward front of car. (Reverse arm disengages Reverse gear when at forward end of travel.) Install Neutral alignment rod. Adjust rod adjusting button for easy slip-in fit in bushing. Reassemble button in lever and fasten with spring click.

8. Adjust shifter stop bolts. Back both bolts out of shifter frame until only a few threads remain engaged. Push stick firmly into 3rd gear and hold. Screw 3rd gear stop bolt in until contact is felt. Back bolt out one turn and tighten lock nut. Pull stick firmly back into 4th gear, screw 4th gear stop bolt in until contact is made, then back stop bolt out one turn and tighten lock-nut.

#### BACKDRIVE CONNECTION

Connect the stock backdrive linkage to stud on Hurst Reverse arm. Fasten with stock nut. Test operation of SAFETY STEERING COL. UMN LOCK Move shifter stick to Reverse and remove ignition key. Steering column should lock in Reverse only. If backdrive linkage as adjust backdrive linkage as necessary to correct and repeat testing, adjust backdrive linkage as necessary to correct and repeat testing.



## **IMPORTANT WARNING**


SAFETY STEERING COLUMN LOCK


When this shifter is installed in a car that has a steering column lock, the operation of locking mechanism MUST be maintained. Install the reverse arm and connect the original factory linkage as directed by this instruction sheet.

# **ATTENTION**

Due to variations in auto-manufacturing tolerances, the transmission rods supplied with this kit may require slight bending to clear obstructions, etc. Protect the threads while bending.

BEND RODS COLD! - DO NOT APPLY HEAT!

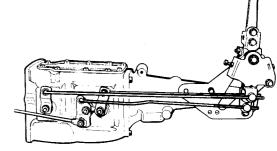

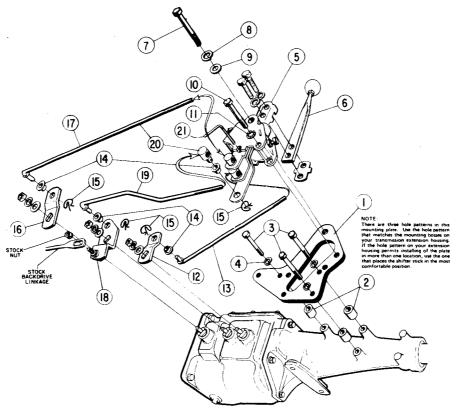

### **CONTENTS OF KIT**

1.	MOUNTING PLATE	Pt. 195 8382	
2.	SPACER	Pt. 228 0023	(3)
3.	5/16 18 x 2 1/2 HEX HEAD CAP SCREW	Pt. 215 8376	(3)
4.	5/16" SPLIT LOCKWASHER	Pt. 267 3467	(3)
5.	SHIFTER ASSEMBLY	Pt. 391 7535	
6.	STICK	Pt. 238 7238	
7.	7/16-14 x 3 1/4 HEX HEAD CAP SCREW	Pt. 215 5649	
8.	7/16" SPLIT LOCKWASHER	Pt. 267 3469	
9.	7/16" FLATWASHER	Pt. 267 3475	
10.	3/8 16 x 3 HEX HEAD CAP SCREW	Pt. 215 3450	
11.	3/8" INTERNAL TOOTH LOCKWASHER	Pt. 267 3533	
12.	ARM 1-2	Pt. 105 8383	
13.	ROD: 1-2	Pt. 213 8377	
14.	BUSHING	Pt. 118 3311	(6)
15.	SPRING CLIP	Pt. 127 2412	(6)
16.	ARM 34	Pt. 105 2141	
17.	ROD 3-4	Pt. 213 8378	
18.	ARM -REVERSE	Pt. 105 7647	
19.	ROD -REVERSE	Pt 213 8379	
20.	ROD ADJUSTING BUTTON	Pt. 119 3783	(3)
21.	NEUTRAL ALIGNMENT ROD	Pt. 148 1725	

## BAGGED HARDWARE - Pt 154 8374

#### NOTICE

STREET SUPER/SHIFTER will not fit into stock console equipped autos. Minor trimming may be necessary to fit floor opening. Hurst Super/Boot finishes installation with a professional appearance. Hurst Super/Boot not included —ask dealer for Pt. 114 7494.