



Spring Bar Retainer Kit # 31527 / 37114

Installation Instructions

Parts List			Tools Required
Part	Description	Qty.	
1	Spring Clip	2	Hammer
2	Drive Screw	2	1/8" Drift Punch
			Chisel

1. To remove the damaged spring bar retainer, use the chisel and hammer to remove the drive screw head.



2. Once the drive screw's head is removed; remove the retaining spring. And remove the remainder of the drive screw with the 1/8" drift punch and hammer.



3. Install the new retaining spring and drive screw. Be sure to insert the retaining pin into the top hole of the head. Insert new drive screw into bottom and gently tap into place with a hammer.

