



Installation Instructions

#33113 / #33114 Pintle Combo



Hitch Capacity

13,000 lbs Max. Trailer Weight when used with 2 5/16" Ball

10,000 lbs Max. Trailer Weight when used with 2" Ball

System Capacities

Be sure to double check the capacity stamped on top of the hitch ball which is installed on the pintle hitch. Use the trailer coupler capacity, or the capacity listed above, **whichever is lower**. If trailer coupler capacity is unknown, do not exceed the M.G.T.W. stamped on ball.

Towing Applications

Trailers and equipment designed for over-the-road towing within the stated capacities. This pintle hook/ball hitch is well suited for use in the utility and construction industries.

WARNING:
Maintain adequate vertical (tongue) load to properly control the trailer (generally 10%), but do not exceed the above rated capacities.

Mounting

This pintle hitch can only be used with the Husky® System. If you are not yet familiar with how your Husky® System works, it is recommended that you familiarize yourself with operating instructions prior to towing with this Pintle Hitch. Failure to do so can result in possible accidents and/or injuries.

Operating Instructions for the Husky® Ball Hitch

Before operating, inspect for proper operation, worn, damaged or missing parts and secure mounting.

*Correct as required before use. Be sure to fully inspect the vehicle's receiver hitch, the Husky® Platform and it's respective pins and clips. If you doubt the condition of any of the Husky®'s parts or accessories or your vehicle's hitch system – **do not** tow and contact your sales dealer for replacement parts.*

1. With the Husky® Platform already installed in your vehicle receiver hitch; line up the Pintle Hitch to the platform channel to the desired height and secure it using the (2) clevis pins which were included with the Husky® System.
2. Open the pintle latch by removing safety pin, pull upon lock while lifting latch.
3. Replace safety pin in hole to retain latch in open position.
4. Position ball coupler over the proper size ball and lock into place, following the instructions of the coupler manufacturer.

WARNING:

Other steps and inspections are also required. Consult D.O.T. regulations and American Trucking Association for complete coupling and uncoupling procedures.

WARNING:

Before installation or use, be sure to check that the nut of the pintle ball is torque set to 260 ft/lbs or more.

5-Year Limited Warranty

This Warranty applies solely to the Husky® Pintle Hitch Ball Accessory (#33113 and #33114).

The Warranty applies to products used for individual and private use. Commercial usage of the product limits the warranty to one year from date of purchase.

The manufacturer warrants the Pintle Hitch Ball to be free from defects in materials & workmanship to the original purchaser for the length of the warranty period listed above from the date of retail purchase.

What is covered by the warranty?

This warranty covers defects in materials & workmanship to the original purchaser for 5-years from the date of purchase. If the product is used for commercial use the warranty period is limited to 1-year from date of purchase.

The warranty does not cover:

- Service or labor charges associated with the removal or replacement or return of this product.
- Product finish (paint, chrome, etc.)
- Product neglect, abuse, misuse or products involved in accidents or acts of god.
- Improper use of this product (overloading or improper installation).
- Any alterations to this product.