



Release the buckle



Push the kayak up
with assist of the
arm. Turn Kayak



Fold the assist arm