

SU Fit Hooks K148

Installation Instructions

Before using the Mounting hooks, carefully read the installation instructions as well as the installation instructions for basic carrier systems, and follow all usage instructions. After reading the installation instructions, keep it in a safe place along with the installation instructions for basic carrier systems. If you are to give the mounting hooks to a third person, provide the installation instructions to ensure safe installation and usage.

WARNING

Install hooks correctly at specified positions according to the installation instructions herein and the installation instructions for the applicable carrier system. Installation positions of hooks depend on the vehicle type. If hooks are not installed at specified positions, the carrier may fall and cause accidents.

If inappropriate hooks are used, the carrier / attachment may fall and cause accidents. Before driving the vehicle, rock the stays and bars in all directions to ensure that there is no looseness. Retighten any loose knobs or bolts.


Do not use these hooks for attachments of non-specified types. The carrier may fall and cause accidents.

Observe the specified loading conditions.

Failure to observe the loading condition may cause the carrier to break or loosen and fall, resulting in accidents.

For INNO dedicated ski & snowboard carriers, read the carrier installation instructions to determine proper mounting locations.

The SU Mounting hooks include the parts listed below. Verify that all of these parts are included in the carrier system you have purchased.

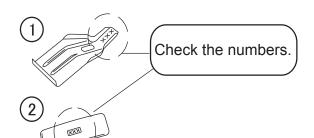

No.	Part	# of Part	Qty
1	Hook	111	4
2	Base	401	4

MOTE

The specifications or external appearance of this product or any of the genuine spare parts may be changed for improvement without prior notification.


K148 Mounting Method by Vehicle Type



Manufacturer	Model	Туре	Year	Maximum loading capacity	Bikes
MERCEDES BENZ	E-CLASS	4 door sedan	1986 -1995	140 lbs (64 kg) (Load + Base rack + Attachments)	3

Maximum loading capacity is 64 kg (140 lbs) for this vehicle type.

Stay interior dimensions Front 40.9 inch/1040 mm Rear 40.7 inch/1036 mm

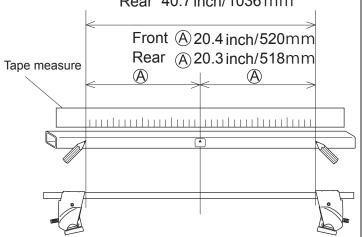


Install Bases

	Base number
Front base	401
Rear base	401

Mounting positions

Position the stays so that bolts align at specified mounting points.

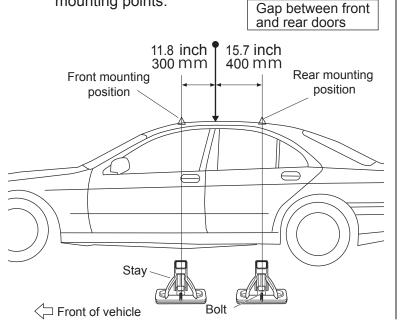


Loosely attach hooks


	Hook number
Front hook	111
Rear hook	111

■ Hook / base installation position

Front

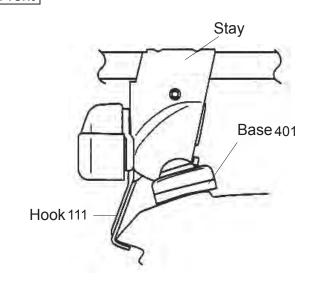

Rear

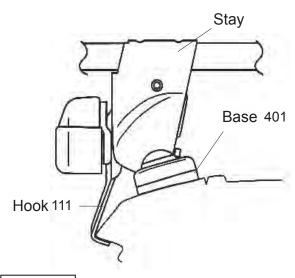

Note

 When knob is tightened, base moves slightly outward to the position illustrated above.


K148 Mounting Method by Vehicle Type



Manufacturer	Model	Туре	Year	Maximum loading capacity	Bikes
MERCEDES BENZ	E-CLASS	4 door sedan	1996 -2002	165 lbs (75 kg) (Load + Base rack + Attachments)	4

Maximum loading capacity is 75 kg (165 lbs) for this vehicle type.

Stay interior dimensions Front 40.6 inch/1032 mm Rear 41.3 inch/1050 mm

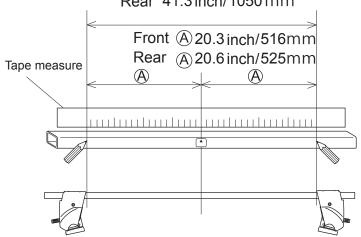


Install Bases

	Base number
Front base	401
Rear base	401

Mounting positions

Position the stays so that bolts align at specified mounting points.
Gap between front

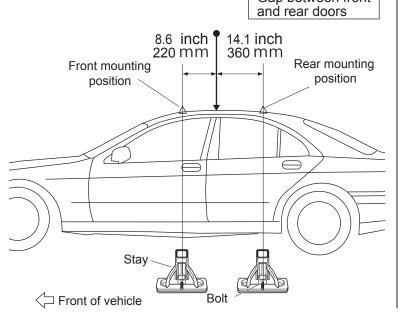


(Loosely attach hooks)


	Hook number
Front hook	111
Rear hook	111

■ Hook / base installation position

Front

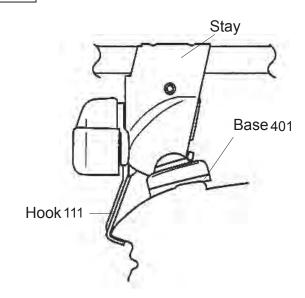

Rear

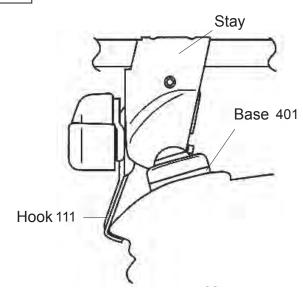

Note

 When knob is tightened, base moves slightly outward to the position illustrated above.


K148 Mounting Method by Vehicle Type



Manufacturer	Model	Туре	Year	Maximum loading capacity	Bikes
FORD	FESTIVA	3 door	1987 -1993	120 lbs (55 kg) (Load + Base rack + Attachments)	2

Maximum loading capacity is 55 kg (120 lbs) for this vehicle type.

Stay interior dimensions Front 33.9 inch/ 862 mm Rear 33.0 inch/ 840 mm

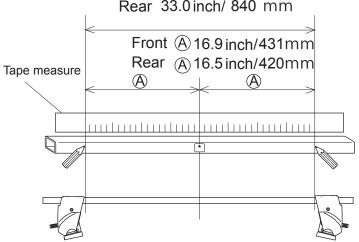


Install Bases

	Base number
Front base	401
Rear base	401

Mounting positions

 Position the stays so that bolts align at specified mounting points.

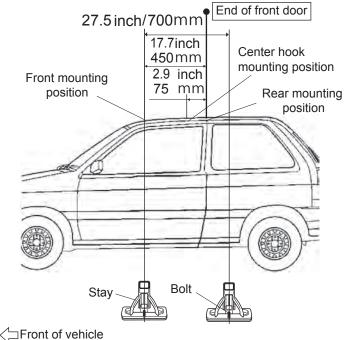



(Loosely attach hooks)

	Hook number
Front hook	111
Center hook	111

■ Hook / base installation position

Front

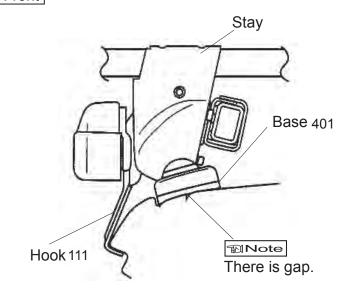

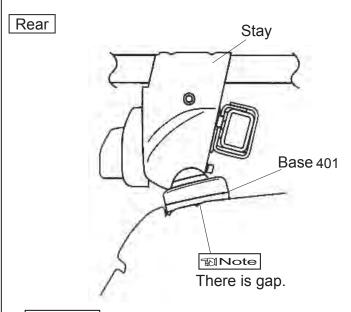

™ Note

- Hook installation position for center hook is the same as front carrier.
- When knob is tightened, base moves slightly outward to the position illustrated above.

90092081484A-EN