

GM

Navigation Radios

Made for



iPod



iPhone



iPad

****READ THIS FIRST****

Changing Sources (iPod USB, iPod BT, USB, BT, or AUX)

- Press the BAND button a few times until "XM" is displayed
- Turn the Tune Knob until the source you want is displayed.
- Press Preset 6 to select the displayed source.

(Actual radio appearance may differ from representation.)

 
Press and release to rewind current track. Press again to resume play.

Press and release to fast forward current track. Press again to resume play.

Press to enter into the browse menu. Press to move forward one step while in the browse menu.

Press to move back one step while in the browse menu.

Toggles random modes.

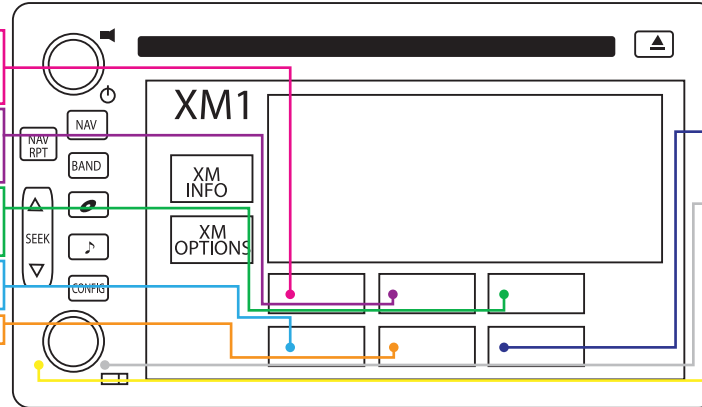

Toggles repeat modes.

Turn clockwise to advance to the next track. Turn clockwise to cycle forward through songs or lists while in browse menu.

Turn counter-clockwise to return to the previous track. Turn counter-clockwise to cycle backwards through songs or lists while in browse menu.

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

1) Press Preset 3 to enter the browse menu.

The radio will display "PL: List"

2) Turn the tune knob clockwise until the radio displays "AR:Artist"
Press Preset 3 to select

The radio will display "AR:All". All browsing menus are displayed in alphabetical order.

3) Turn the tune knob clockwise until the radio displays "AR:Francis Scott Key"
Press Preset 3 to select

The radio will display "AL:All". All browsing menus are displayed in alphabetical order.

4) Turn the tune knob clockwise until the radio displays "AL:Patriot Hits Vol.1"
Press Preset 3 to select

The radio will display "TR:All". All browsing menus are displayed in alphabetical order.

5) Turn the tune knob clockwise until the radio displays "TR:Star-Spangled Banner"
Press Preset 3 to select

The song will begin to play and the display will show the song title.




****READ THIS FIRST****

 Changing Sources (iPod USB, iPod BT, USB, BT, or AUX)

- Press the BAND button a few times until "XM" is displayed
- Turn the Tune Knob until the source you want is displayed.
- Press Preset 6 to select the displayed source.

(Actual radio appearance may differ from representation.)


- Press to answer/end a call.
- Press to reject an incoming call. Press to play/pause streaming audio.
- Press to enter into the settings menu. Press to move forward one step while in the settings menu.
- Press to move back one step while in the settings menu.

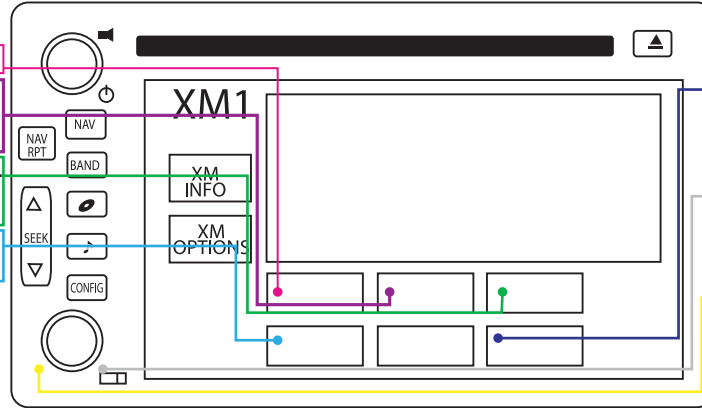

- Press to initiate the voice dial feature of your phone.
- Turn clockwise to advance to the next track while streaming audio. Turn clockwise to cycle forward through settings menu.
- Turn counter-clockwise to return to the previous track while streaming audio. Turn counter-clockwise to cycle backwards through settings menu.

Settings Menu Example:

 Adjusting the microphone volume

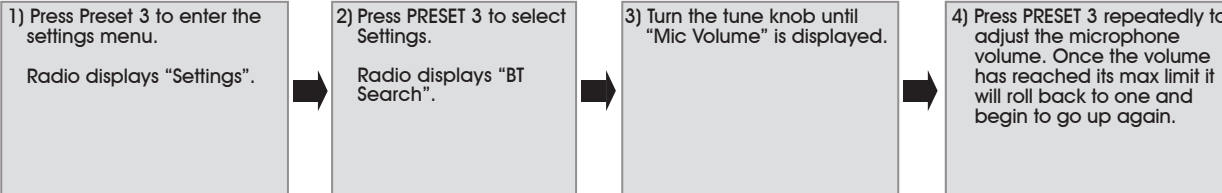

GM

Navigation Radios




Android Devices, Thumb Drives

****READ THIS FIRST****

 Changing Sources (iPod USB, iPod BT, USB, BT, or AUX)

- Press the BAND button a few times until "XM" is displayed
- Turn the Tune Knob until the source you want is displayed.
- Press Preset 6 to select the displayed source.

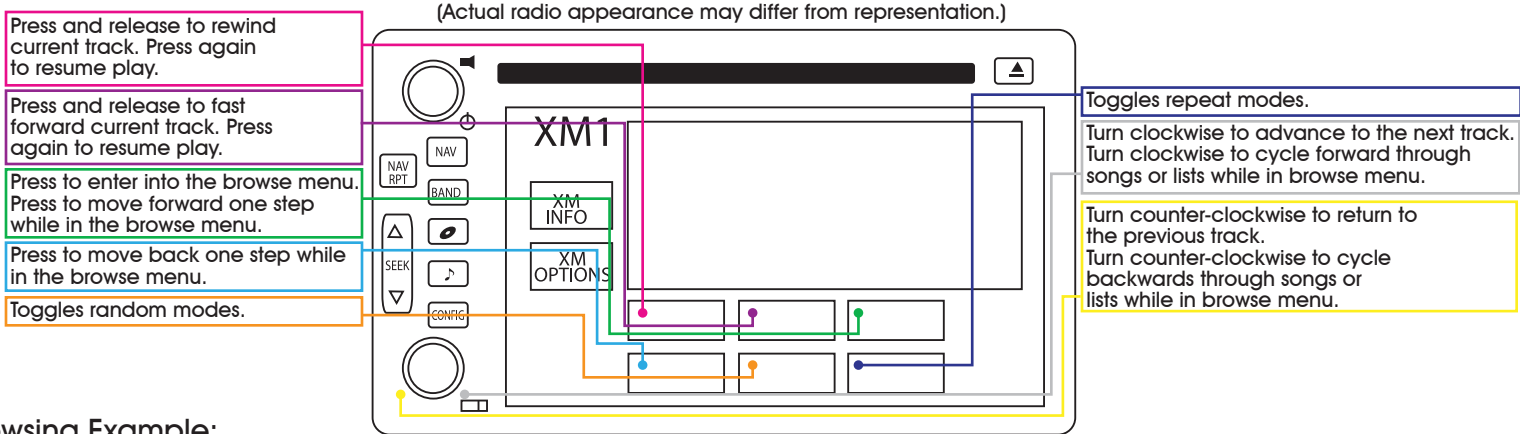

Browsing Example:

To select the song "Star-Spangled Banner" through the Folder category

- 1) Press Preset 3 to enter the browse menu.
"FOLDER" will appear on your display.
- 2) Press PRESET 3 to select browse by Folder.
The list of Folders on your device will be displayed one at a time in alphabetical order.
- 3) Turn the tune knob clockwise until the radio displays "FO:Francis Scott Key"
Press Preset 3 to select
The Files from the selected Folder will be displayed one at a time in alphabetical order.
- 4) Turn the tune knob clockwise until the radio displays "Patriot Hits Vol.1"
Press Preset 3 to select
The song will begin to play and the display will show the song title.

Made for



iPod



iPhone



iPad

****READ THIS FIRST****

Changing Sources (iPod USB, iPod BT, USB, BT, or AUX)

- Press the BAND button a few times until "XM" is displayed
- Turn the Tune Knob until the source you want is displayed.
- Press Preset 6 to select the displayed source.

(Actual radio appearance may differ from representation.)

 
Press and release to rewind current track. Press again to resume play.

Press and release to fast forward current track. Press again to resume play.

Press to enter into the browse menu. Press to move forward one step while in the browse menu.

Press to move back one step while in the browse menu. Press at the beginning of the browse menu to exit the menu.

Toggles random modes.

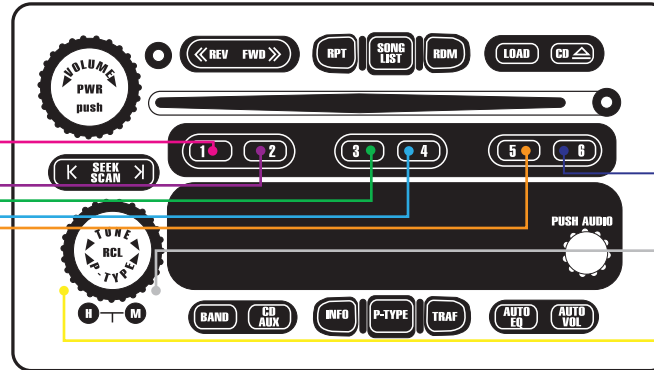

Toggles repeat modes.

Turn clockwise to advance to the next track. Turn clockwise to cycle forward through songs or lists while in browse menu.

Turn counter-clockwise to return to the previous track. Turn counter-clockwise to cycle backwards through songs or lists while in browse menu.

Browsing Example:

To select the song "Star-Spangled Banner" through the Artist category

- 1) Press Preset 3 to enter the browse menu.

The radio will display "PL: List"

- 2) Turn the tune knob clockwise or press the tune up button until the radio displays "AR:Artist"

Press Preset #3 to select

The radio will display "AR:All". All browsing menus are displayed in alphabetical order.

- 3) Turn the tune knob clockwise or press the tune up button until the radio displays "AL:Francis Scott Key"

Press Preset #3 to select

The radio will display "AL:All". All browsing menus are displayed in alphabetical order.

- 4) Turn the tune knob clockwise or press the tune up button until the radio displays "AL:Patriot Hits Vol.1"

Press Preset #3 to select

The radio will display "TR:All". All browsing menus are displayed in alphabetical order.

- 5) Turn the tune knob clockwise or press the tune up button until the radio displays "TR:Star-Spangled Banner"

Press Preset #3 to select


The song will begin to play and the display will show the song title.

****READ THIS FIRST****

 Changing Sources (iPod USB, iPod BT, USB, BT, or AUX)


- Press the BAND button a few times until "XM" is displayed
- Turn the Tune Knob until the source you want is displayed.
- Press Preset 6 to select the displayed source.

(Actual radio appearance may differ from representation.)

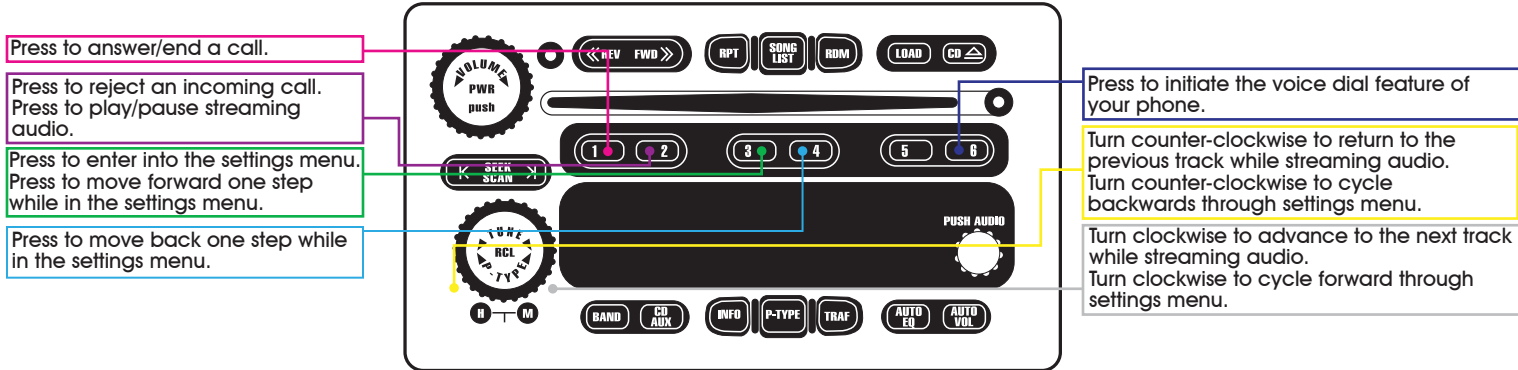

Settings Menu Example:

 Adjusting the microphone volume

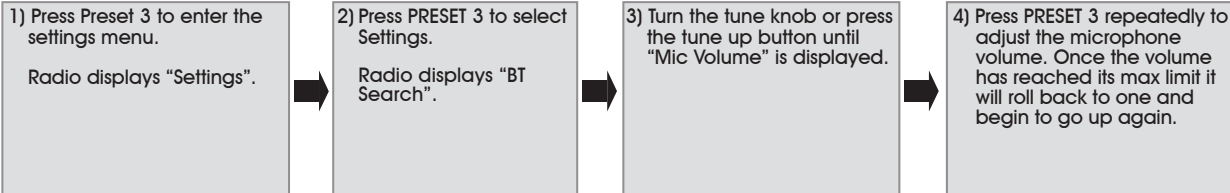

GM

Non-Navigation Radios



Android Devices, Thumb Drives

****READ THIS FIRST****

Changing Sources (iPod USB, iPod BT, USB, BT, or AUX)

- Press the BAND button a few times until "XM" is displayed
- Turn the Tune Knob until the source you want is displayed.
- Press Preset 6 to select the displayed source.

(Actual radio appearance may differ from representation.)

 
Press and release to rewind current track. Press again to resume play.

Press and release to fast forward current track. Press again to resume play.

Press to enter into the browse menu. Press to move forward one step while in the browse menu.

Press to move back one step while in the browse menu. Press at the beginning of the browse menu to exit the menu.

Toggles random modes.

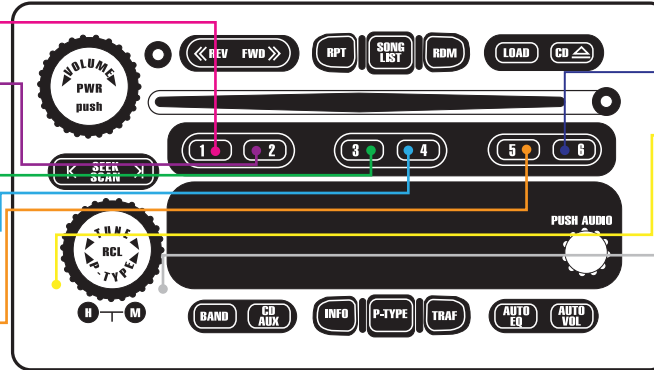

Toggles repeat modes.

Turn counter-clockwise to return to the previous track. Turn counter-clockwise to cycle backwards through songs or lists while in browse menu.

Turn clockwise to advance to the next track. Turn clockwise to cycle forward through songs or lists while in browse menu.

Browsing Example:

To select the song "Star-Spangled Banner" through the Folder category

1) Press Preset 3 to enter the browse menu.

"FOLDER" will appear on your display.

2) Press PRESET 3 to select browse by Folder.

The list of Folders on your device will be displayed one at a time in alphabetical order.

3) Turn the tune knob clockwise or press the tune up button until the radio displays "FO:Francis Scott Key"

Press Preset 3 to select

The Files from the selected Folder will be displayed one at a time in alphabetical order.

4) Turn the tune knob clockwise or press the tune up button until the radio displays "Patriot Hits Vol.1"

Press Preset 3 to select

The song will begin to play and the display will show the song title.

Removing the Apostrophe from the iPhone name to improve Bluetooth operation on devices running iOS 7.0 and higher.

This can be quickly done directly from the iPhone itself following these steps.

 
- 1) Touch "Settings" icon on iPhone home screen




- 2) Touch "General"




- 3) Touch "About"



 
- 4) Touch "Name"



 - 5) Select the Apostrophe (') and remove it

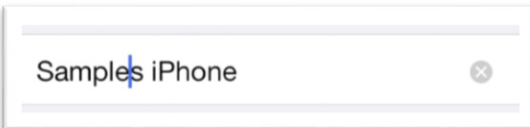

 - 6) Touch "About" when done



- 7) Phone name without (') should work properly, after establishing a new Bluetooth connection.

