


## GM Navigation Radios

**\*\*READ THIS FIRST\*\***

### Changing Sources (Factory Satellite and Bluetooth)

- Press the XM icon.
- Turn the tune knob until the source you want is displayed.
- Press the ►SEEK button to select the displayed source.

(Actual radio appearance may differ from representation.)

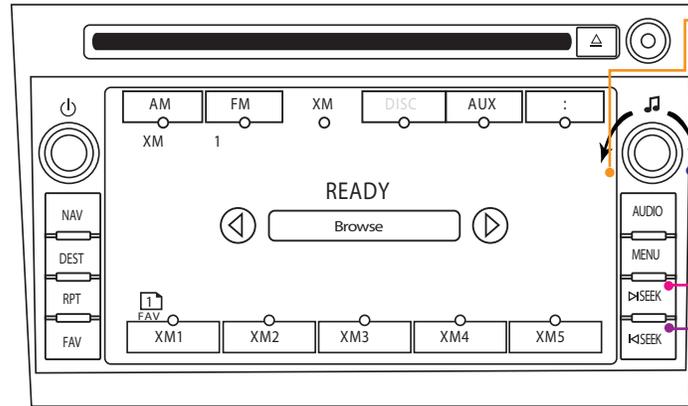

Turn counter-clockwise to return to the previous track while streaming audio. Turn counter-clockwise to cycle backwards through settings menu.

Turn clockwise to advance to the next track while streaming audio. Turn clockwise to cycle forward through settings menu.

Press to answer a call. Press to play/pause streaming audio. Press to move forward one step while in the settings menu.

Press to end a call. Press to reject an incoming call. Press to initiate Voice Recognition. Press to move back one step while in the settings menu.

### Settings Menu Example:

Adjusting the overall speaker volume

1) Exit and re-enter the XM source by pressing the BAND button. While in the mode select menu turn the tune dial until "Settings" is displayed. Press the ►SEEK button to select settings.

Radio displays "BT Config"



2) Press the ►SEEK button to select BT Config.

Radio displays "Pair New"



3) Turn the TUNE KNOB until "Spkr Vol" is displayed.

Radio displays "Spkr Vol##"



4) Press the ►SEEK button to select Spkr Vol.

Radio displays "Spkr Vol##"



5) Turn the TUNE KNOB until the desired level is reached.

The level can be adjusted from 1 to 9 with 1 being the lowest and 9 being the highest

## GM Non-Navigation Radios


**\*\*READ THIS FIRST\*\***

### Changing Sources (Factory SAT and Bluetooth)

- Press the Band button until "XM" is displayed.
- Turn the tune knob until the source you want is displayed.
- Press the ►SEEK button to select the displayed source.

Press to answer a call.  
Press to play/pause streaming audio.  
Press to move forward one step while in the settings menu.

Press to end a call.  
Press to reject an incoming call.  
Press to initiate Voice Recognition.  
Press to move back one step while in the settings menu.

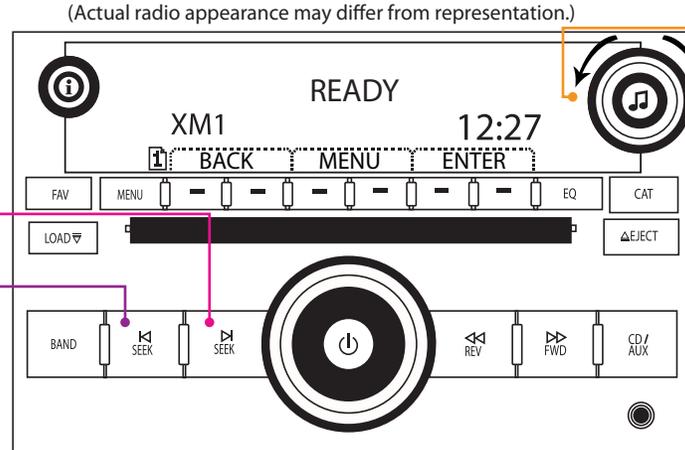

Turn counter-clockwise to return to the previous track while streaming audio.  
Turn counter-clockwise to cycle backwards through settings menu.

Turn clockwise to advance to the next track while streaming audio.  
Turn clockwise to cycle forward through settings menu.

### Settings Menu Example:

Adjusting the overall speaker volume

1) Exit and re-enter the XM source by pressing the BAND button. While in the mode select menu turn the tune dial until "Settings" is displayed. Press the ►SEEK button to select settings.

Radio displays "BT Config"

2) Press the ►SEEK button to select BT Config.  
Radio displays "Pair New"

3) Turn the TUNE KNOB until "Spkr Vol" is displayed.

4) Press the ►SEEK button to select Spkr Vol.  
Radio displays "Spkr Vol##"

5) Turn the TUNE KNOB until the desired level is reached.

The level can be adjusted from 1 to 9 with 1 being the lowest and 9 being the highest