

**Expand Your Factory Radio**

add

**iPod®**



**NISSAN/INFINITI**  
**370z • Cube**  
**Pathfinder • Armada**  
**Sentra • Maxima**  
**Altima • Rouge**  
**Versa • G35**  
**M35/45 • QX56**  
**Murano**

**Owner's Manual**  
**Media Gateway**  
**PXAMG**

**PGHNI2**



# Table of Contents

	<b>Pages</b>
<b>1. Introduction</b>	2
<b>2. Precautions</b>	2
<b>3. Compatibility Notes</b>	2
<b>4. Dipswitch Settings</b>	3
<b>5. Installation</b>	4
<b>Nissan Vehicles</b>	
<b>6. 370z/Cube/Juke Operation</b>	5-8
<b>7. Pathfinder/Armada Operation</b>	8-11
<b>8. Sentra/Maxima Operation</b>	11-15
<b>9. 2009-2010 Maxima Operation</b>	15-18
<b>10. Murano Operation</b>	18-21
<b>11. Altima/Rogue Operation</b>	21-25
<b>12. Versa Operation</b>	25-28
<b>Infiniti Vehicles</b>	
<b>13. G35/G37 Operation</b>	28-31
<b>14. M35/45 Operation</b>	31-34
<b>15. QX56 Operation</b>	35-37
<b>16. Troubleshooting</b>	38-39

# Media Gateway & Optional Add-ons

**\*The Media Gateway will only support 2 inputs.**



**Factory Radio  
Not Included**

**iPod  
Not Included**



**Media Gateway Harness  
Part #: PGHNI2**



**Media Gateway  
Part #: PXAMG**



**11Ft. iPod Cable**



 
**3Ft. HD Radio Cable  
(sold with HDRT)**

**HD Radio®**



**HD Radio™ Tuner  
(sold separately)  
Part #: HDRT**

**Antenna Adapter  
(sold separately)  
Part #: BAA36**



# 1. Introduction

Thank you for purchasing the iSimple® Media Gateway. The Media Gateway is designed to provide endless hours of listening pleasure from your factory radio. To ensure that your iPod performs correctly with your radio, we recommend that you read this entire manual before attempting installation of the Media Gateway.

The Media Gateway allows connectivity for iPod, Sirius Satellite Radio tuner (SCC1 sold separately) and the HD Radio tuner (HDRT sold separately), enabling full control of these devices from the factory installed radio. It also retains original system features such as satellite radio and rear seat entertainment (if equipped).

## 2. Precautions

### **UPDATING iPod FIRMWARE**

For proper operation of the Media Gateway, your iPod must be updated with the most recent version of firmware from Apple.

### **PREVENTING DAMAGE TO YOUR VEHICLE OR IPOD.**

Some installations require you to make wiring connections. To eliminate the risk of an electrical short, we recommend disconnecting the vehicle's battery prior to installation. If you do not feel comfortable making these connections, we suggest you seek professional installation. We recommend that the iPod be disconnected from the interface when the vehicle is not in use.

### **PROPER MOUNTING LOCATION**

Securely install the interface in a location free from: heat, humidity, moving parts, sharp metal edges or direct sunlight. We recommend securing the interface to a suitable location using: double sided tape, Velcro™ or zip-ties.

## 3. Compatibility Notes

Your vehicle **MUST** either be equipped with, or have the ability to support Satellite Radio.

## 4. Dipswitch Settings

2007-2011 Armada  
2007-2008 G35/G37  
2007-2011 Maxima Non-Navigation  
2009-2011 Murano  
2007-2011 Pathfinder  
2007-2011 Sentra  
2007 QX56

Fig. A



2009-2011 370z  
2011 Juke  
2007-2011 Altima  
2009-2010 Cube  
2007-2011 Rouge  
2007-2011 Versa

Fig. B



2007-2008 M35/45

Fig. B



### Dipswitch Overview

This is a quick description of the dipswitch functions for the PXAMG in Nissan applications. If you are experiencing Seek or Tune control issues, or would like to change the operation of the “SEEK” and “TUNE” buttons, this section may be helpful to you.

### Dipswitch 3

Reverses “SEEK” and “TUNE” button configurations; this is good for allowing the end user to configure the “SEEK” and “TUNE” buttons to their personal preference. For example: In the Armada/Pathfinder, the default setting for the HD Radio controls causes the Seek and Tune functions to be reversed. This is so the iPod controls can utilize the tuning knob to scroll through the browse menu. If you have purchased this kit mainly for HD Radio and not iPod, turning dipswitch 3 on will reverse the “SEEK” and “TUNE” commands to their respective buttons. However when this is done, turning the Tuning Knob on the radio clockwise will no longer do track forward or scroll through the browse menu in iPod mode, those commands have now been assigned to the “SEEK>>” button.

1. Disconnect Media Gateway from vehicle harness.
2. Turn on dipswitch #3 by moving it down.
3. Connect Media Gateway to vehicle harness.

# 5. Installation

**1. When making electrical connections it is always recommended that the vehicle's battery be disconnected from the electrical system before performing the installation.**

2. Carefully remove the trim panels covering the bolts that secure the radio into the dash cavity. Remove these bolts, and carefully pull the radio from the dash of the vehicle. This will provide access to the factory radio connectors where you will connect the Media Gateway harness.

3. Disconnect the factory 20-Pin and 12-Pin harnesses from the back of the radio. Disconnect the antenna from the radio.

4. Connect the 8-Pin iPod docking cable into the first port on the Media Gateway (farthest away from dipswitches). Carefully run the 11 foot iPod cable behind the dash to the location where the iPod will be mounted or stored (for example the glove box or center console). This location will vary based on the vehicle, and the customer's preference. When running this cable through the dash be sure to secure it away from moving parts or sharp metal edges that may damage the cable.

5. If connecting the HD Radio Tuner (HDRT sold separately), make the following connections before connecting the PXAMG to the vehicle. Plug the 3 foot HD Radio Cable (8-Pin mini-din to 8-Pin mini-din) into the second port (closest to the dipswitches) on the Media Gateway. Connect the other end of this cable into the HD Radio tuner. Connect the factory antenna cable into the antenna connection on the HD Radio tuner (HDRT) using a Best Kits BAA36 antenna adaptor (or equivalent) if needed to make this connection.

6. If connecting the Satellite Radio tuner (SCC1 sold separately), make the following connections **before connecting the PXAMG to the vehicle**. Plug the black end of the 3 foot PXAMGSR (8-Pin mini-din to 8-Pin mini-din; sold separately) into the second port (closest to the dipswitches) on the Media Gateway. If you are installing the Satellite Radio Tuner with the HDRT, connect the PXAMGSR cable to the port farthest from the dipswitches. Connect the gray end of this cable into the Satellite Radio tuner.

7. Plug in the male connectors on the PGHNI2 harness into the 20-pin and 12-pin ports on the back of the radio. Next, connect the factory 20-pin and 12-pin harnesses into the female connectors on the PGHNI2 harness. Be sure to make a firm connection but do not force it. Plug the Black micro-fit 24-pin connector on the PGHNI2 harness into the PXAMG Media Gateway box.

8. To complete the installation secure the Media Gateway (PXAMG) and HD Radio tuner (HDRT) into the cavity in the dash behind the radio. Be sure that the cables and interface modules are not near moving parts or sharp metal edges as they may damage the cables. To prevent rattling noises inside the dash use zip ties, tape or other fasteners to mount the interfaces securely.

9. With all connections made, reconnect the vehicle's battery, insert the key into the ignition, and turn the vehicle on. Check for proper operation of the Media Gateway and HD Radio tuner before reinstalling the factory dash panels.

10. Note: The first time you access the Media Gateway, your radio may display “DEV INIT” while the device is initializing. If this is displayed, please wait one minute then cycle the ignition off and on. Then access SAT mode again to begin normal gateway operation.

## **6. 370z/CUBE/Juke**

### **iPod Operation**

#### **Entering Mode Select Menu**

Press the “AM/FM” button and then the “AUX” button. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “IPOD” is displayed, press the “TUNE ▼” button to select it.

#### **Next Track**

Press the “SEEK ▲” button to advance to the next track.

#### **Previous Track**

Press the “SEEK ▼” button to return to the previous track.

#### **Random Mode**

Press the “SCAN” button while listening to the iPod to toggle through the random modes.

#### **Entering Browse Menu / Select**

Press the “TUNE ▼” button to enter the Browse menu or to make a selection while in the Browse menu

#### **Menu Navigation**

Press the “SEEK ▲” button to scroll through the options in the Browse menu.

#### **Steering Wheel Controls**

Press and hold “▲” to enter the Browse menu.

#### **Exit Browse menu**

Press the “SCAN” button or wait 10 seconds and the Browse menu will automatically exit.

#### **Changing Display**

Press the “DISP” button to toggle through the display modes (Track, Artist, etc).

## **Browse by Artist**

Press the “TUNE ▼” button to enter the Browse menu.

“PL:LIST” will appear on your display.

Press the “SEEK ▲” button until “AR:ARTIST” is displayed.

Press the “TUNE ▼” button to select Browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. “AR” will be displayed in front of the artist’s name to indicate that you are searching for an artist.

Press the “Seek ▲” button to cycle through the artists.

When the desired artist is displayed on the radio,

Press the “TUNE ▼” button to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order.

“AL” will be displayed in front of the name of the album to indicate you are searching for an album.

Press the “SEEK ▲” button to cycle through the albums.

Once the desired album is displayed,

Press the “TUNE ▼” button to select the desired album.

The first song in the album will be displayed. “TR” will be displayed in front of the song title to indicate that a “track” or song title is being displayed.

Press the “SEEK ▲” button to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically.

Once the radio displays the name of the desired song

Press the “TUNE ▼” button to select and play the desired song.

The display will automatically change to display and scroll the title of the chosen song.

# **HD Radio Operation**

## **Entering Mode Select Menu**

Press the “AM/FM” button and then the “AUX” button. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “HD-FM” is displayed, press the “TUNE ▼” button to select it.

## **Tune Up**

Press the “TUNE ▲” button to manually tune up.

## **Seek Up**

Press the “SEEK ▲” button to seek up to next available station.

## **Tune Down**

Press the “TUNE ▼” button to manually tune down.

## **Seek Down**

Press the “SEEK ▼” button to seek down to next available station.

## **Changing Bands**

Press the “AM/FM” button and then the “AUX” button. Immediately press the “SEEK ▲” button scroll through the available sources. Once the band you would like to select is displayed (“HD-AM” or “HD-FM”), press the “TUNE ▼” button to select it.



### **Store Presets**

Tune to a station you want to store. Press the “SCAN” button. Press “SEEK ▲” to select the preset location (1-18) where you wish to store the preset. When the preset location is displayed (for example PRE1) press the “TUNE ▲” button to store it. The screen will display “PR SAVED” and your preset has been stored into memory.

### **Recall Presets**

Press the “SCAN” button. Press the “SEEK ▲” button to scroll through the stored preset stations. When the desired preset is displayed, press the “TUNE ▼” button to select it.

### **Exit Menu**

Press the “SCAN” button to exit the Preset Menu and continue playing the current station. “EXIT” will be displayed when the button is pressed. You can also wait the allotted 10 seconds and the menu will exit automatically.

### **Changing Display:**

Press the “DISP” button to display artist and track information if the current HD Radio station is transmitting that information.

### **Steering Wheel Controls**

Press and hold “▲” to tune up or “▼” to tune down.

## **Sirius Satellite Radio Operation**

### **Entering Mode Select Menu**

Press the “AM/FM” button and then the “AUX” button. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “SIRIUS” is displayed, press the “TUNE ▼” button to select it.

### **Channel Up**

Press the “TUNE ▲” button to move up through the channels.

### **Channel Down**

Press the “TUNE ▼” button to move down through the channels.

### **Category Up**

Press the “SEEK ▲” button to move up through the categories.

### **Category Down**

Press the “SEEK ▼” button to move down through the categories.

### **Store Presets**

Tune to the station you wish to store as a preset. Press and hold the preset button on which you want to store the channel.

### **Recall Presets**

Press the preset button that corresponds with the channel you want to recall.

### **Changing Display**

Press the “DISP” button to display artist and track information.

## Selecting AUX Input

### Entering Mode Select Menu

Press the “AM/FM” button and then the “AUX” button. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “AUX” is displayed, press the “TUNE ▼” button to select it.

## Selecting Factory Installed Satellite Radio (If equipped)

### Entering Mode Select Menu

Press the “AM/FM” button and then the “AUX” button. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “SAT” is displayed, press the “TUNE ▼” button to select it.

## 7. Pathfinder & Armada

### iPod Operation

#### Entering Mode Select Menu

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once “IPOD” is displayed, press the “<<SEEK” button to select it.

#### Next Track

Turn the rotary TUNE KNOB clockwise to advance to the next track.

#### Previous Track

Turn the rotary TUNE KNOB counter clockwise to return to the previous track.

#### Random Mode

Press the “SCAN” button while listening to the iPod to toggle through the random modes.

#### Entering Browse Menu / Select

Press the “<<SEEK” button to enter the Browse menu or to make a selection while in the Browse menu.

#### Menu Navigation

Turn the rotary TUNE KNOB clockwise to scroll through the options in the Browse menu.

#### Steering Wheel Controls

Press and hold “▲” to enter the Browse menu.

### **Exit Browse menu**

Press the "SCAN" button or wait 10 seconds and the Browse menu will automatically exit.

### **Browse by Artist**

Press the "<<SEEK" button to enter the Browse menu.

"PL:LIST" will appear on your display.

Turn the rotary TUNE KNOB until "AR:ARTIST" is displayed.

Press the "<<SEEK" button to select Browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. "AR" will be displayed in front of the artist's name to indicate that you are searching for an artist.

Turn the rotary TUNE KNOB to cycle through the artists.

When the desired artist is displayed on the radio,

Press the "<<SEEK" button to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order. "AL" will be displayed in front of the name of the album to indicate you are searching for an album.

Turn the rotary TUNE KNOB to cycle through the albums.

Once the desired album is displayed,

Press the "<<SEEK" button to select the desired Album.

The first song in the album will be displayed. "TR" will be displayed in front of the song title to indicate that a "track" or song title is being displayed.

Turn the rotary TUNE KNOB to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically.

Once the radio displays the name of the desired song

Press the "<<SEEK" button to select and play the desired song.

The display will automatically change to display and scroll the title of the chosen song.

## **HD Radio Operation**

### **Entering Mode Select Menu**

Press the "AM/FM/SAT" button a few times until "SAT" is displayed on the screen. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once "HD-FM" is displayed, press the "<<SEEK" button to select it.

### **Tune Up**

Press the "SEEK >>" button to manually tune up.

### **Seek Up**

Turn the Tuning Knob Clockwise to seek up to next available station.

### **Tune Down**

Press the "<<SEEK" button to manually tune down.

### **Seek Down**

Turn the rotary TUNE KNOB Counter-clockwise to seek down to next available station.

### **Changing Bands**

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once the band you would like to select is displayed (“HD-AM” or “HD-FM”), press the “<<SEEK” button to select it.

### **Store Presets**

Tune to a station you want to store. Press the “SCAN” button. Turn the rotary TUNE KNOB to select the preset location (1-18) where you wish to store the preset. When the preset location is displayed (for example PRE1) press “SEEK>>” to store it. The screen will display “PR SAVED” and your preset has been stored into memory.

### **Recall Presets**

Press the “SCAN” button. Turn the rotary TUNE KNOB to scroll through the stored preset stations. When the desired preset is displayed, press the “<<SEEK” button to select it.

### **Exit menus**

Press the “SCAN” button to exit the Preset Menu and continue playing the current station. “EXIT” will be displayed when the button is pressed. You can also wait the allotted 10 seconds and the menu will exit automatically.

### **Steering Wheel Controls**

Press and hold “▲” to tune up or “▼” to tune down.

## **Sirius Satellite Radio Operation**

### **Entering Mode Select Menu**

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once “SIRIUS” is displayed, press the “<<SEEK” button to select it.

### **Channel Up**

Turn the TUNE KNOB clockwise to move up through the channels.

### **Channel Down**

Turn the TUNE KNOB counter-clockwise to move down through the channels.

### **Category Up**

Press the “SEEK>>” button to move up through the categories.

### **Category Down**

Press the “<<SEEK” button to move down through the categories

### **Store Presets**

Tune to the station you wish to store as a preset. Press and hold the preset button on which you want to store the channel.

**Please Note: If you are using the Media Gateway to add Sirius but still have factory XM installed, it is important to keep the presets in separate banks.**

### **Recall Presets**

Press the preset button that corresponds with the channel you want to recall.

### **Changing Display**

Press the “DISP” button to display artist and track information.

## **Selecting AUX Input**

### **Entering Mode Select Menu**

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once “AUX” is displayed, press the “<<SEEK” button to select it.

## **Selecting Factory Installed Satellite Radio (If equipped)**

### **Entering Mode Select Menu**

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once “SAT” is displayed, press the “<<SEEK” button to select it.

## **8. Sentra & Maxima**

### **Important Configuration Process**

To ensure proper functionality of your PXAMG iPod interface, you must first set the “TUNE” and “SEEK” buttons to the proper configuration. To do this you must first enter the Mode Select Menu. Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SCAN” button until “TUNEREV” is displayed. After 6 seconds the radio will time out and the “TUNE” button is now configured properly. You must repeat the same process for the “SEEK” button. To do this you must first enter the Mode Select Menu. Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SCAN” button until “SEEKREV” is displayed. After 6 seconds the radio will time out and the “SEEK” button is now configured properly.

## **iPod Operation**

### **Entering Mode Select Menu**

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK>>” button to scroll through the available sources. Once “IPOD” is displayed, press the “<<TUNE” button to select it.

### **Next Track**

Press the “SEEK>>” button to advance to the next track.

### **Previous Track**

Press the “<<SEEK” button to return to the previous track.

### **Random Mode**

Press the “SCAN” button while listening to the iPod to toggle through the random modes.

### **Entering Browse Menu / Select**

Press the “TUNE>>” button TWICE to enter the Browse menu or to make a selection while in the Browse menu

### **Menu Navigation**

Press “SEEK>>” to scroll through the options Browse menu.

### **Steering Wheel Controls**

Press and hold “▲” to move forward one track or “▼” to move backward one track.

### **Exit Browse menu**

Press the “SCAN” button or wait 10 seconds and the Browse menu will automatically exit.

### **Changing Display**

Press the “DISP” button to toggle through the display modes (Track, Artist, etc).

### **Browse by Artist**

Press the “TUNE>>” button TWICE to enter the Browse menu.

“PL:LIST” will appear on your display.

Press the “SEEK>>” button until “AR:ARTIST” is displayed.

Press the “TUNE>>” button TWICE to select Browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. “AR” will be displayed in front of the artist’s name to indicate that you are searching for an artist.

Press the “SEEK>>” button to cycle through the artists.

When the desired artist is displayed on the radio,

Press the “TUNE>>” button TWICE to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order. “AL” will be displayed in front of the name of the album to indicate you are searching for an album.

Press the “SEEK>>” button to cycle through the albums.

Once the desired album is displayed,

Press the “TUNE>>” button TWICE to select the desired Album.

The first song in the album will be displayed. “TR” will be displayed in front of the song title to indicate that a “track” or song title is being displayed.

Press the “SEEK>>” button to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically.

Once the radio displays the name of the desired song

Press the “TUNE>>” button TWICE to select and play the desired song.

The display will automatically change to display and scroll the title of the chosen song.

# HD Radio Operation

## Important Configuration Process

To ensure proper functionality of your HD tuner, you must first set the “TUNE” and “SEEK” buttons to the proper configuration. (Note: You do not have to repeat this process if you have already done so for iPod control!) To do this you must first enter the Mode Select Menu. Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SCAN” button until “TUNEREV” is displayed. After 6 seconds the radio will time out and the “TUNE” button is now configured properly. You must repeat the same process for the “SEEK” button. To do this you must first enter the Mode Select Menu. Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SCAN” button until “SEEKREV” is displayed. After 6 seconds the radio will time out and the “SEEK” button is now configured properly.

### Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK>>” button to scroll through the available sources. Once “HD-FM” is displayed, press the “<<TUNE” button to select it.

### Tune Up

Press the “TUNE>>” button TWICE to manually tune up.

### Seek Up

Press the “SEEK>>” button to seek up to next available station.

### Tune Down

Press the “<<TUNE” button TWICE to manually tune down.

### Seek Down

Press the “<<SEEK” button to seek down to next available station.

### Changing Bands

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK>>” button to scroll through the available sources. Once the band you would like to select is displayed (“HD-AM” or “HD-FM”), press the “<<TUNE” button to select it.

### Store Presets

Tune to a station you want to store. Press the “SCAN” button. Press “SEEK>>” to select the preset location (1-18) where you wish to store the preset. When the preset location is displayed (for example PRE1) press “<<TUNE” button TWICE to store it. The screen will display “PR SAVED” and your preset has been stored into memory.

### Recall Presets

Press the “SCAN” button. Press “SEEK>>” to scroll through the stored preset stations. When the desired preset is displayed, press the “TUNE>>” button TWICE to select it.

### Exit menus

Press the "SCAN" button to exit the Preset Menu and continue playing the current station. "EXIT" will be displayed when the button is pressed. You can also wait the allotted 10 seconds and the menu will exit automatically.

### Changing Display:

Press the "DISP" button to display artist and track information if the current HD Radio station is transmitting that information.

### Steering Wheel Controls

Press and hold "▲" to seek up or "▼" to seek down.

## Sirius Satellite Radio Operation

### Entering Mode Select Menu

Press the "RADIO" button a few times until "SAT" is displayed on the screen. Immediately press the "SEEK>>" button to scroll through the available sources. Once "SIRIUS" is displayed, press the "<<TUNE" button to select it.

### Channel Up

Press the "SEEK>>" button to move up through the channels.

### Channel Down

Press the "<<SEEK" button to move down through the channels.

### Category Up

Press the "TUNE>>" button to move up through the categories.

### Category Down

Press the "<<TUNE" button to move down through the categories

### Store Presets

Tune to the station you wish to store as a preset. Press and hold the preset button on which you want to store the channel.

**Please Note: If you are using the Media Gateway to add Sirius but still have factory XM installed, it is important to keep the presets in separate banks.**

### Recall Presets

Press the preset button that corresponds with the channel you want to recall.

### Changing Display

Press the "DISP" button to display artist and track information.



# Selecting AUX Input

## Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK>>” button to scroll through the available sources. Once “AUX” is displayed, press the “<<TUNE” button to select it.

# Selecting Factory Installed Satellite Radio (If equipped)

## Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK>>” button to scroll through the available sources. Once “SAT” is displayed, press the “<<TUNE” button to select it.

## 9. 2009-2010 Maxima

# iPod Operation

## Entering Mode Select Menu

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary knob to scroll through the available sources. Once “IPOD” is displayed, press the “<<SEEK” button to select the displayed mode

## Next Track

Turn the rotary TUNE KNOB clockwise to advance to the next track.

## Previous Track

Turn the rotary TUNE KNOB counter clockwise to return to the previous track.

## Random Mode

Press the “SCAN” button while listening to the iPod to toggle through the random modes.

## Entering Browse Menu / Select

Press the “<<SEEK” button to enter the Browse menu or to make a selection while in the Browse menu.

## Menu Navigation

Turn the rotary TUNE KNOB clockwise to scroll through the options in the Browse menu.

## Steering Wheel Controls

Press and hold “▲” to enter the Browse menu.

## Exit Browse menu

Press the “SCAN” button or wait 10 seconds and the Browse menu will automatically exit.

## **Browse by Artist**

Press the “<<SEEK” button to enter the Browse menu.

“PL:LIST” will appear on your display.

Turn the rotary TUNE KNOB until “AR:ARTIST” is displayed.

Press the “<<SEEK” button to select Browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. “AR” will be displayed in front of the artist’s name to indicate that you are searching for an artist.

Turn the rotary TUNE KNOB to cycle through the artists.

When the desired artist is displayed on the radio,

Press the “<<SEEK” button to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order.

“AL” will be displayed in front of the name of the album to indicate you are searching for an album.

Turn the rotary TUNE KNOB to cycle through the albums.

Once the desired album is displayed,

Press the “<<SEEK” button to select the desired Album.

The first song in the album will be displayed. “TR” will be displayed in front of the song title to indicate that a “track” or song title is being displayed.

Turn the rotary TUNE KNOB to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically.

Once the radio displays the name of the desired song

Press the “<<SEEK” button to select and play the desired song.

The display will automatically change to display and scroll the title of the chosen song.

# **HD Radio Operation**

## **Entering Mode Select Menu**

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary knob to scroll through the available sources. Once “HD-FM” is displayed, press the “<<SEEK” button to select the displayed mode.

## **Tune Up**

Press the “SEEK >>” button to manually tune up.

## **Seek Up**

Turn the Tuning Knob Clockwise to seek up to next available station.

## **Tune Down**

Press the “<<SEEK” button to manually tune down.

## **Seek Down**

Turn the rotary TUNE KNOB Counter-clockwise to seek down to next available station.

## **Changing Bands**

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary knob to scroll through the available sources. Once the band you would like to select is displayed (“HD-AM” or “HD-FM”), press the “<<SEEK” button to select the displayed mode.

### **Store Presets**

Tune to a station you want to store. Press the “SCAN” button. Turn the rotary TUNE KNOB to select the preset location (1-18) where you wish to store the preset. When the preset position is displayed (for example PRE1) press “SEEK>>” to store it. The screen will display “PR SAVED” and your preset has been stored into memory.

### **Recall Presets**

Press the “SCAN” button. Turn the rotary TUNE KNOB to scroll through the stored preset stations. When the desired preset is displayed, press the “<<SEEK” button to select it.

### **Exit menus**

Press the “SCAN” button to exit the Preset Menu and continue playing the current station. “EXIT” will be displayed when the button is pressed. You can also wait the allotted 10 seconds and the menu will exit automatically.

### **Steering Wheel Controls**

Press and hold “▲” to tune up or “▼” to tune down.

## **Sirius Satellite Radio Operation**

### **Entering Mode Select Menu**

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary knob to scroll through the available sources. Once “SIRIUS” is displayed, press the “<<SEEK” button to select the displayed mode.

### **Channel Up**

Turn the TUNE KNOB clockwise to move up through the channels.

### **Channel Down**

Turn the TUNE KNOB counter-clockwise to move down through the channels.

### **Category Up**

Press the “SEEK>>” button to move up through the categories.

### **Category Down**

Press the “<<SEEK” button to move down through the categories

### **Store Presets**

Tune to the station you wish to store as a preset. Press and hold the preset button on which you want to store the channel.

### **Recall Presets**

Press the preset button that corresponds with the channel you want to recall.

### **Changing Display**

Press the “DISP” button to display artist and track information.

# Selecting AUX Input

## Entering Mode Select Menu

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once “AUX” is displayed, press the “<<SEEK” button to select the displayed mode.

# Selecting Factory Installed Satellite Radio (If equipped)

## Entering Mode Select Menu

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once “SAT” is displayed, press the “<<SEEK” button to select the displayed mode.

# 10. 2009-2010 Murano

## iPod Operation

### Entering Mode Select Menu

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary knob to scroll through the available sources. Once “IPOD” is displayed, press the “<<SEEK” button to select the displayed mode

### Next Track

Turn the rotary TUNE KNOB clockwise to advance to the next track.

### Previous Track

Turn the rotary TUNE KNOB counter clockwise to return to the previous track.

### Random Mode

Press the “SCAN” button while listening to the iPod to toggle through the random modes.

### Entering Browse Menu / Select

Press the “<<SEEK” button to enter the Browse menu or to make a selection while in the Browse menu.

### Menu Navigation

Turn the rotary TUNE KNOB clockwise to scroll through the options in the Browse menu.

### Steering Wheel Controls

Press and hold “▲” to enter the Browse menu.

### Exit Browse menu

Press the “SCAN” button or wait 10 seconds and the Browse menu will automatically exit.

### **Browse by Artist**

Press the “<<SEEK” button to enter the Browse menu.

“PL:LIST” will appear on your display.

Turn the rotary TUNE KNOB until “AR:ARTIST” is displayed.

Press the “<<SEEK” button to select Browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. “AR” will be displayed in front of the artist’s name to indicate that you are searching for an artist.

Turn the rotary TUNE KNOB to cycle through the artists.

When the desired artist is displayed on the radio,

Press the “<<SEEK” button to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order.

“AL” will be displayed in front of the name of the album to indicate you are searching for an album.

Turn the rotary TUNE KNOB to cycle through the albums.

Once the desired album is displayed,

Press the “<<SEEK” button to select the desired Album.

The first song in the album will be displayed. “TR” will be displayed in front of the song title to indicate that a “track” or song title is being displayed.

Turn the rotary TUNE KNOB to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically.

Once the radio displays the name of the desired song

Press the “<<SEEK” button to select and play the desired song.

The display will automatically change to display and scroll the title of the chosen song.

## **HD Radio Operation**

### **Entering Mode Select Menu**

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary knob to scroll through the available sources. Once “HD-FM” is displayed, press the “<<SEEK” button to select the displayed mode.

### **Tune Up**

Press the “SEEK >>” button to manually tune up.

### **Seek Up**

Turn the Tuning Knob Clockwise to seek up to next available station.

### **Tune Down**

Press the “<<SEEK” button to manually tune down.

### **Seek Down**

Turn the rotary TUNE KNOB Counter-clockwise to seek down to next available station.

### **Changing Bands**

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary knob to scroll through the available sources. Once the band you would like to select is displayed (“HD-AM” or “HD-FM”), press the “<<SEEK” button to select the displayed mode.

### **Store Presets**

Tune to a station you want to store. Press the “SCAN” button. Turn the rotary TUNE KNOB to select the preset location (1-18) where you wish to store the preset. When the preset position is displayed (for example PRE1) press “SEEK>>” to store it. The screen will display “PR SAVED” and your preset has been stored into memory.

### **Recall Presets**

Press the “SCAN” button. Turn the rotary TUNE KNOB to scroll through the stored preset stations. When the desired preset is displayed, press the “<<SEEK” button to select it.

### **Exit menus**

Press the “SCAN” button to exit the Preset Menu and continue playing the current station. “EXIT” will be displayed when the button is pressed. You can also wait the allotted 10 seconds and the menu will exit automatically.

### **Steering Wheel Controls**

Press and hold “▲” to tune up or “▼” to tune down.

## **Sirius Satellite Radio Operation**

### **Entering Mode Select Menu**

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary knob to scroll through the available sources. Once “SIRIUS” is displayed, press the “<<SEEK” button to select the displayed mode.

### **Channel Up**

Turn the TUNE KNOB clockwise to move up through the channels.

### **Channel Down**

Turn the TUNE KNOB counter-clockwise to move down through the channels.

### **Category Up**

Press the “SEEK>>” button to move up through the categories.

### **Category Down**

Press the “<<SEEK” button to move down through the categories

### **Store Presets**

Tune to the station you wish to store as a preset. Press and hold the preset button on which you want to store the channel.

### **Recall Presets**

Press the preset button that corresponds with the channel you want to recall.

### **Changing Display**

Press the “DISP” button to display artist and track information.

# Selecting AUX Input

## Entering Mode Select Menu

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once “AUX” is displayed, press the “<<SEEK” button to select the displayed mode.

# Selecting Factory Installed Satellite Radio (If equipped)

## Entering Mode Select Menu

Press the “AM/FM” button and then the “AUX” button. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once “SAT” is displayed, press the “<<SEEK” button to select the displayed mode.

# 11. Altima & Rouge

## iPod Operation

### Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “IPOD” is displayed, press the “TUNE ▼” button to select it.

### Next Track

Press the “SEEK ▲” button to advance to the next track.

### Previous Track

Press the “SEEK ▼” button to return to the previous track.

### Random Mode

Press the “SCAN” button while listening to the iPod to toggle through the random modes.

### Entering Browse Menu / Select

Press the “TUNE ▼” button to enter the Browse menu or to make a selection while in the Browse menu

### Menu Navigation

Press the “SEEK ▲” button to scroll through the options in the Browse menu.

### Steering Wheel Controls

Press and hold “▲” to enter the Browse menu.

### Exit Browse menu

Press the “SCAN” button or wait 10 seconds and the Browse menu will automatically exit.

## Changing Display

Press the “DISP” button to toggle through the display modes (Track, Artist, etc).

### Browse by Artist

Press the “TUNE ▼” button to enter the Browse menu.

“PL:LIST” will appear on your display.

Press the “SEEK ▲” button until “AR:ARTIST” is displayed.

Press the “TUNE ▼” button to select Browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. “AR” will be displayed in front of the artist's name to indicate that you are searching for an artist.

Press the “Seek ▲” button to cycle through the artists.

When the desired artist is displayed on the radio,

Press the “TUNE ▼” button to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order. “AL” will be displayed in front of the name of the album to indicate you are searching for an album.

Press the “SEEK ▲” button to cycle through the albums.

Once the desired album is displayed,

Press the “TUNE ▼” button to select the desired album.

The first song in the album will be displayed. “TR” will be displayed in front of the song title to indicate that a “track” or song title is being displayed.

Press the “SEEK ▲” button to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically.

Once the radio displays the name of the desired song

Press the “TUNE ▼” button to select and play the desired song.

The display will automatically change to display and scroll the title of the chosen song.

## HD Radio Operation

### Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “HD-FM” is displayed, press the “TUNE ▼” button to select it.

### Tune Up

Press the “TUNE ▲” button to manually tune up.

### Seek Up

Press the “SEEK ▲” button to seek up to next available station.

### Tune Down

Press the “TUNE ▼” button to manually tune down.

### Seek Down

Press the “SEEK ▼” button to seek down to next available station.



### **Changing Bands**

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button scroll through the available sources. Once the band you would like to select is displayed (“HD-AM” or “HD-FM”), press the “SEEK ▼” button to select it.

### **Store Presets**

Tune to a station you want to store. Press the “SCAN” button. Press “SEEK ▲” to select the preset location (1-18) where you wish to store the preset. When the preset location is displayed (for example PRE1) press the “TUNE ▲” button to store it. The screen will display “PR SAVED” and your preset has been stored into memory.

### **Recall Presets**

Press the “SCAN” button. Press the “SEEK ▲” button to scroll through the stored preset stations. When the desired preset is displayed, press the “TUNE ▼” button to select it.

### **Exit Menu**

Press the “SCAN” button to exit the Preset Menu and continue playing the current station. “EXIT” will be displayed when the button is pressed. You can also wait the allotted 10 seconds and the menu will exit automatically.

### **Changing Display:**

Press the “DISP” button to display artist and track information if the current HD Radio station is transmitting that information.

### **Steering Wheel Controls**

Press and hold “▲” to tune up or “▼” to tune down.

## **Sirius Satellite Radio Operation**

### **Entering Mode Select Menu**

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “SIRIUS” is displayed, press the “TUNE ▼” button to select it.

### **Channel Up**

Press the “TUNE ▲” button to move up through the channels.

### **Channel Down**

Press the “TUNE ▼” button to move down through the channels.

### **Category Up**

Press the “SEEK ▲” button to move up through the categories.

### **Category Down**

Press the “SEEK ▼” button to move down through the categories

### Store Presets

Tune to the station you wish to store as a preset. Press and hold the preset button on which you want to store the channel.

**Please Note: If you are using the Media Gateway to add Sirius but still have factory XM installed, it is important to keep the presets in separate banks.**

### Recall Presets

Press the preset button that corresponds with the channel you want to recall.

### Changing Display

Press the “DISP” button to display artist and track information.

## Selecting AUX Input

### Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “AUX” is displayed, press the “TUNE ▼” button to select it.

## Selecting Factory Installed Satellite Radio (If equipped)

### Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “SAT” is displayed, press the “TUNE ▼” button to select it.

## 12. Versa

### Important Configuration Process

To ensure proper functionality of your PXAMG iPod Interface, you must first set the “SEEK” button to the proper configuration. To do this you must first enter the Mode Select Menu. Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SCAN” button until “SEEKREV” is displayed. After 6 seconds the radio will time out and the “SEEK” button is now configured properly.

# iPod Operation

## Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “IPOD” is displayed, press the “TUNE ▼” button to select it.

## Next Track

Press the “SEEK ▲” button TWICE to advance to the next track.

## Previous Track

Press the “SEEK ▼” button TWICE to return to the previous track.

## Random Mode

Press the “SCAN” button while listening to the iPod to toggle through the random modes.

## Entering Browse Menu / Select

Press the “TUNE ▼” button to enter the Browse menu or to make a selection while in the Browse menu

## Menu Navigation

Press the “SEEK ▲” button to scroll through the options in the Browse menu.

## Steering Wheel Controls

Press and hold “▲” to enter the Browse menu.

## Exit Browse menu

Press the “SCAN” button or wait 10 seconds and the Browse menu will automatically exit.

## Changing Display

Press the “DISP” button to toggle through the display modes (Track, Artist, etc).

### **Browse by Artist**

Press the “TUNE ▼” button to enter the Browse menu.

“PL:LIST” will appear on your display.

Press the “SEEK ▲” button until “AR:ARTIST” is displayed.

Press the “TUNE ▼” button to select Browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. “AR” will be displayed in front of the artist’s name to indicate that you are searching for an artist.

Press the “Seek ▲” button to cycle through the artists.

When the desired artist is displayed on the radio,

Press the “TUNE ▼” button to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order.

“AL” will be displayed in front of the name of the album to indicate you are searching for an album.

Press the “SEEK ▲” button to cycle through the albums.

Once the desired album is displayed,

Press the “TUNE ▼” button to select the desired Album.

The first song in the album will be displayed. “TR” will be displayed in front of the song title to indicate that a “track” or song title is being displayed.

Press the “SEEK ▲” button to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically.

Once the radio displays the name of the desired song

Press the “TUNE ▼” button to select and play the desired song.

## **HD Radio Operation**

### **Important Configuration Process**

To ensure proper functionality of your HD tuner, you must first set the “TUNE” button to the proper configuration. (Note: You do not have to repeat this process if you have already done so for iPod control!) To do this you must first enter the Mode Select Menu. Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SCAN” button until “TUNEREV” is displayed. After 6 seconds the radio will time out and the “TUNE” button is now configured properly.

#### **Entering Mode Select Menu (2004-2005)**

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “HD-FM” is displayed, press the “TUNE ▼” button to select it.

#### **Tune Up**

Press the “TUNE ▲” button to manually tune up.

#### **Seek Up**

Press the “SEEK ▲” button TWICE to seek up to next available station.

#### **Tune Down**

Press the “TUNE ▼” button to manually tune down.

### **Seek Down**

Press the “SEEK ▼” button TWICE to seek down to next available station.

### **Changing Bands**

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once the band you would like to select is displayed (“HD-AM” or “HD-FM”), press the “<<SEEK” button to select it.

### **Store Presets**

Tune to a station you want to store. Press the “SCAN” button. Press “SEEK ▲” to select the preset location (1-18) where you wish to store the preset. When the preset location is displayed (for example PRE1) press “TUNE▲” button to store it. The screen will display “PR SAVED” and your preset has been stored into memory.

### **Recall Presets**

Press the “SCAN” button. Press the “SEEK ▲” button to scroll through the stored preset stations. When the desired preset is displayed, press the “TUNE ▼” button to select it.

### **Exit menus**

Press the “SCAN” button to exit the Preset Menu and continue playing the current station. “EXIT” will be displayed when the button is pressed. You can also wait the allotted 10 seconds and the menu will exit automatically.

### **Changing Display:**

Press the “DISP” button to display artist and track information if the current HD Radio station is transmitting that information.

### **Steering Wheel Controls**

Press and hold “▲” to tune up or “▼” to tune down.

## **Sirius Satellite Radio Operation**

### **Entering Mode Select Menu**

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “SIRIUS” is displayed, press the “TUNE ▼” button to select it.

### **Channel Up**

Press the “TUNE ▲” button to move up through the channels.

### **Channel Down**

Press the “TUNE ▼” button to move down through the channels.

### **Category Up**

Press the “SEEK ▲” button to move up through the categories.

### **Category Down**

Press the “SEEK ▼” button to move down through the categories

## Store Presets

Tune to the station you wish to store as a preset. Press and hold the preset button on which you want to store the channel.

**Please Note: If you are using the Media Gateway to add Sirius but still have factory XM installed, it is important to keep the presets in separate banks.**

## Recall Presets

Press the preset button that corresponds with the channel you want to recall.

## Changing Display

Press the “DISP” button to display artist and track information.

# Selecting AUX Input

## Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “AUX” is displayed, press the “TUNE ▼” button to select it.

# Selecting Factory Installed Satellite Radio (If equipped)

## Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately press the “SEEK ▲” button to scroll through the available sources. Once “SAT” is displayed, press the “TUNE ▼” button to select it.

## 13. G35 & G37

### **\*\*IMPORTANT NOTE\*\***

**The 2007 G35 Coupe requires the PGHNI1 harness.**

# iPod Operation

## Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary knob to scroll through the available sources. Once “IPOD” is displayed, press the “▼ TRACK” button to select it.

## Next Track

Turn the TUNE KNOB Clockwise to advance to the next track.

## Previous Track

Turn the TUNE KNOB Counter-Clockwise to return to the previous track.

## Random Mode

Press the "SCAN" button while listening to the iPod to toggle through the random modes.

## Entering Browse Menu / Select

Press the "▼ TRACK" button to enter the Browse menu or to make a selection while in the Browse menu.

## Menu Navigation

Turn the TUNE KNOB Clockwise to scroll through the options in the Browse menu.

## Steering Wheel Controls

Press and hold "▲" or "▼" to change tracks.

## Exit Browse menu

Press the "SCAN" button or wait 10 seconds and the Browse menu will automatically exit.

## Browse by Artist

Press the "▼ TRACK" button to enter the Browse menu.

"PL:LIST" will appear on your display.

Turn the TUNE KNOB until "AR:ARTIST" is displayed.

Press the "▼ TRACK" button to select Browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. "AR" will be displayed in front of the artist's name to indicate that you are searching for an artist.

Turn the TUNE KNOB to cycle through the artists.

When the desired artist is displayed on the radio,

Press the "▼ TRACK" button to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order. "AL" will be displayed in front of the name of the album to indicate you are searching for an album.

Turn the TUNE KNOB to cycle through the albums.

Once the desired album is displayed,

Press the "▼ TRACK" button to select the desired Album.

The first song in the album will be displayed. "TR" will be displayed in front of the song title to indicate that a "track" or song title is being displayed.

Turn the TUNE KNOB to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically.

Once the radio displays the name of the desired song

Press the "▼ TRACK" button to select and play the desired song.

The display will automatically change to display and scroll the title of the chosen song.

# HD Radio Operation

## Entering Mode Select Menu

Press the "RADIO" button a few times until "SAT" is displayed on the screen. Immediately turn the rotary knob to scroll through the available sources. Once "HD-FM" is displayed, press the "▼ TRACK" button to select it.

### **Tune Up**

Press the “SEEK/CAT ▲” button to manually tune up.

### **Seek Up**

Turn the TUNE KNOB Clockwise to seek up to next available station.

### **Tune Down**

Press the “▼ TRACK” button to manually tune down.

### **Seek Down**

Turn the TUNE KNOB Counter-Clockwise to seek down to next available station.

### **Changing Bands**

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary knob to scroll through the available sources. Once the band you would like to select is displayed (“HD-AM” or “HD-FM”), press the “▼ TRACK” button to select it.

### **Store Presets**

Press the “SCAN” button. Once in the Preset Menu turn the TUNE KNOB to select the preset location (1-18) where you wish to store the preset. When the preset position is displayed (for example PRE1) press “SEEK/CAT ▲” to store the preset into memory. The screen will display “PR SAVED” and your preset has been stored into memory.

### **Recall Presets**

Press the “SCAN” button to enter the Preset Menu. Turn the TUNE KNOB to scroll through the stored preset stations. When the desired preset is displayed, press the “▼ TRACK” button to select it.

### **Exit menus**

Press the “SCAN” button to exit the Preset Menu and continue playing the current station. “EXIT” will be displayed when the button is pressed. You can also wait the allotted 10 seconds and the menu will exit automatically.

### **Steering Wheel Controls**

Press and hold “▲” to seek up or “▼” to seek down.

## **Sirius Satellite Radio Operation**

### **Entering Mode Select Menu**

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once “SIRIUS” is displayed, press the “<<SEEK” button to select it.

### **Channel Up**

Turn the TUNE KNOB clockwise to move up through the channels.

### **Channel Down**

Turn the TUNE KNOB counter-clockwise to move down through the channels.

### **Category Up**

Press the “SEEK>>” button to move up through the categories.



### Category Down

Press the “<<SEEK” button to move down through the categories

### Store Presets

Tune to the station you wish to store as a preset. Press and hold the preset button on which you want to store the channel.

**Please Note: If you are using the Media Gateway to add Sirius but still have factory XM installed, it is important to keep the presets in separate banks.**

### Recall Presets

Press the preset button that corresponds with the channel you want to recall.

### Changing Display

Press the “DISP” button to display artist and track information.

## Selecting AUX Input

### Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary knob to scroll through the available sources. Once “AUX” is displayed, press the “▼ TRACK” button to select it.

## Selecting Factory Installed Satellite Radio (If equipped)

### Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary knob to scroll through the available sources. Once “SAT” is displayed, press the “▼ TRACK” button to select it.

## 14. M35/45

## iPod Operation

### Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary knob to scroll through the available sources. Once “IPOD” is displayed, press the “<< SEEK” button to select it.

### Next Track

Turn the TUNE KNOB Clockwise to advance to the next track.

### Previous Track

Turn the TUNE KNOB Counter-Clockwise to return to the previous track.

## Random Mode

Press and hold the "TRACK >>" button while listening to the iPod to toggle through the random modes.

## Entering Browse Menu / Select

Press the "<< SEEK" button to enter the Browse menu or to make a selection while in the Browse menu.

## Menu Navigation

Turn the TUNE KNOB Clockwise to scroll through the options in the Browse menu.

## Steering Wheel Controls

Press and hold "▲" or "▼" to change tracks.

## Exit Browse menu

Press and hold the "TRACK >>" button or wait 10 seconds and the Browse menu will automatically exit.

## Browse by Artist

Press the "<< SEEK" button to enter the Browse menu.

"PL:LIST" will appear on your display.

Turn the TUNE KNOB until "AR:ARTIST" is displayed.

Press the "<< SEEK" button to select Browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. "AR" will be displayed in front of the artist's name to indicate that you are searching for an artist.

Turn the TUNE KNOB to cycle through the artists.

When the desired artist is displayed on the radio,

Press the "<< SEEK" button to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order. "AL" will be displayed in front of the name of the album to indicate you are searching for an album.

Turn the TUNE KNOB to cycle through the albums.

Once the desired album is displayed,

Press the "<< SEEK" button to select the desired Album.

The first song in the album will be displayed. "TR" will be displayed in front of the song title to indicate that a "track" or song title is being displayed.

Turn the TUNE KNOB to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically.

Once the radio displays the name of the desired song

Press the "<< SEEK" button to select and play the desired song.

The display will automatically change to display and scroll the title of the chosen song.

# HD Radio Operation

## Entering Mode Select Menu

Press the "RADIO" button a few times until "SAT" is displayed on the screen. Immediately turn the rotary knob to scroll through the available sources. Once "HD-FM" is displayed, press the "<< SEEK" button to select it.

## Tune Up

Press the "TRACK >>" button to manually tune up.

### **Seek Up**

Turn the Tuning Knob Clockwise to seek up to next available station.

### **Tune Down**

Press the "<< SEEK" button to manually tune down.

### **Seek Down**

Turn the TUNE KNOB Counter-Clockwise to seek down to next available station.

### **Changing Bands**

Press the "RADIO" button a few times until "SAT" is displayed on the screen. Immediately turn the rotary knob to scroll through the available sources. Once the band you would like to select is displayed ("HD-AM" or "HD-FM"), press the "<< SEEK" button to select it.

### **Store Presets**

Press and hold the "TRACK >>" button. Once in the Preset Menu turn the TUNE KNOB to select the preset location (1-18) where you wish to store the preset. When the preset position is displayed (for example PRE1) press "TRACK >>" to store the preset into memory. The screen will display "PR SAVED" and your preset has been stored into memory.

### **Recall Presets**

Press and hold the "TRACK >>" button to enter the Preset Menu. Turn the TUNE KNOB to scroll through the stored preset stations. When the desired preset is displayed, press the "<< SEEK" button to select it.

### **Exit menus**

Press and hold the "TRACK >>" button to exit the Preset Menu and continue playing the current station. "EXIT" will be displayed when the button is pressed. You can also wait the allotted 10 seconds and the menu will exit automatically.

### **Steering Wheel Controls**

Press and hold "▲" to seek up or "▼" to seek down.

## **Sirius Satellite Radio Operation**

### **Entering Mode Select Menu**

Press the "AM/FM/SAT" button a few times until "SAT" is displayed on the screen. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once "SIRIUS" is displayed, press the "<<SEEK" button to select it.

### **Channel Up**

Turn the TUNE KNOB clockwise to move up through the channels.

### **Channel Down**

Turn the TUNE KNOB counter-clockwise to move down through the channels.

### **Category Up**

Press the "SEEK>>" button to move up through the categories.

### Category Down

Press the “<<SEEK” button to move down through the categories

### Store Presets

Tune to the station you wish to store as a preset. Press and hold the preset button on which you want to store the channel.

**Please Note: If you are using the Media Gateway to add Sirius but still have factory XM installed, it is important to keep the presets in separate banks.**

### Recall Presets

Press the preset button that corresponds with the channel you want to recall.

### Changing Display

Press the “DISP” button to display artist and track information.

## Selecting AUX Input

### Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary knob to scroll through the available sources. Once “AUX” is displayed, press the “<<SEEK” button to select it.

## Selecting Factory Installed Satellite Radio (If equipped)

### Entering Mode Select Menu

Press the “RADIO” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary knob to scroll through the available sources. Once “SAT” is displayed, press the “<<SEEK” button to select it.

## 15. QX56

## iPod Operation

### Entering Mode Select Menu

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the TUNE KNOB to scroll through the available sources. Once “IPOD” is displayed, press the “<<SEEK” button to select it.

### Next Track

Turn the TUNE KNOB clockwise to advance to the next track.

### Previous Track

Turn the TUNE KNOB counter clockwise to return to the previous track.

## Random Mode

Press the "SCAN" button while listening to the iPod to toggle through the random modes.

## Entering Browse Menu / Select

Press the "<<SEEK" button to enter the Browse menu or to make a selection while in the Browse menu.

## Menu Navigation

Turn the TUNE KNOB clockwise to scroll through the options in the Browse menu.

## Steering Wheel Controls

Press and hold "▲" to enter the Browse menu.

## Exit Browse menu

Press the "SCAN" button or wait 10 seconds and the Browse menu will automatically exit.

## Browse by Artist

Press the "<<SEEK" button to enter the Browse menu.

"PL:LIST" will appear on your display.

Turn the TUNE KNOB until "AR:ARTIST" is displayed.

Press the "<<SEEK" button to select Browse by Artist.

The list of Artists on your iPod will be displayed one at a time in alphabetical order. "AR" will be displayed in front of the artist's name to indicate that you are searching for an artist.

Turn the TUNE KNOB to cycle through the artists.

When the desired artist is displayed on the radio,

Press the "<<SEEK" button to select the artist and display the albums by that artist.

The Albums from the selected Artist will be displayed one at a time in alphabetical order.

"AL" will be displayed in front of the name of the album to indicate you are searching for an album.

Turn the TUNE KNOB to cycle through the albums.

Once the desired album is displayed,

Press the "<<SEEK" button to select the desired Album.

The first song in the album will be displayed. "TR" will be displayed in front of the song title to indicate that a "track" or song title is being displayed.

Turn the TUNE KNOB to cycle through the songs in the selected album.

Songs are listed in the order in which they appear in the album, not alphabetically.

Once the radio displays the name of the desired song

Press the "<<SEEK" button to select and play the desired song.

The display will automatically change to display and scroll the title of the chosen song.

# HD Radio Operation

## Entering Mode Select Menu

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the TUNE KNOB to scroll through the available sources. Once “HD-FM” is displayed, press the “<<SEEK” button to select it.

## Tune Up

Press the “SEEK >>” button to manually tune up.

## Seek Up

Turn the TUNE KNOB Clockwise to seek up to next available station.

## Tune Down

Press the “<<SEEK” button to manually tune down.

## Seek Down

Turn the TUNE KNOB Counter-clockwise to seek down to next available station.

## Changing Bands

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the TUNE KNOB to scroll through the available sources. Once the band you would like to select is displayed (“HD-AM” or “HD-FM”), press the “<<SEEK” button to select it.

## Store Presets

Tune to a station you want to store. Press the “SCAN” button. Turn the TUNE KNOB to select the preset location (1-18) where you wish to store the preset. When the preset location is displayed (for example PRE1) press “SEEK>>” to store it. The screen will display “PR SAVED” and your preset has been stored into memory.

## Recall Presets

Press the “SCAN” button. Turn the TUNE KNOB to scroll through the stored preset stations. When the desired preset is displayed, press the “<<SEEK” button to select it.

## Exit menus

Press the “SCAN” button to exit the Preset Menu and continue playing the current station. “EXIT” will be displayed when the button is pressed. You can also wait the allotted 10 seconds and the menu will exit automatically.

## Steering Wheel Controls

Press and hold “▲” to tune up or “▼” to tune down.

# Sirius Satellite Radio Operation

## Entering Mode Select Menu

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the rotary TUNE KNOB to scroll through the available sources. Once “SIRIUS” is displayed, press the “<<SEEK” button to select it.

### **Channel Up**

Turn the TUNE KNOB clockwise to move up through the channels.

### **Channel Down**

Turn the TUNE KNOB counter-clockwise to move down through the channels.

### **Category Up**

Press the “SEEK>>” button to move up through the categories.

### **Category Down**

Press the “<<SEEK” button to move down through the categories

### **Store Presets**

Tune to the station you wish to store as a preset. Press and hold the preset button on which you want to store the channel.

**Please Note: If you are using the Media Gateway to add Sirius but still have factory XM installed, it is important to keep the presets in separate banks.**

### **Recall Presets**

Press the preset button that corresponds with the channel you want to recall.

### **Changing Display**

Press the “DISP” button to display artist and track information.

## **Selecting AUX Input**

### **Entering Mode Select Menu**

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the TUNE KNOB to scroll through the available sources. Once “AUX” is displayed, press the “<<SEEK” button to select it.

## **Selecting Factory Installed Satellite Radio (If equipped)**

### **Entering Mode Select Menu**

Press the “AM/FM/SAT” button a few times until “SAT” is displayed on the screen. Immediately turn the TUNE KNOB to scroll through the available sources. Once “SAT” is displayed, press the “<<SEEK” button to select it.

# 16. Troubleshooting

Symptom	Cause	Remedy
Radio shows "DEV INIT"	Media Gateway device is initializing.	This only occurs the first time the Media Gateway is powered on. Wait a few minutes, cycle ignition off and on then enter SAT mode.
The track forward command makes the tracks go backwards on the iPod.	The seek and tune buttons have not been set to the proper configuration.	Please see the Important Configuration Process in the iPod operation section that applies to your specific vehicle.
The seek and tune buttons operate backwards.	The seek and tune buttons have not been set to the proper configuration.	Please see the Important Configuration Process in the HD Radio operation section that applies to your specific vehicle.
When trying to test operation the radio does not power up.	Radio is not grounded	Nissan radios get their ground from the mounting screws. Insert the radio back into the dash and tighten down a bolt to provide a solid ground to the radio.
Radio shows iPod not connected.	iPod cable is not connected to iPod or Gateway.	Verify the docking cable is connected to the Media Gateway and the iPod.
I can not correctly control the iPod through the radio.	The iPod firmware may be out of date.	Update the iPod firmware.
I have updated my iPods firmware and still have control issues.	Sometimes the iPod needs to be reset.	Press and hold the center click and menu buttons for 10 seconds. This will re-boot the iPod. <b>YOU WILL NOT LOSE MUSIC</b> on the iPod by doing this reset.
I don't see iPod artist or song information on the screen.	The radio is displaying a different text field.	Press the display button to see the correct text field.
I can't use my iPod's click wheel to select music.	The iPod is in external control mode. This allows text to be displayed on the radio screen	Press the Aux/Sat button and select the AUX source to control the iPod from the click wheel.
The Media Gateway does not recognize the HD tuner (HDRT).	The HD tuner was not properly connected when the PXAMG was first connected and initialized.	HDRT must be connected before the PXAMG is plugged in. Disconnect the PXAMG from the vehicle harness for at least 5 minutes. Verify the 8 pin DIN HDRT cable is securely connected at both ends before reconnecting the vehicle harness.



## Troubleshooting (cont)

Symptom	Cause	Remedy
When I listen to the factory AM or FM radio there is only static, no audio.	Factory antenna cable is connected to the HD radio tuner.	Use Media Gateway to access HD radio source. This will provide all AM and FM reception for your vehicle.
No AM or FM reception using the HD radio source.	Factory antenna cable is not connected to the HD radio tuner (HDRT).	Remove the factory antenna plug from the factory radio and connect to the HDRT module. <b>**NOTE</b> - some vehicles need to use an aftermarket antenna adapter to make this connection.
HD radio station quality fluctuates or is lost randomly.	The HD tuner is temporarily losing reception of the Digital HD radio broadcast signal.	This is expected performance. The digital HD radio playback will resume in areas of higher broadcast signal strength.
The Seek or Tune Forward command is actually doing Seek or Tune reverse.	The seek and tune buttons have not been set to the proper configuration.	Please see the Important Configuration Process in the HD Radio operation section that applies to your specific vehicle.
The Seek button is doing Tune commands and the Tune button is doing Seek commands.	The dipswitches have not been set properly.	Please see the Dipswitch Setting and Dipswitch Overview section.