


JLT Oil Separator 3.0 Passenger Side (2005-10 Mustang GT) #3013P Installation Instructions

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator, (1) JLT mounting bracket, (2) fine thread machine screws, (2) 3/8 hoses, (2) quick connections
2	Gather all of the following tools needed for the installation: Phillips screwdriver, 8mm or 5/16 socket/ratchet
3	Remove stock PCV line
4	Using the fine thread screws provided attach the JLT mounting bracket to the top of the Separator. Remove the ground bolt and use it to attach the JLT Separator and JLT bracket to the shock tower.

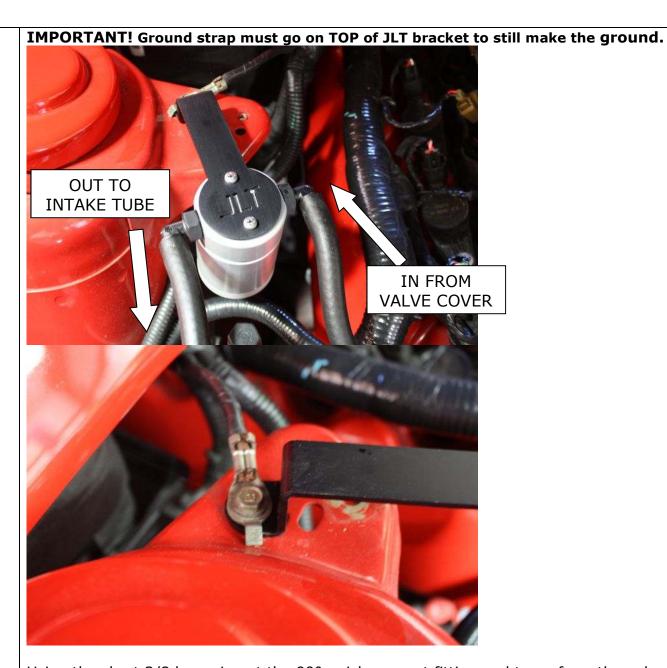

Using the short 3/8 hose, insert the 90° quick connect fitting and to go from the valve cover to the "T" side fitting on the Separator and the long 3/8 hose to go from the front most fitting to the intake tube.

Depending on the brand/style cold air intake you have this hose may need to be trimmed for best fit.

If you have the stock intake, use the supplied straight quick connect fitting in the longer hose.



