



JLT 3.0 Oil Separator, Driver Side #3016D
(2011-17 F150 - 5.0L; 6.2L/SVT Raptor; 5.0L & 6.2L/SVT Raptor with Roush Supercharger)
Installation Instructions

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator, (1) Mounting bracket, (2) fine thread machine screws, (1) J Clip, (1) M6 bolt (1) 18" Hose with 90 degree fitting, (1) 26" hose with 90 degree fitting
2	Gather all of the following tools needed for the installation: Phillips screw driver, 10mm socket or wrench.
3	<p>Remove factory PCV line by pulling tabs and pulling it off of the engine.</p> 
4	<p>2011-14: Use the supplied machine screws and mount the Oil Separator to the JLT bracket. The JLT on the can should line up with the JLT on the bracket and the supplied J Clip and bolt to mount the JLT bracket to the plastic cowl panel here:</p> 

5

2015-17:

Use the supplied machine screws and mount the Oil Separator to the JLT bracket. The JLT on the can should line up with the JLT on the bracket. Remove 10mm bolt and install bracket.



6



To properly clean the filter in the Oil Separator, remove the can from the truck and spray any degreaser or solvent through it and let it air dry. Clean it every 15,000 miles. Thanks for the business.