



Installation Instructions  
JLT 3.0 Oil Separator (2010-2015 Camaro LS3 6.2L, Passenger Side)  
#3080P

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator w/fittings, (1) mounting bracket, (2) Size 4 clamps, (2) M4 screws, (2) 3/8" hose kits
2	Gather all of the following tools needed for the installation: 15mm socket and ratchet, Phillips screw driver, 1/4" socket with long extension for hose clamps (or flat head screw driver), and light oil for ease of install of hoses
3	Remove engine cover. Remove the factory PCV hose from valley cover to manifold, this line is found under the throttle body. You can get more space by removing the breather lines (if equipped) if needed from the top. Depress the white buttons on these lines to release. - On the black fitting there is a small tab protruding out, pull this away from the fitting and it will unclip. 
4	Remove 15mm lower bolt from the drive belt tensioner. Install JLT bracket and reinstall the bolt. Bolt torque spec is 37 Ft/lbs. 

5	Assemble hoses onto JLT Oil Separator. The 12.5" hose goes to the "J" side of the can. The shorter 10" hose goes to the "T" side of the can. Use light oil on the fittings to aide in sliding the hose up the barbs. Be sure to slide hose clamps up the hose prior to install on vehicle. Only fittings on the vehicle will need the hose clamps!
6	Install the shorter hose to the valley cover (metal fitting). Install the longer hose to the intake manifold (plastic fitting). Use supplied screws to mount the JLT Oil Separator. Tighten hose clamps. Done!

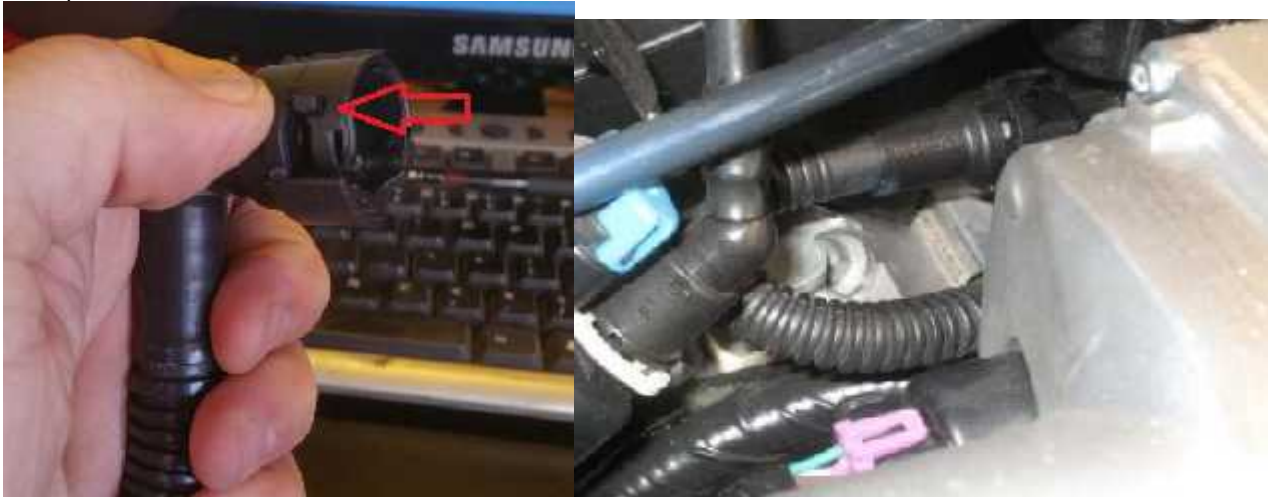

To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thanks for the business.

Disclaimer: JLT Performance Inc. makes no warranties whatsoever, expressed or implied, oral or written to any purchasers, except the warranty above. JLT Performance Inc. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by JLT Performance Inc. agree to hold harmless and indemnify JLT Performance Inc. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to JLT Performance Inc. for any claims arising out of use of its products.