


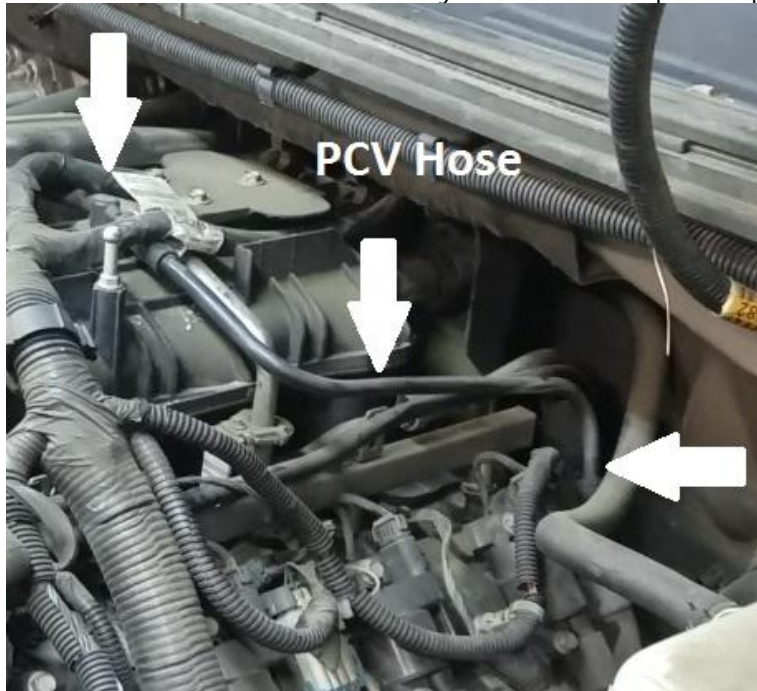


JLT 3.0 Oil Separator (1997-2013 Chevy/GM Truck/SUV 4.8/5.3/6.0/6.2, Driver Side)
#3084D

Install video available on our Youtube channel
Search: JLT Performance Inc.

Please review complete instructions prior to installing.

Step #	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator with hoses, (1) mounting bracket, (2) M4 screws, (1) M6 Bolt and Washer
2	Gather all of the following tools needed for the installation: 10mm socket and ratchet, Phillips screw driver and light oil for ease of install of hoses
3	<ul style="list-style-type: none"><input type="checkbox"/> Remove Engine cover by pulling upward on it at the throttle body.<input type="checkbox"/> Remove PCV hose, it runs from the back of the driver side valve cover to the top of the intake manifold. You may need to use a pair of pliers to assist in removal if its very tight. 
4	<p>Remove the 10mm Bolt from the alternator bracket, some trucks do not have a bolt here. If you do not use the supplied M6 bolt and washer to mount the JLT Oil Separator bracket.</p> 

Mount the JLT Oil Separator with supplied screws to the bracket. Run the longer hose to the rear fitting on the valve cover. Run the shorter hose to the intake manifold. Use light oil on the fitting to help in sliding the hose up the barbs. This hose will not need any hose clamps.



5

6

Reinstall Engine cover once and you're done! Check JLT Oil Separator every 1000-1500 Miles for collection as it can vary vehicle to vehicle.