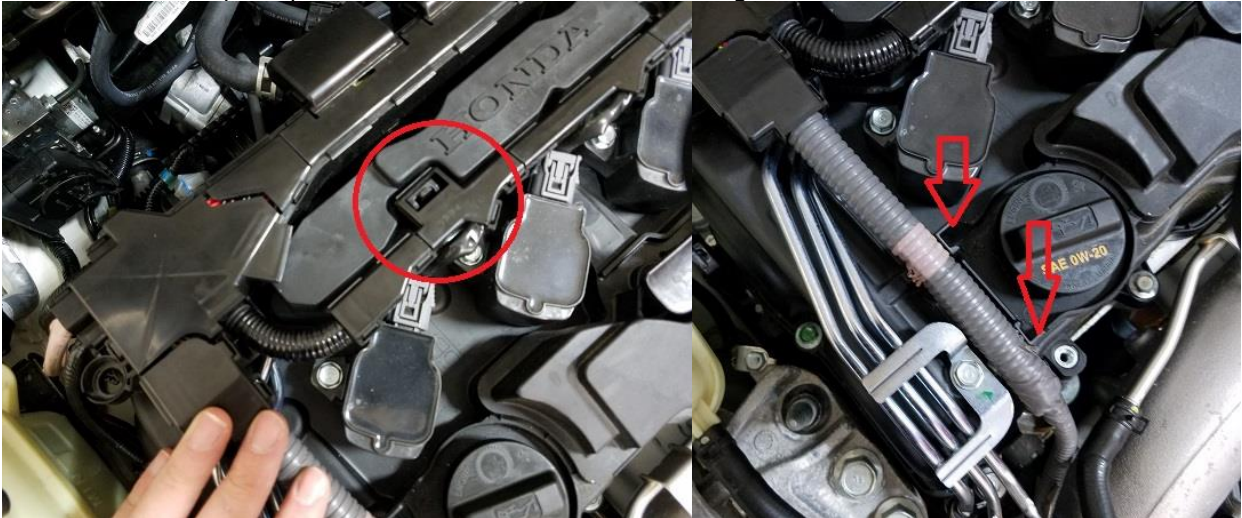



JLT PERFORMANCE™

JLT 3.0 Oil Separator Passenger Side (2017-19 Honda Civic Type R) #3100P Installation Instructions

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator, (1) mounting bracket, (2) fine thread screws, (1) #4 hose clamp and (1) M6 bolt
2	Gather all of the following tools needed for the installation: Phillips screwdriver, Flat head screwdriver, light oil, 10mm socket, 1/4" Ratchet and extension, and pliers
3	<p>Remove the engine cover by removing (5) 10mm Bolts and pulling up on the cover. Unclip wiring harness from small tab and pull up harness from front of the cover to get some slack in the harness.</p> 
4	<p>Locate PCV line running from valve cover to the intake manifold. Squeeze spring clamp and slide down the hose. To remove the hose, you may need to grab it with your pliers at the barbed fitting and twist to break the seal. Use care in doing this!!</p> 
5	Assemble the JLT Oil Separator with the bracket and line up the logos so they match. Pre-install the hose clamp on the short hose for easier access.

Remove 10mm bolt holding coolant reservoir, install oil separator bracket and JLT supplied bolt. Be sure the bracket is not touching the A/C line right next to it.



6

Install short hose onto the valve cover fitting and tighten the hose clamp with a screwdriver. Take OEM PCV line and put oil inside of hose end to help with sliding onto the can fitting. Once line is installed onto fitting, use pliers to re-install spring clamp. Re-install harness into proper location and re-install engine cover.

7

