



JLT Oil Separator (2016-2020 Toyota Tacoma 3.5L Driver Side) #3104D Installation Instructions

Please review complete instructions prior to installing.

Step #	
1	Verify you have all of the following parts in the kit: (1) JLT Oil Separator, (1) Mounting bracket, (2) Fine thread machine screws, (1) M6x1.0 bolt, (2) Hose with 90° connector, (2) Hose clamps
2	Gather all of the following tools needed for the installation: Phillips screwdriver, flat head screwdriver, 10mm socket, extension and ratchet, Light oil, hose cutter/razor blade.
3	<p>Locate PCV hose from back of driver side valve cover to intake manifold, it is attached with two light spring clips. Remove hose from vehicle. Cut hose in the center of the straight section on the intake manifold side.</p> 
4	<p>Install JLT Supplied hoses. The shorter hose will install into the shorter cut section of the stock PCV line. Slide clamp onto hose, install fitting and tighten clamp. JLT hose should be vertical. Install the longer JLT hose into the longer the same way.</p> 
5	Reinstall hoses onto vehicle, be sure to slide stock spring clamps back into place.

- 6** Install JLT Mounting bracket onto JLT oil separator, lining up the logo's. Back at the vehicle location the empty threaded hole on back of the engine. Use supplied M6 bolt to install JLT oil Separator and tighten.

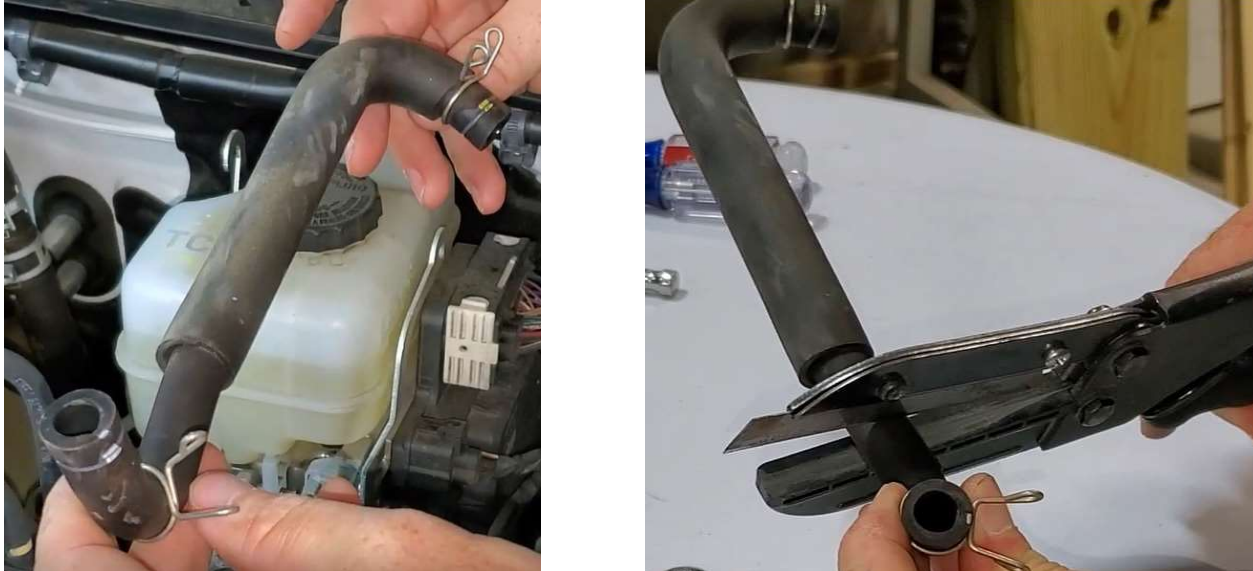

Using light oil, lube the inside of the hoses or can fittings. This will help install the hoses onto the can, no clamps are needed. The hose from the valve cover will install onto the T side of the can(JLT). The hose from the intake manifold will install onto the J side of the can.

