# REPLACEMENT COMPONENTS



Hex Key

425-3379

#### Vertical Tube Assembly 1 Tube & 1 Telescoping Rod 425-5341



(2) Hex Head Cap Screws & (2) Lock Washers 425-3385

Ratchet Handle 425-1273

# **JOTTO DESK ACCESSORIES**

Specifications subject to change without notice



#### **PIVOTING CELL PHONE HOLDER**

#### Model 425-5299

Allows you to tilt your phone independent of the desktop angle. Mounts to side of 10" x 12" Desktop.



#### SCREEN SUPPORT - A-MOD

#### Model 450-0449

The Screen Support is designed to keep your screen in place while you use your computer. It attaches directly to the A-MOD Desktop and adjusts in height and tilt angle.



USB LIGHT

Model 425-2490 12" flexible wand with blue LED's and rheostat to adjust brightness. Three foot power cord plugs into cigarette lighter.



BRACE KIT

#### The Brace Kit attaches to the stand providing additional support. It can be adjusted in length and mounts to flat, vertical or angled surfaces.



Kensington locking system. Fasten security cable to permanent structure in vehicle.



**SCREEN SUPPORT - ACD** 

#### Model 425-5999

The Screen Support is designed to keep your screen in place while you use your computer. It attaches directly to the ACD Desktop and adjusts in height and tilt angle.



WARNING: Do not install or use this product in any manner which would interfere with any of the vehicles controls, air bags or safety devices. Follow vehicle owner's manual instructions should a dash warning light come on after installation of this desk. Do not install or use this product in any manner which causes a safety hazard for vehicle and/or occupants.

425-5212

To avoid serious injury do not place this desk or any objects between the air bags and yourself or any passengers. If necessary remove the desk before driving. Store in trunk or other safe place.

We recommend that you do not work on the Jotto Desk while driving! Park safely, then use. Remember, driving safely comes first.

WARNING: Make sure of and check on a regular basis that all knobs, fastening devices and handles are tight and secure. Repair or replace any faulty or worn parts. All equipment, such as computers, printers, phones, etc. must be safely secured when vehicle is in motion.

DISCLAIMER: The manufacturer of this product may not be held liable for any accidents, injuries or problems caused by the use or installation of this product.

Specifications subject to change without notice.



# Model 425-5238

## **INSTALLATION PROCEDURE** READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION





### STAND ASSEMBLY OPERATION

- 1. Remove Hex Head Cap Screws from stand assembly and place tube over the Mount Base.
- 2. Thread (2) Hex Head Cap Screws with (2) Lock Washers through tube and into front and rear of Mount post at bottom of tube. (A)
- Raise inner rod to desired height. Thread (2) Hex Head Cap Screws with (2) Lock Washers into front and rear holes at top of tube. (B)
- 4. Use provided Hex Key to tighten (4) Hex Head Cap Screws to ensure secure positioning.

## **RATCHET CLAMP OPERATION**

1. Prior to installation of base, we suggest you assemble the desk and place within the vehicle to establish optimum mounting position. Once established, disassemble and build as follows.

- 2. Place universal base in position and attach base to floor using self-tapping tech screws.
- 3. Assemble the desktop stand to the mount base, starting with the vertical tube. Use 2 Hex Head Cap Screws and 2 Lock Washers to secure vertical tub e to mount post.
- 4. Place articulated swing arm over the 5/8" end of the telescoping rod. Tighten with ratchet handle.
- 5. Attach desktop to end of articulated swing arm and secure by tightening ratchet handle.

Note: Insert the r unthreaded arm and tig side first w properly To adjust, p counter clo en. If need for adjustm NOTE: Ratchet ha

**NOTE:** Insert the ratchet handle through the unthreaded side of the articulated swing arm and tighten. Going through threaded side first will not allow the arm to tighten properly

To adjust, pull handle out (B) and rotate counter clockwise (A), release and tighten. If needed, use 1/8" hex head wrench for adjustment (C)

 Ratchet handles are spring loaded and can be readjusted to tighten.