



INSTALLATION INSTRUCTIONS

Part Number: 33-2012

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modification will be required. However the following procedures **MUST** be followed to ensure the proper fit and seal of the K&N® air filter.

INSTALLATION:

- 1) Remove the old air filter.
- 2) Wipe any dirt out of the lid or base. The airbox must be clean and dry so that the gasket will stick to it.
- 3) Apply the self-sticking gasket around the edge of the airbox lid.
- 4) Place the K&N® filter in the airbox base.
- 5) Fasten clips from the airbox base to lid

CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

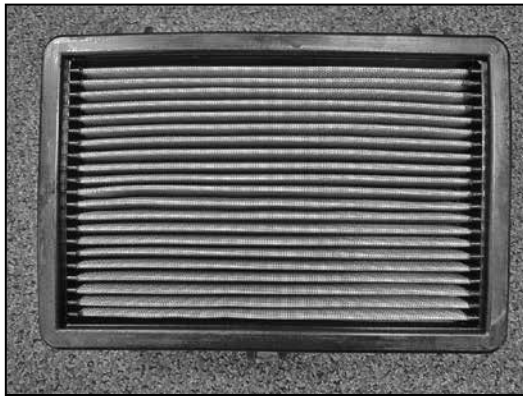


Fig.1



Fig.2



Fig.3