



WASHABLE / REUSABLE HEAVY DUTY AIR FILTER

THIS AIR FILTER HAS DRYFLOW™ MEDIA AND DOES NOT REQUIRE OIL

K&N® Radial Seal Air Filters

Cross references should be used for comparison of filters with similar dimensions. The user assumes all responsibility for verifying that filters are compatible with their application before using these products. Damage may result if the user fails to ensure that the filter is compatible and seals properly before installing the product or operating the engine.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

Everyone's mechanical ability is different; if you are unsure how to correctly change your air filter please seek a professional mechanic's help.

REMOVAL AND INSTALLATION:

1. Remove air filter housing cover.
2. Rock the air filter side to side slightly to help loosen the air filter's seal on the sealing flange.
3. Using the handle on the air filter (if equipped), rotate the air filter while pulling it straight out of the air filter housing.
4. Inspect the air filter housing and ensure that both the air filter sealing flange and engine air inlet are clean. Wipe away any dirt or contaminants from these surfaces as well as the air filter housing.
5. Inspect the dirty air filter for any signs of leakage or damage.
6. Install the K&N® air filter, slightly twisting the air filter while pushing it into the air filter housing. Make sure the air filter seats completely. If installing the K&N® air filter after it has been serviced, a light coating of silicone spray may be used on the air filter sealing surface to help with installation.
7. Replace the air filter housing cover, ensuring the housing cover is attached properly.
8. Reset vehicle air filter restriction gauge.
9. Service air filter at 15"H₂O or once a year.

Use K&N® Heavy Duty Air Filter Cleaner only. CAUTION: DO NOT USE THE STANDARD K&N® AIR FILTER CLEANER OR SERVICE INSTRUCTIONS FOR THIS AIR FILTER.