

INSTALLATION INSTRUCTIONS



KWautomotive

INSTALLATION INSTRUCTIONS

Before you start installation work, please read the following carefully:

- Ensure that the certificate matches the vehicle specifications (front vehicle identification number (VIN)) etc...
- The suspension components must match the suspensions application specifications (springs and shock/struts identification numbers).
- The instructions have to be strictly observed.

KW Coilovers for automobile suspensions are designed for easy installation. If not otherwise stipulated in these instructions, all suspension components are installed and removed in accordance with the manufacturer's specifications for installing and removing standard springs and damper components. At the time of printing all instructions and specifications are correct.


Installation Instructions			KW automotive		
Instruction No.	688 10 0CT			Date	12.10.2020
Technical data	l	Part n	umber 253 1	0 0CT / 273	10 0CT
Vehicle model			oortback (B9) e B8	max. permissible front axle 1240 kg	
		front	axle	rear	axle
Spring signature		5-80-70 / 80-70-225* 1058)58	
Coilover strut / Shock absorber signature		Serie Serie		erie	
Approximate distance measurement A Front axle: Fastening screw - spring contact		min:	max:	min:	max:
area Rear axle: Seating height contact area or fastening	adjustment - spring	210 mm / 8,3 inch	225 mm / 8,9 inch	15 mm / 0,6 inch	35 mm / 1,38 ind

 contact area
 min:
 min:

 Approximate measurement* B in mm / inch:
 min:
 min:

 wheel hub center to fender edge
 345 mm / 13,6 inch
 345 mm / 13,6 inch

Calculating the adjustment range (distance measurement A) : (Photos are examples only)

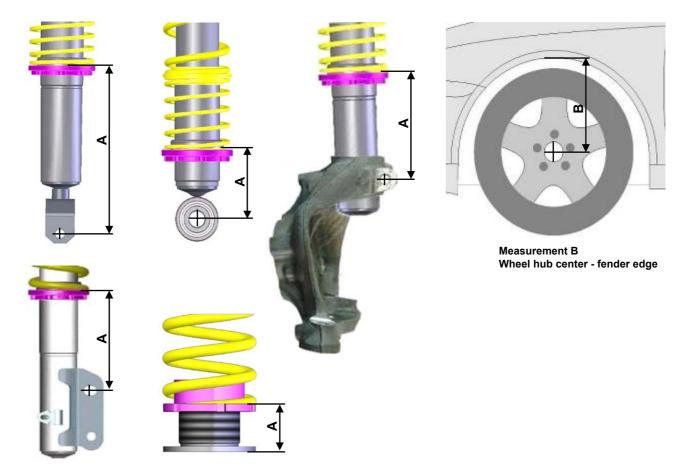

Please enter the adjusted height of the modified car into the list:

Coilover part no	Vehicle type	Measurement A		Wheel hub center - fender edge Measurement B	
		Front	Rear	Front	Rear

* **IMPORTANT:** The allowable measurement between wheel hub center and fender edge as indicated above, may not exceed these measurements when using standard fenders.

Instruction No.

688 10 0CT



Always follow the latest accident prevention regulations (not applicable for North America) for each step to prevent any serious bodily harm or injury.

- 1. We recommend the use of a vehicle hoist or lift when installing the suspension. If a lift is not available and jacking equipment is used, make sure that the vehicle is secured with commercial wheel blocks and jack stand to ensure safety.
- 2. The suspension components may only be installed by trained technical personnel using the proper tools.
- 3. The General Installation instructions, as well as the Technical Inspectorate documents must be read BEFORE attempting installation.
- 4. Never use impact wrenches or guns to install or remove shock absorber piston hardware.
- 5. Never disassemble or cut open shock absorbers and/or shock absorber inserts. They contain oil under pressure. Danger of explosion.
- 6. Before driving on public highways, carry out the work steps on page 7, items 11 through 14 after installation.
- 7. Please take care in any case that fittings (for example fittings of shock absorber housings or fittings of the lower control arm in the housing of the wheel bearing) are free of dust and oil. (see manufacturer guideline)

General Instructions for Use:

- 1. When adjusting the vehicle height, make sure that the threads are clean and free of debris. After initial cleaning, move the perch by 10 mm (0.4 Inches) downwards, and then clean the area that you desire to adjust the perch (up or down).
- 2. During height adjustments on separate shock and spring systems, remove the perch from the vehicle to adjust the height.
- 3. After adjusting the vehicle height, repeat steps 11 through 14 from page 7.
- 4. In the area of the piston rod and the sealing package of the new and used damper there might be oil and grease collected. This could either be caused by using a special black grease during assembling the washer or due to accumulation of streak oil. Further more oil is used during assembling the cartridge and rod guide. There is no reason of worrying about and damage, as in this area also dust and dirt used to be collected.

Tightening torque for the piston rod nut:

M8 = 25Nm (18 ft-lb), M10x1 = 20Nm (15 ft-lb), M10x1,25 = 20Nm (15 ft-lb), M12x1,25 = 35Nm (26 ft-lb), M12x1,5 = 40Nm (29 ft-lb), M14x1,5 = 50Nm (37 ft-lb), M16x1,5 = 50Nm (37 ft-lb)

Copyright

This assembly guideline is protected by copyright law. This assembly guideline is subject to a right to download and print the guideline which we grant for the purpose of the installation of products that have been purchased from us. Further reproduction is not allowed. Any devolution or sub-licensing of this copyright to a third party as well as any manipulation of the photographs is not allowed. We are entitled to cancel the granted copyright at any time. Copyright violations will be prosecuted."

General Mounting Specifications:

- 1. We recommend the use of a vehicle hoist or lift when installing the suspension.
- 2. **Caution:** If the vehicle is equipped with ride height sensors, they should be removed before removal of struts or dampers, otherwise damage may occur.
- 3. The struts should be removed as specified by manufacturer's instructions.
- 4. Manufacturer recommended tools for removal of the original struts, or a suitable spring compressor, must be used in order to remove most factory mounted suspension systems.
- 5. Mount the complete suspension system as described on the following pages.
- 6. Never use impact drivers to install nuts on the piston rods as permanent damage may occur. It is imperative that you do not damage the piston rod surface, through use of pliers etc, as the smallest damage will result in seal damage, and will not be covered under warranty.
- Stay within the lowering range specified in the table on page 3.
 Example: With a specified range of 20 60 mm (0.8 2.3 Inches), 40 mm (1.5 Inches) is your height adjustment range.
- 8. Ensure that the set screw on each spring collar is tightened to prevent movement of the spring perch. On vehicles with separate shock/spring combinations, no set screw is necessary.

Caution: Do not over tighten the set screw. Maximum torque is 1 - 2 Nm (0.74-1.47 ft-lb).

- 9. Install the suspension components in the vehicle as specified by the vehicle manufacturers in their document.
- 10. Except as noted, all torque values must comply with manufacturer recommended specifications.
- 11. After assembly and installation is complete, the vehicle should be rolled onto level ground. Once on level ground, measure the vehicle height and adjust to the customer's requirements, within the prescribed lowering range.

Caution: Wheel hub center—wheel arch maximum measurement in the table of page 3 must not be exceeded! Also take into account minimum road clearances specified in the table on page 7 (only valid for Germany!).

Caution: It is common for the vehicle suspensions to settle by an additional 5 - 10 mm (0.2 - 0.4 Inches)


12. Examine the clearance between the tires and the suspension over the full range of motion of the wheel. The minimum clearance between the suspension and the tire is 4 mm (0.16 Inches). If this clearance is less than 5 mm (0.2 Inches), wheel spacers may be necessary. With strut designs that are located close to the wheel, but that have no steering functions, use 100 mm (3.9 Inches) spacers on diagonally opposed wheel (e.g. front right, rear left). In this position, you must be able to achieve the minimum clearance required. You can also check the clearance between tire and body.

Caution: With torsion beam trailing arm axles, this method is not sufficient. The wheel must be under full load as well as test driven to properly calculate the clearances of 5 mm (0.2 Inches) from any other components.

- 13. The geometry of the suspension needs to be adjusted according the regulations of the vehicle manufacturer. If a value cannot be reached due to the difference in the height, a optimal value next to the tolerance range of the vehicle manufacturer needs to be adjusted.
- 14. All components that are controlled by vehicle ride height (e.g. headlights, brake bias regulator etc.) must be adjusted as specified by the vehicle manufacturer instructions and procedures.
- 15. For vehicles with ESP, DSC or EPC your new suspension components may cause an engine fault code to appear. This is only temporary as the vehicle electronics adjust to the new components/height. On some models this will end after driving approximately 3-5 miles, or through turning the steering wheel from full left to full right. On other models, this must be reset through the factory diagnostic port by a qualified technician.

nstallation Instru	ctions	<i>KW automotive</i>
Instruction No.	688 10 0CT	Date 12.10.2020
Front axle:		
	Important: Do not of the coilover stru	disconnect the hydraulic lines


The complete installation needs to be done at the car (don't disconnect the DRC line!). to secure other parts of the car they need to be covered. The spring needs to be set under pre tension by using a spring compressor, before the top mount is dismantled according to the manufacturer's data.

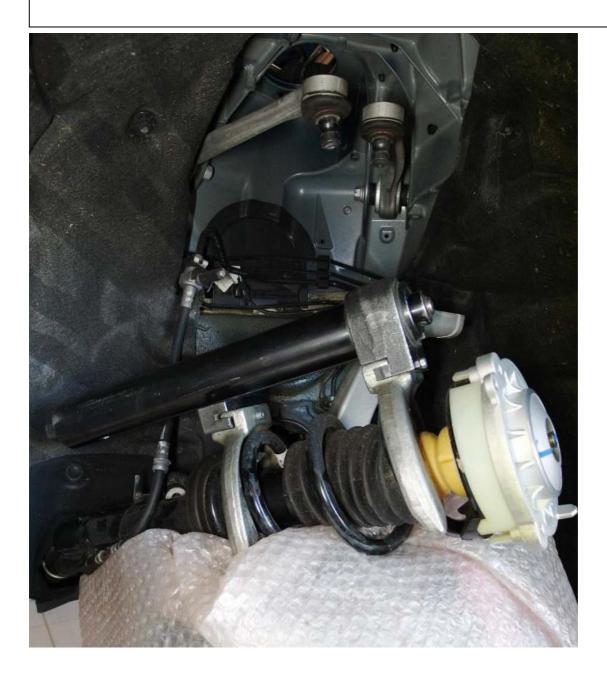

Installation Instructions		KW automotive		
Instruction No.	688 10 0CT	Date	12.10.2020	

Front axle:


Dismantle the spring, dust cover with bump stop, ventilation disk an spring perch. Then thoroughly clean the damper.

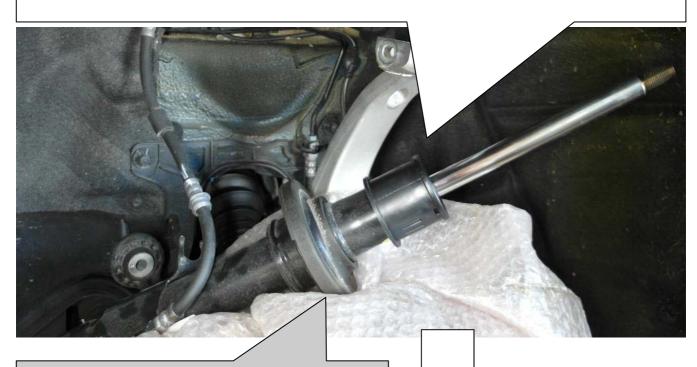

The OEM spring perch is no longer needed.



Installation Instru	ictions			KWau	tomotive
Instruction No.	688 10 0CT			Date	12.10.2020
Front axle:					
			Fully grease the the upper seal.	e threaded sleeve o	on the inside and on
In some cases you have to fit around it.	grind the weldseam a little,	until the threaded sleeve	will		
Put on threaded sleeve with ventilation cap.	threaded ring on the damp	per. Then reinstall the OEI	и		
		5			
KYB -					

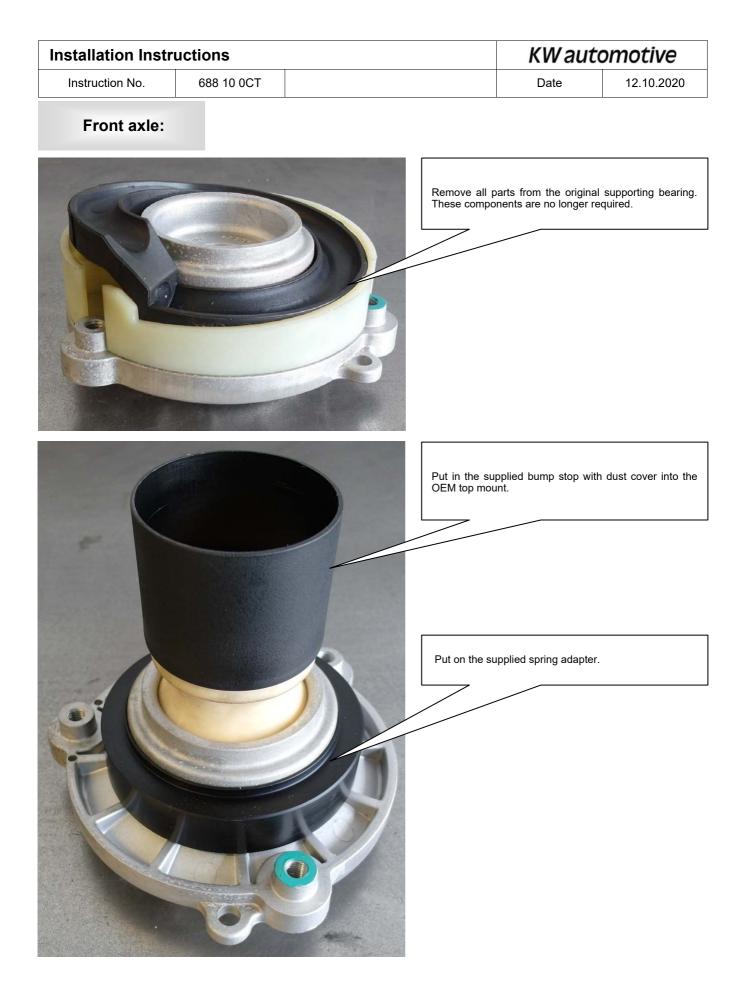

Installation Insti	uctions	KWau	tomotive
Instruction No.	688 10 0CT	Date	12.10.2020
Front axle:			
nsert the following suppli uccession: spring 1 , Inter pring 3 .	l to ma	the original supporting bearing with s over and fix it with the standard nut. Plea inufacturers recommended settings rega xing specifications.	upplied bumpstop a sse install the strut u rding tightening torq
2			3

Installation Instructions		KWat	KW automotive		
Instruction No.	688 10 0CT	Date	12.10.2020		

Rear axle:



Installation Instructions		KWaut	omotive
Instruction No.	688 10 0CT	Date	12.10.2020

Rear axle:

Important: Do not disconnect the hydraulic lines of the damper.





Installation Instructions		KWaut	omotive
Instruction No. 688 10 0CT		Date	12.10.2020
Rear axle:	Put on the supplied bellow and	the bump stop.	
B B B B B B B B B B B B B B B B B B B			
<image/>	Install with the install recom que ar	the original supporting e standard nut. nount the plug with gro the damper unit to m mended settings rega nd fixing specifications.	bearing and fit mmet again. Please anufacturers rding tightening tor-