

INSTALLATION INSTRUCTIONS



Installation Instructions			<i>KW automotive</i>	
Instruction No.	685 10 489		Date	14.02.2017

KW automotive

685 10 489
INSTALLATION INSTRUCTIONS
Cancellation kit

Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 489	Date	14.02.2017

Front axle righth:

Run the standard damper control wire to the canceller connector. Insert the connector into the canceller connector until it locks. Fix the canceller with supplied cable ties on the vehicle chassis.



/ Cable ties

/ Cable ties



Installation Instructions		<i>KW automotive</i>	
Instruction No.	685 10 489	Date	14.02.2017

Front axle left:

Run the standard damper control wire to the canceller connector. Insert the connector into the canceller connector until it locks. Fix the canceller with supplied cable ties on the vehicle chassis.



/ Cable ties

/ Cable ties




Installation Instructions		KW automotive	
Instruction No.	685 10 489	Date	14.02.2017

Rear axle righth:

Run the standard damper control wire to the canceller connector. Insert the connector into the canceller connector until it locks.



Mount the canceller with the supplied edge clips on the chassis edge.
Fix the cable with cable ties.

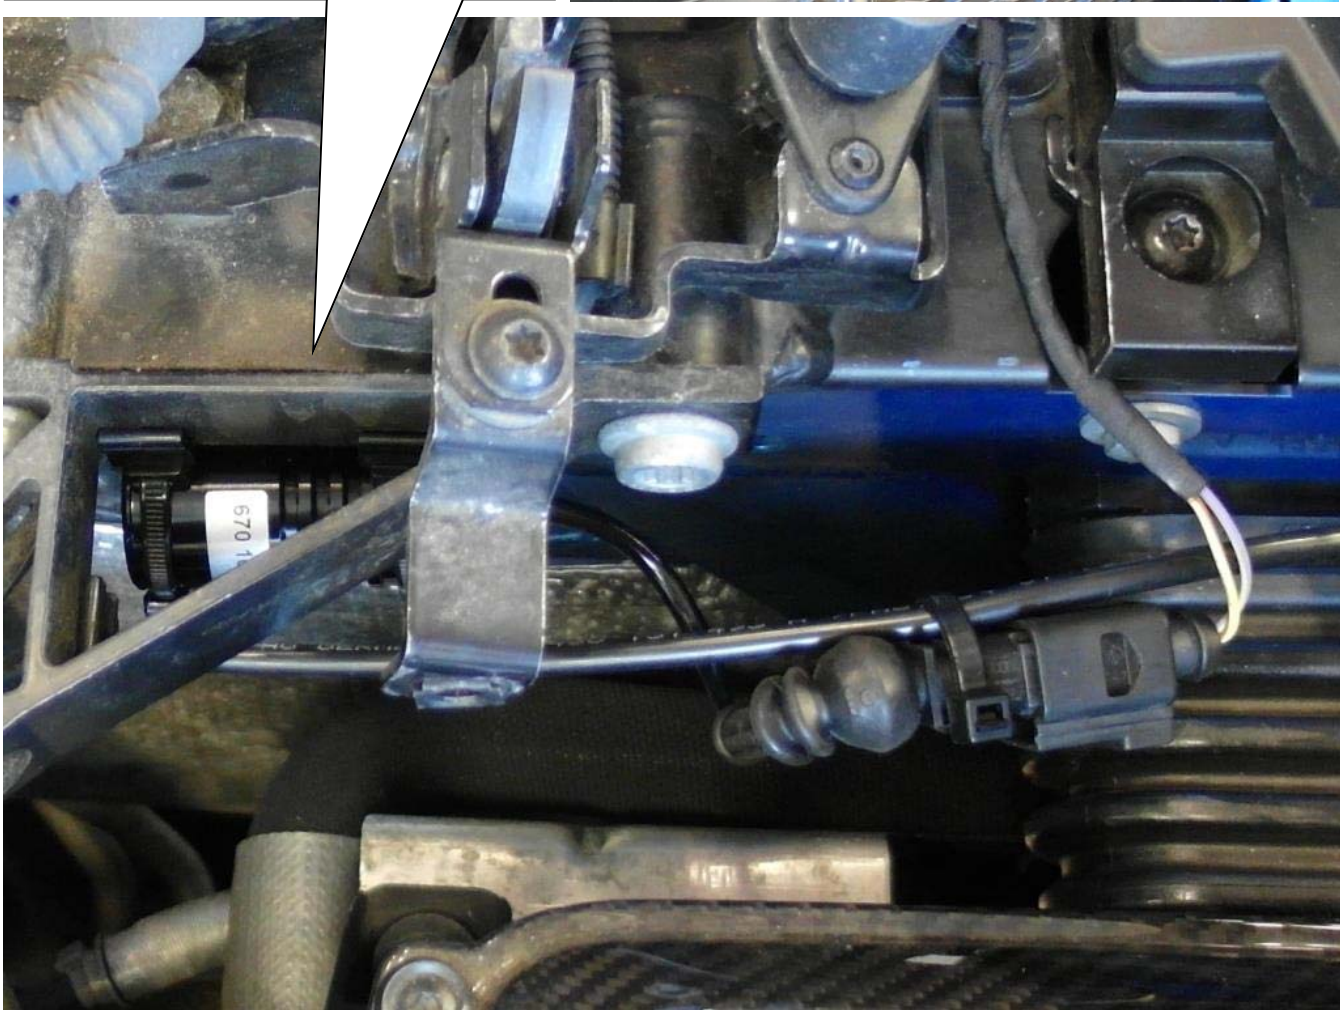



Installation Instructions			KW automotive	
Instruction No.	685 10 489		Date	14.02.2017

Rear axle left:

Run the standard damper control wire to the canceller connector. Insert the connector into the canceller connector until it locks.

Mount the canceller with the supplied edge clips on the chassis edge.
Fix the cable with cable ties.

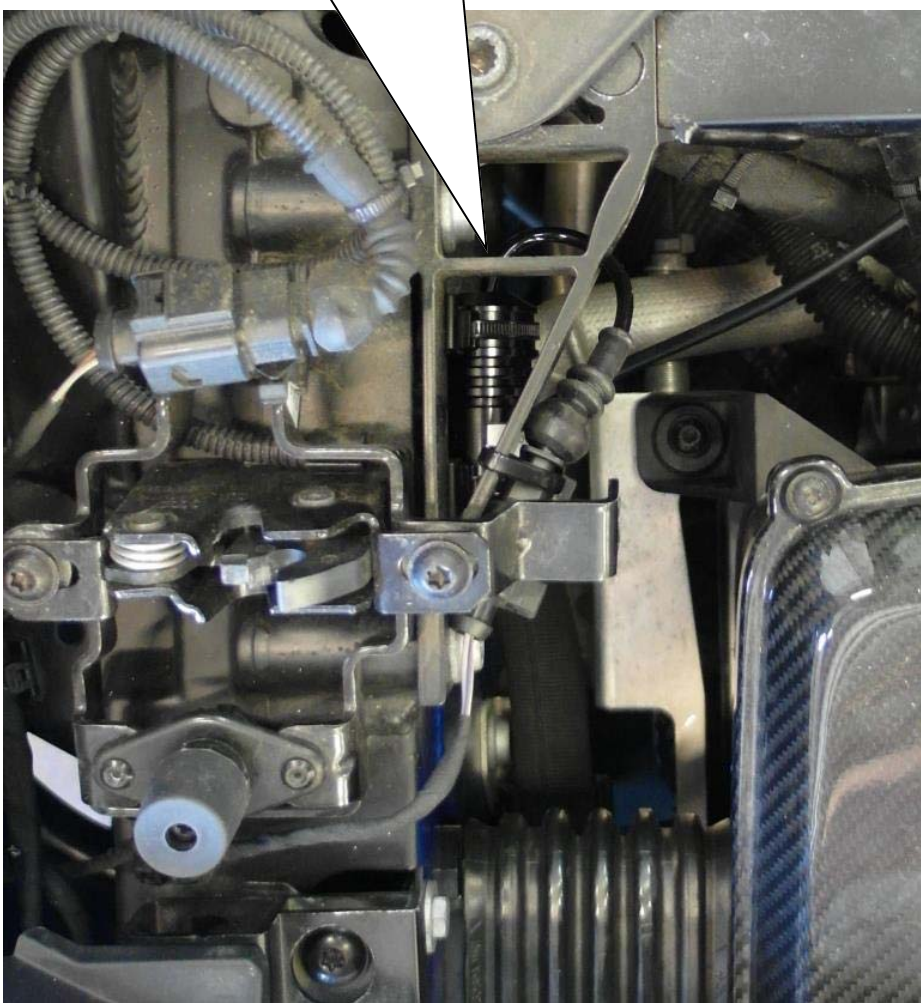

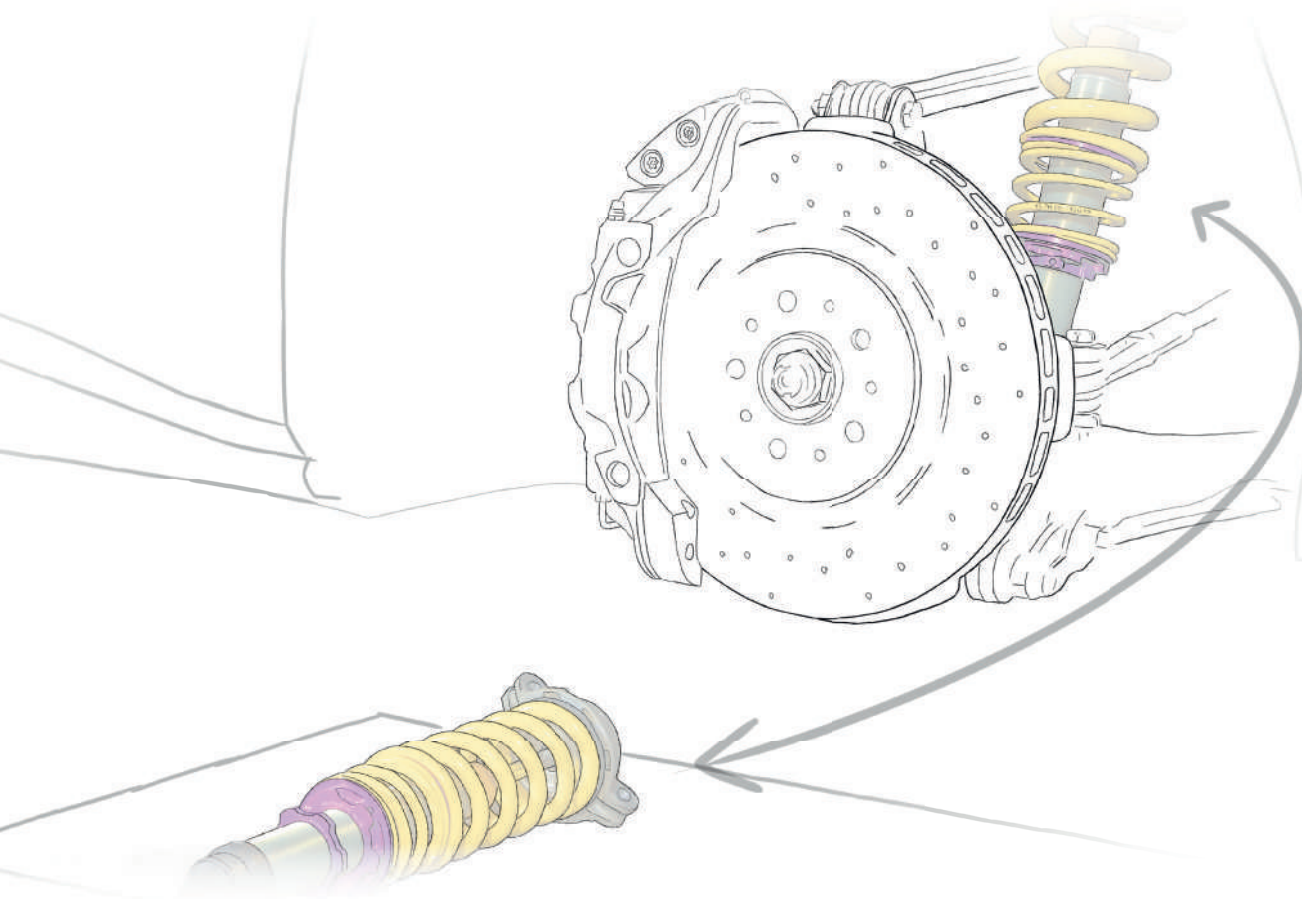

INSTALLATION INSTRUCTIONS





INSTALLATION INSTRUCTIONS


**Before you begin installation,
please read the following carefully:**

- **Ensure that the certificate matches the vehicle specifications (front vehicle identification number (VIN)) etc...**
- **The suspension components must match the suspension application specifications (springs and shock/struts identification numbers).**
- **The instructions have to be strictly observed.**

KW Coilovers for automobile suspensions are designed for easy installation. If not otherwise stipulated in these instructions, all suspension components are installed and removed in accordance with the manufacturer's specifications for installing and removing standard springs and damper components. At the time of printing all instructions and specifications are correct.

Technical data	Coilover part number 309 11 008			
Vehicle model	Lamborghini Huracan type 724		max. permissible front axle load: 950 kg	
	front axle		rear axle	
Spring signature	1101		10-60-80 / 90-170*	
Coilover strut / Shock absorber signature	110 1003		110 1103	
Approximate distance measurement A Front axle: Fastening screw - spring contact area Rear axle: Seating height adjustment - spring contact area or fastening screw - spring contact area	min:	max:	min:	max:
	250 mm / 9,8 inch	260 mm / 14,2 inch	140 mm / 5,5 inch	160 mm / 6,3 inch
Approximate measurement* B in mm / inch: wheel hub center to fender edge	min:		min:	
	345 mm / 9,6 inch		360 mm / 14,2 inch	

Calculating the adjustment range (distance measurement A) : (Photos are examples only)

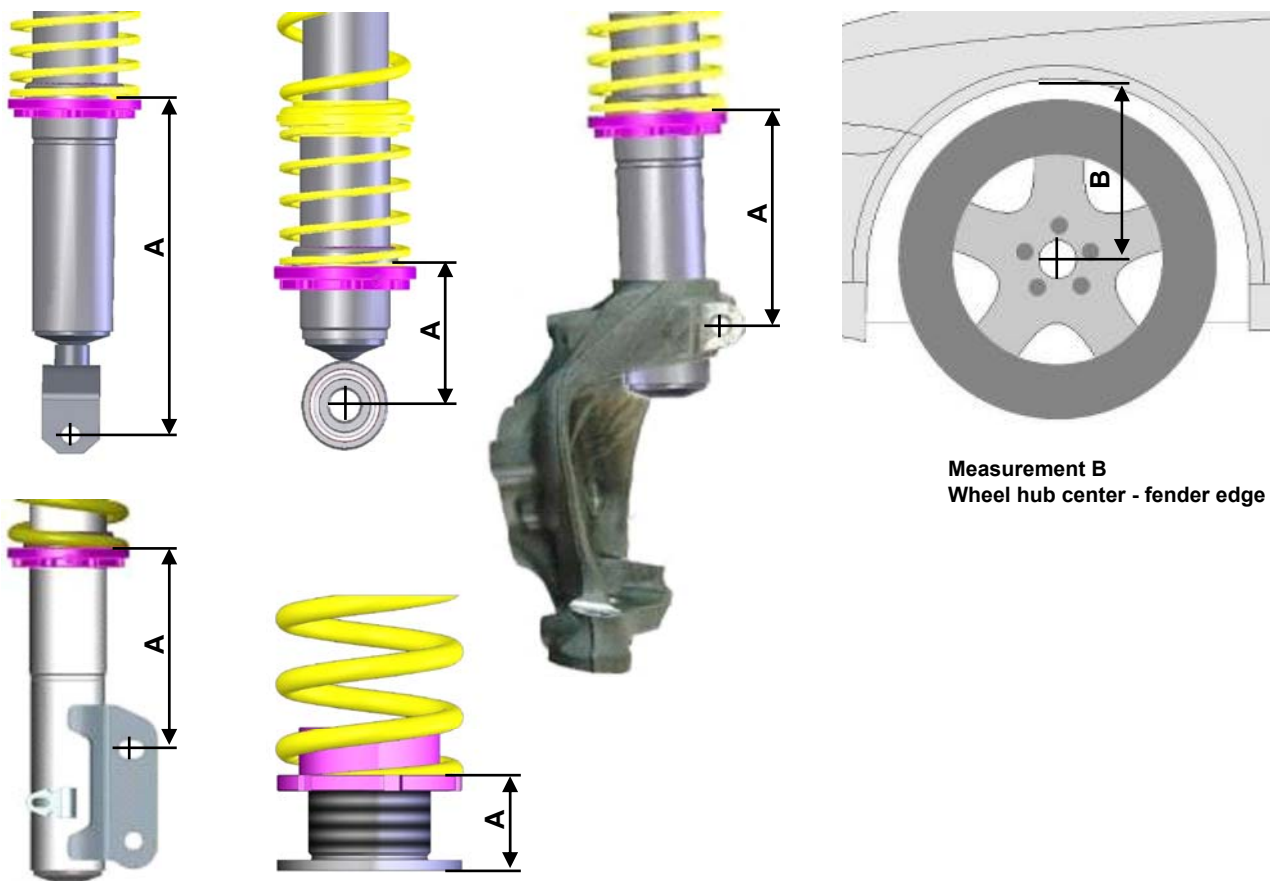

Please enter the adjusted height of the modified car into the list:

Coilover part no	Vehicle type	Measurement A		Wheel hub center - fender edge Measurement B	
		Front	Rear	Front	Rear

* **IMPORTANT:** The allowable measurement between wheel hub center and fender edge as indicated above, may not exceed these measurements when using standard fenders.

Danger:

Always follow the latest accident prevention regulations (not applicable for North America) for each step to prevent any serious bodily harm or injury.

1. We recommend the use of a vehicle hoist or lift when installing the suspension. If a lift is not available and jacking equipment is used, make sure that the vehicle is secured with commercial wheel blocks and jack stand to ensure safety.
2. The suspension components may only be installed by trained technical personnel using the proper tools.
3. The General Installation instructions, as well as the Technical Inspectorate documents must be read BEFORE attempting installation.
4. Never use impact wrenches or guns to install or remove shock absorber piston hardware.
5. Never disassemble or cut open shock absorbers and/or shock absorber inserts. They contain oil under pressure. Danger of explosion.
6. Before driving on public highways, carry out the work steps on page 7, items 11 through 14 after installation.
7. The suspension regulation (when available) needs to be disabled through an authorized dealer.
8. Please take care in any case that fittings (for example fittings of shock absorber housings or fittings of the lower control arm in the housing of the wheel bearing) are free of dust and oil. (see manufacturer guideline)

General Instructions for Use:

1. When adjusting the vehicle height, make sure that the threads are clean and free of debris. After initial cleaning, move the perch by 10 mm (0.4 Inches) downwards, and then clean the area that you desire to adjust the perch (up or down).
2. During height adjustments on separate shock and spring systems, remove the perch from the vehicle to adjust the height.
3. After adjusting the vehicle height, repeat steps 11 through 14 from page 7.
4. In the area of the piston rod and the sealing package of the new and used damper there might be oil and grease collected. This could either be caused by using a special black grease during assembling the washer or due to accumulation of streak oil. Further more oil is used during assembling the cartridge and rod guide. There is no reason of worrying about and damage, as in this area also dust and dirt used to be collected.

Tightening torque for the piston rod nut:

M8 = **25Nm (18 ft-lb)**, M10x1 = **20Nm (15 ft-lb)**, M10x1,25 = **20Nm (15 ft-lb)**, M12x1,25 = **35Nm (26 ft-lb)**,
M12x1,5 = **40Nm (29 ft-lb)**, M14x1,5 = **50Nm (37 ft-lb)**, M16x1,5 = **50Nm (37 ft-lb)**

Copyright

This assembly guideline is protected by copyright law. This assembly guideline is subject to a right to download and print the guideline which we grant for the purpose of the installation of products that have been purchased from us. Further reproduction is not allowed. Any devolution or sub-licensing of this copyright to a third party as well as any manipulation of the photographs is not allowed. We are entitled to cancel the granted copyright at any time. Copyright violations will be prosecuted.

General Mounting Specifications:

1. We recommend the use of a vehicle hoist or lift when installing the suspension.
 2. **Caution:** If the vehicle is equipped with ride height sensors, they should be removed before removal of struts or dampers, otherwise damage may occur.
 3. The struts should be removed as specified by manufacturer's instructions.
 4. Manufacturer recommended tools for removal of the original struts, or a suitable spring compressor, must be used in order to remove most factory mounted suspension systems.
 5. Mount the complete suspension system as described on the following pages.
 6. Never use impact drivers to install nuts on the piston rods as permanent damage may occur. It is imperative that you do not damage the piston rod surface, through use of pliers etc, as the smallest damage will result in seal damage, and will not be covered under warranty.
 7. Stay within the lowering range specified in the table on page 3.
Example: With a specified range of 20 - 60 mm (0.8 - 2.3 Inches), 40 mm (1.5 Inches) is your height adjustment range.
 8. Ensure that the set screw on each spring collar is tightened to prevent movement of the spring perch. On vehicles with separate shock/spring combinations, no set screw is necessary.
Caution: Do not over tighten the set screw. Maximum torque is 1 - 2 Nm (0.74-1.47 ft-lb).
 9. Install the suspension components in the vehicle as specified by the vehicle manufacturers in their document.
 10. Except as noted, all torque values must comply with manufacturer recommended specifications.
 11. After assembly and installation is complete, the vehicle should be rolled onto level ground. Once on level ground, measure the vehicle height and adjust to the customer's requirements, within the prescribed lowering range.
Caution: Wheel hub center—wheel arch maximum measurement in the table of page 3 must not be exceeded! Also take into account minimum road clearances specified in the table on page 7 (only valid for Germany!).
Caution: It is common for the vehicle suspensions to settle by an additional 5 - 10 mm (0.2 - 0.4 Inches)
 12. Examine the clearance between the tires and the suspension over the full range of motion of the wheel. The minimum clearance between the suspension and the tire is 4 mm (0.16 Inches). If this clearance is less than 5 mm (0.2 Inches), wheel spacers may be necessary. With strut designs that are located close to the wheel, but that have no steering functions, use 100 mm (3.9 Inches) spacers on diagonally opposed wheel (e.g. front right, rear left). In this position, you must be able to achieve the minimum clearance required. You can also check the clearance between tire and body.
Caution: With torsion beam trailing arm axles, this method is not sufficient. The wheel must be under full load as well as test driven to properly calculate the clearances of 5 mm (0.2 Inches) from any other components.
 13. The geometry of the suspension needs to be adjusted according the regulations of the vehicle manufacturer. If a value cannot be reached due to the difference in the height, a optimal value next to the tolerance range of the vehicle manufacturer needs to be adjusted.
 14. All components that are controlled by vehicle ride height (e.g. headlights, brake bias regulator etc.) must be adjusted as specified by the vehicle manufacturer instructions and procedures.
 15. For vehicles with ESP, DSC or EPC your new suspension components may cause an engine fault code to appear. This is only temporary as the vehicle electronics adjust to the new components/height. On some models this will end after driving approximately 3-5 miles, or through turning the steering wheel from full left to full right. On other models, this must be reset through the factory diagnostic port by a qualified technician.
 16. If Vehicles have Driver Assistant Systems and the ride high is lowered by an increase of the compression travel, it must be proofed that all relevant sensors (like Radar Sensor or Camera Systems) be adjusted according to the Manufacture Specifications
-

Front axle:


Dismantle coilover strut according to the manufacturer.



Disassemble the plug on the strut with a suitable tool.
Note the positions of the lines (color and pin number).



Hier einsprühen / Spray here

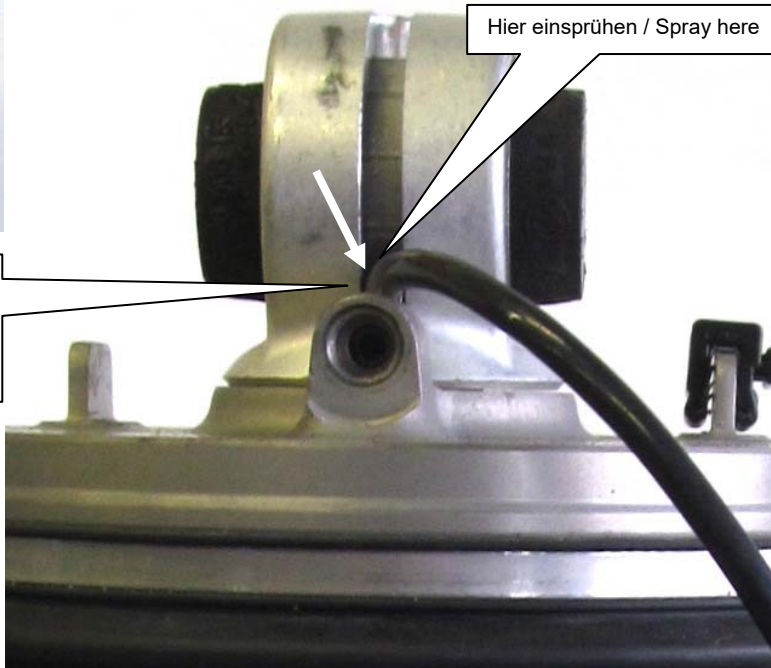


Spray teflon spray into the hole of the damper eye (wire) as shown in the picture.

Front axle:

Use a GS audited spring compressor and compress the spring.




Move the circlip / clamping ring from the upper nut to the lower position.

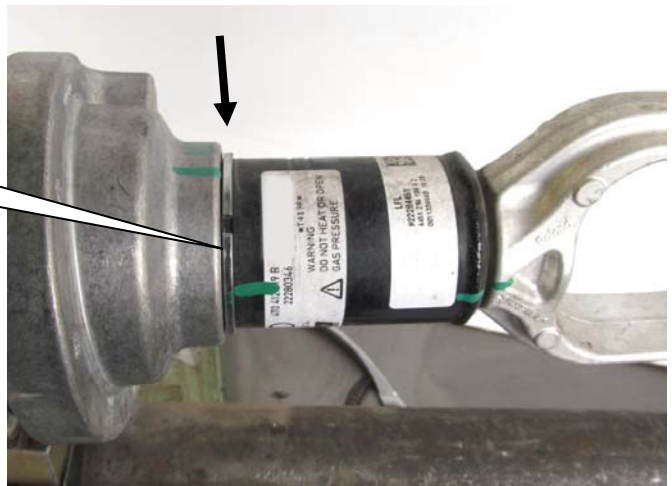

Front axle:

The damper can now be moved in the direction of arrow.

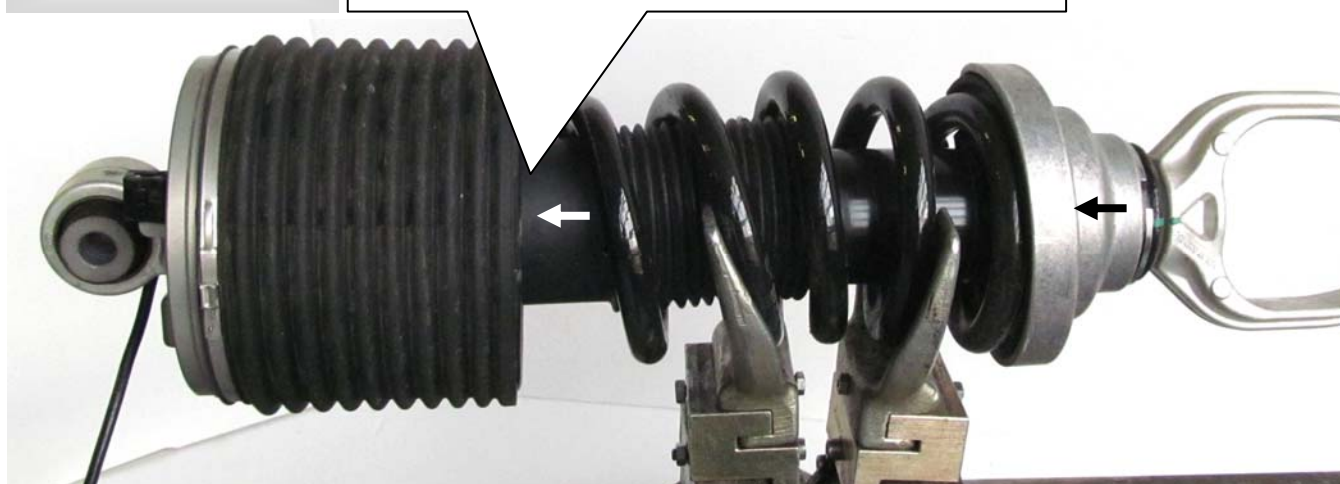

Mount the supplied special tool on the piston rod.



Dismantle the damper eye.




Front axle:

Carefully slide the lines sequentially through the damper eye.



Carefully pull the upper damper seal from the shock!

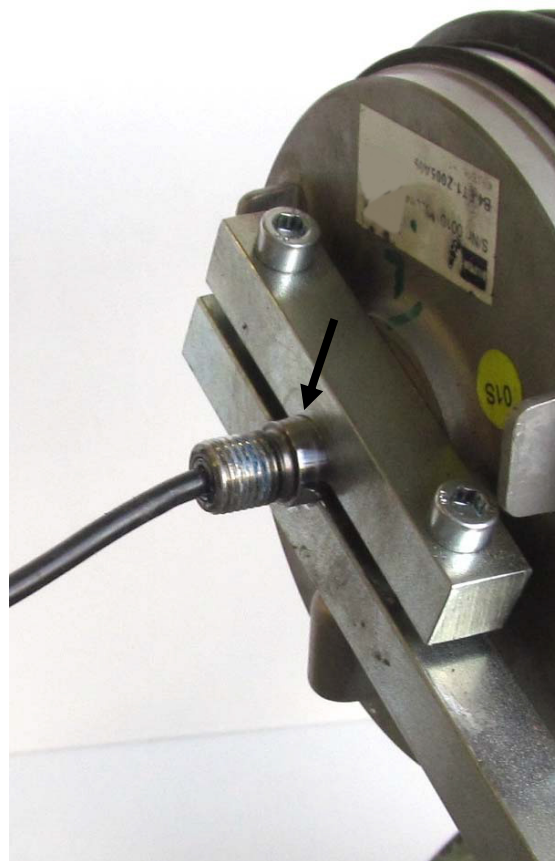


Front axle:

Dismantle the air spring.



Supplied damper with eye

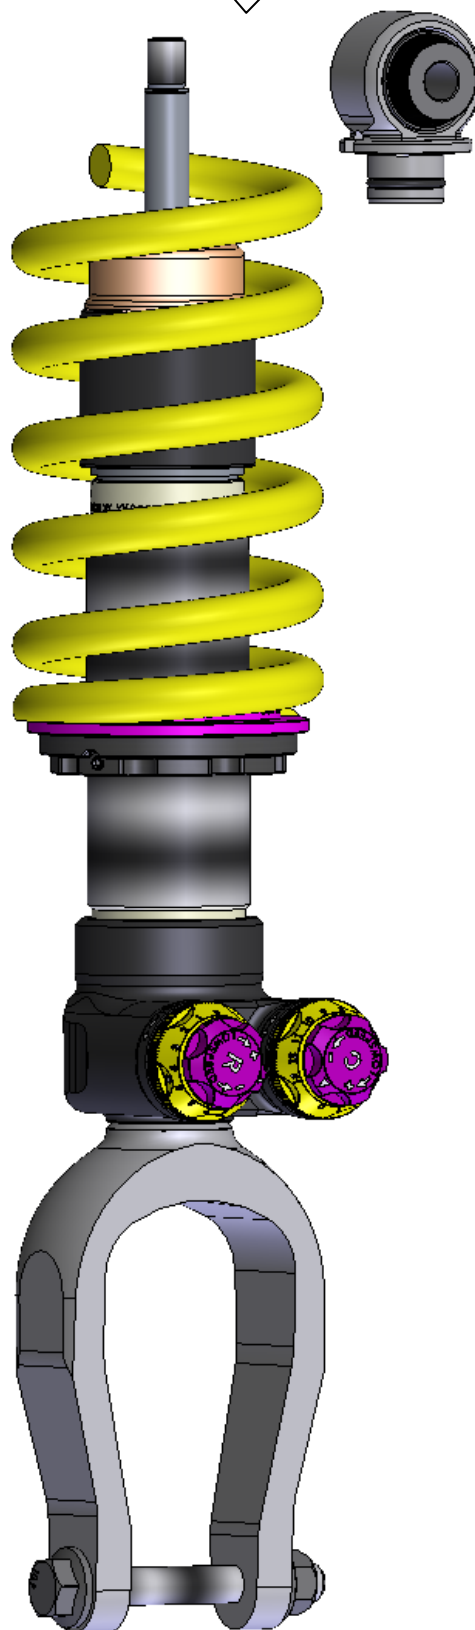

Front axle:



Put the air spring on the supplied coilover strut



Grease both seals a little.
Under no circumstances should grease be applied to the internal thread

Front axle:

Mount the supplied special tool on the piston rod.



Min. 3mm / 0,12" distance

Tighten the upper damper eye as far as it will go.
There must be at minimum 3 mm / 0,12" clearance between the damper eye and the special tool. If the distance is smaller, the clamp must be moved downwards.




Front axle:

Mount the original eye with the special tool supplied and secure it with "medium strength" screw locking agent. Tightening torque is 35 Nm (26 ft-lb).




Remove the clamping tool and position the air spring to match the marking.

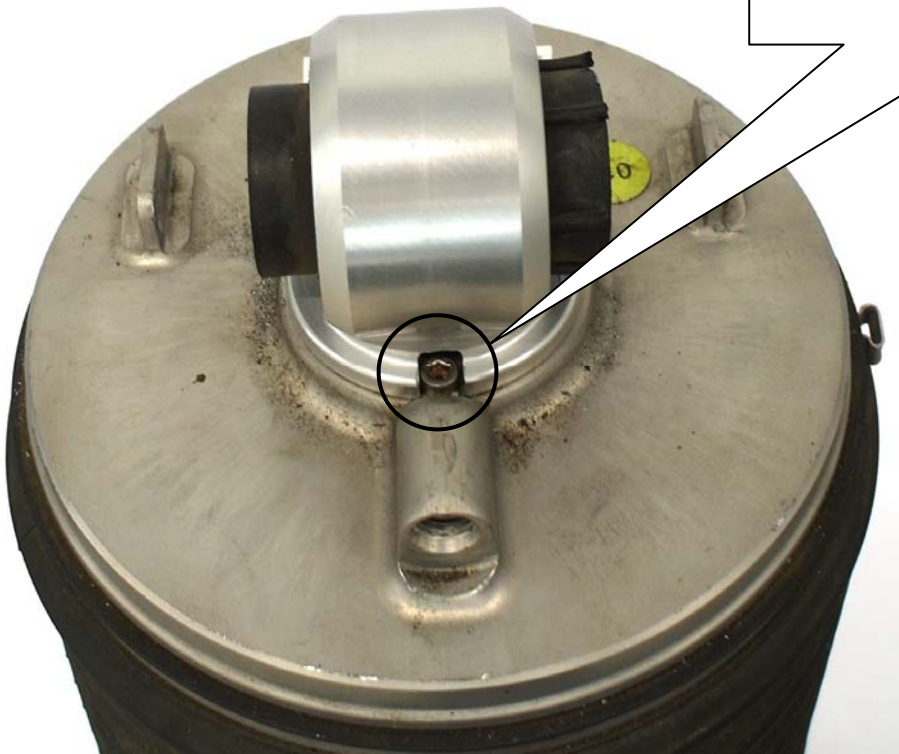

Front axle:



Please install the strut unit to manufacturers recommended settings regarding tightening torque and fixing specifications.

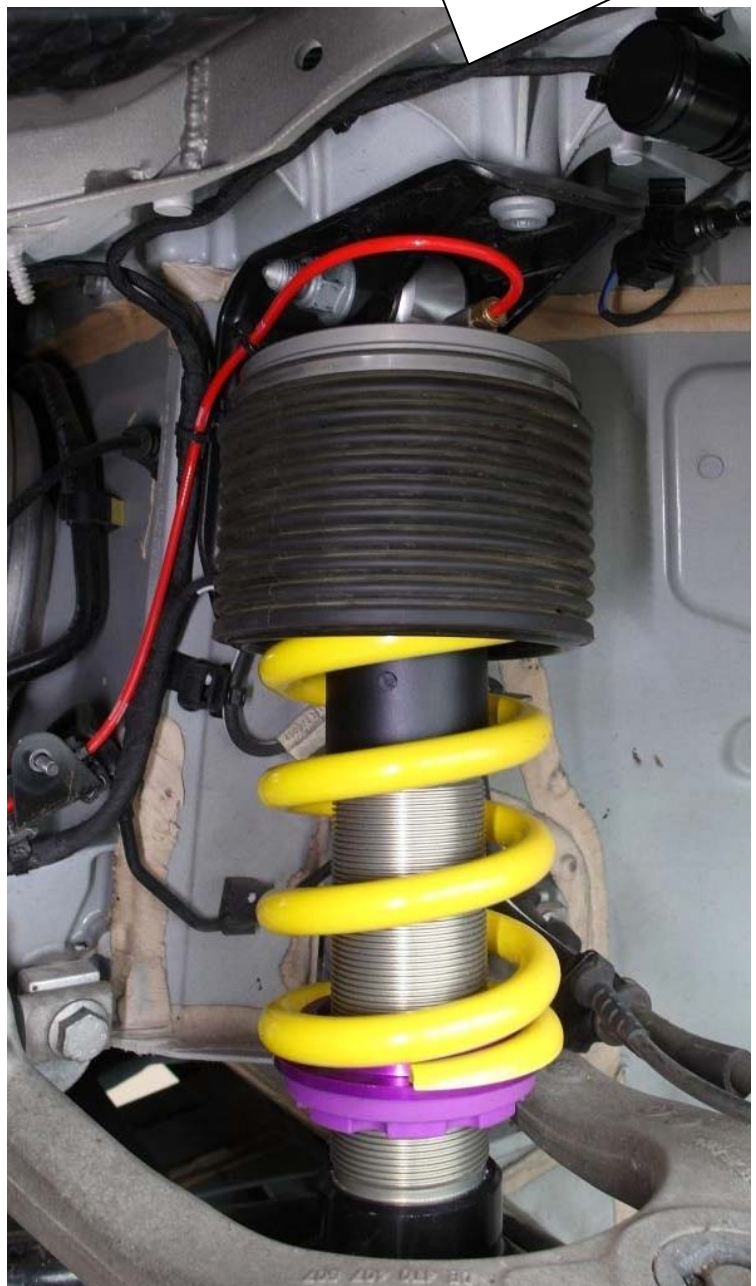

Rear axle:

n Supplied damper

Please install the strut unit to manufacturers recommended settings regarding tightening torque and fixing specifications.

