

POWER STEERING PUMP INSTALLATION

- 1. Use a suitable puller to remove a pressed on pulley from the pump. DO NOT hammer the pulley to free it from the shaft.
- 2. Install brackets, hoses and other parts on replacement pump.
- 3. Use enclosed installation kit to install pulley (If applicable). Use of any other tool will void the warranty.
- 4. Tighten hex nut until pulley is flush with the shaft. Put pressure and return lines in a drain pan and using fluid approved for your car, fill reservoir flushing both lines until fluid runs clear.
- 5. Install pump and tighten belt to correct tension.
- 6. See Flushing and Bleeding Instructions.