





Select 4 or 5 wheels then confirm

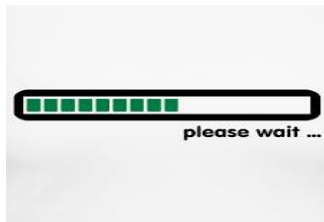


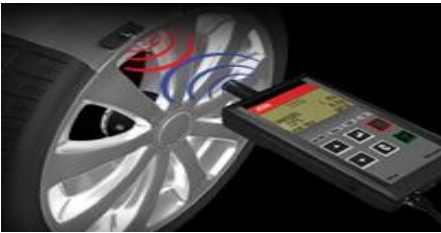

Low Bat Pass Fail **Tx**





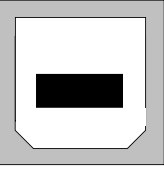

Low Bat **Pass** Fail Tx

USB CONNECTOR / CHARGING THE BATTERY

	<p>The USB connection allows software updates to be installed onto the tool using the WEB VT program. TPM sensor results can also be printed using this program.</p>
 	<p>The USB connection allows to charge the internal battery. The symbol is red during the charge. The symbol becomes green when the charge is complete. It can be done from a PC (14 hours) or with the wall charger (5 hours).</p>

LANGUAGE

	
<p>SELECT the language then confirm (OK).</p> 	<p>SELECT the language then confirm (OK).</p> 

LAUNCH TECH USA

CREATE • CHANGE