

# VALVE KEEPER REMOVER AND INSTALLER KIT

(LARGE SIZE: 5/16"–3/8", SMALL SIZE: 4.5–7.5mm)



Lisle puts everything within reach.

## REMOVAL:

1. Secure the valve with a rag or block to hold it up.
2. Position open end of handle over valve stem.
3. Push or tap handle to compress spring. The keepers will attach to the magnet in the handle.

---

## INSTALLATION:

1. Secure the valve with a rag or block to hold it up.
2. Place spring over valve stem.
3. Install keepers in retainer on valve stem. Position black installer tool over valve retainer. Push or tap installer to engage keepers in valve stem grooves.

**IMPORTANT:** Replace worn seals with umbrella-type seals only.



Learn more about automotive tools we have.