



## Replacing Your Tire Pressure Gauge Chuck

### Replacing Your Tire Pressure Gauge Chuck

1. Use pliers with serrated curved grip (most pliers have this). They will grip the chuck swivel as shown.
2. Use a wrench to remove the end portion of the chuck. Hold the pliers tightly to keep the serrated part of the swivel from turning. This may be tight at first.
3. Install the other chuck and tighten. Be sure "O" ring is intact.

