

## Wiring Instructions for PN 44930 Harness

This harness connects Longacre switch panels to your car. If you have just purchased a switch panel, discard the half of the connector with 3 unconnected wires.

- **Brown wire** to battery or power source (you can pickup power at the starter motor). The larger ring terminal goes to the battery cable terminal.
- **Two Yellow wires** one wire to ignition system; one wire to any accessory you want to shut off with the ignition gauge and warning lights, tach, etc.

  (NOTE: Both yellow wires are connected to the same source. Two separate wires are provided for your convenience.)
- **Green wire** to your starter solenoid. The smaller ring terminal goes to the solenoid.

Use a grommet where the wire goes through the firewall or any other sheet metal. If the headers are very close to the starter motor (& this harness) you may need additional heat insulation.

Check out the collection of racing ignition switches & switch panels we offer.

**Wiring Harness Color Code**