Installation Instructions



Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
- Every 3 months or 5000 miles check the cover tension and all components for tightness.

Congratulations!

You have purchased one of the many quality Lund® branded products offered by Lund International, Inc. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



INSTALLATION INSTRUCTIONS

PART#: 27021000

LICENSE PLATE RELOCATION BRACKET

PARTS LIST:

1	License Plate Bracket
2	6mm x 20mm Screws
2	Adhesive Foam Strips

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.
- 2. Attach two Adhesive Foam Strips on the Relocation Bracket as shown in Figure 1.
- 3. Remove center skid plate bolt from Bull Bar. Position Relocation Bracket against cross tube and on top of skid plate. Attach Relocation Bracket to bull bar using the skid plate bolt removed in this step (Figure 2). Tighten at this time
- 4. Attach license plate to Relocation Bracket using the included (2) 6mm x 20mm Screws. Tighten at this time.

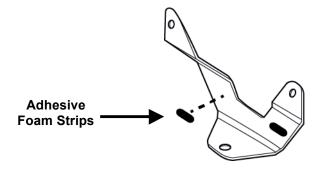


Figure 1

