 





## Tundra Roll Up Tonneau Cover

For proper installation and best possible fit, please read all instructions BEFORE you begin.


### Contents



 (A) Cover Assembly



 (B) Driver Side Rail



(C) Passenger Side Rail



(D) Bolt 16X



 
(E) Washer 16X



(F) Lock Washer 16 X



(G) FlangeNut 2X



(H) Carriage Bolt 2X

### Tools Required



 
10mm  
Combination  
Wrench



T-30




10mm  
Socket



### Important



### WARNING/CAUTION/NOTE


Please read this manual and follow its instructions carefully. To emphasize special information, the symbol  and the words **WARNING**, **CAUTION** and **NOTE** have special meanings. These special meanings apply except when laws or regulations require that the signal words be used with a different meaning.

### Preparation Before Installation


- Wash the upper rail surfaces of the truck bed.
- Be sure to completely dry the upper surfaces of your truck bed before installing your rails.

**Vehicles Equipped with Utility Tracks**

Note: If Vehicle Is not Equipped with utility tracks proceed to step 4 .

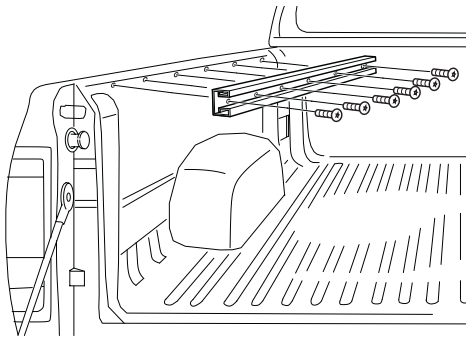


Front View of Utility Track.

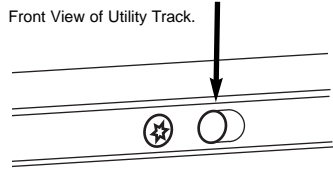

2A: Remove with End Cut Pliers after removing Utility Track.



Rear View of Utility Track.

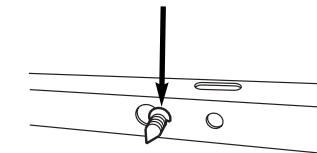


1

1A: Remove Utility Track on both sides of truck bed. Save bolts for re-installation.

**Vehicles Equipped with Utility Tracks**

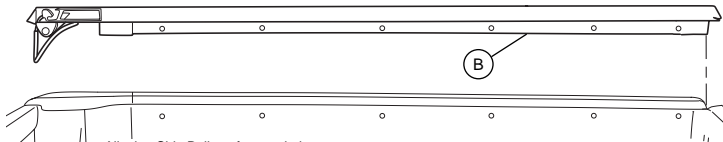 


Aligning Side Rails to factory holes.

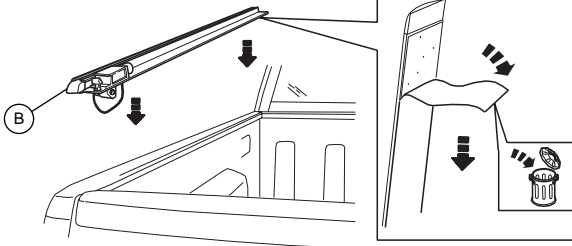


2

Remove the white backing from the foam on the front and side rails. It will be necessary to release the buckles on the front rail to do this but do not unroll the cover. Re-fasten the buckles once the foam backing is removed. With the tailgate closed, lay the ends of the driver side rail on the truck bed bulkhead and tailgate. The latches are positioned toward the rear and the foamed side of the rail faces the inner side wall of the truck bed.

**Vehicles Equipped with Utility Tracks**

 


Re-Install factory fasteners through the Utility Track, the Side Rail (item B) and into the factory bed holes. Torque to 35 in-lbs

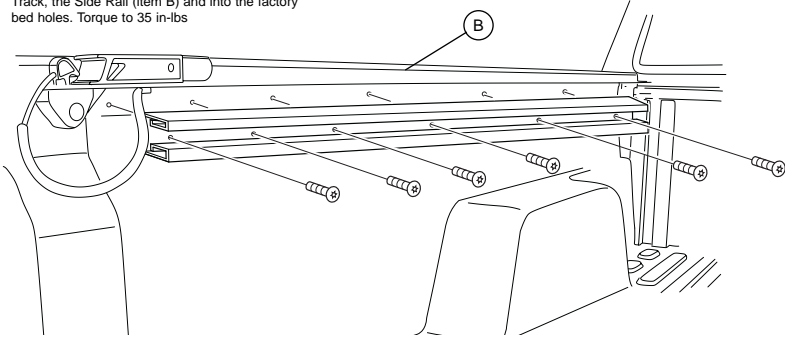

3



**Vehicles Not Equipped with Utility Tracks**

Note: For Vehicles Equipped with Bedliners, Remove and mark outer edge of raised areas. Cut outer edge of raised area to access factory bed holes. Re-install bedliner after cutting marked areas on both sides.

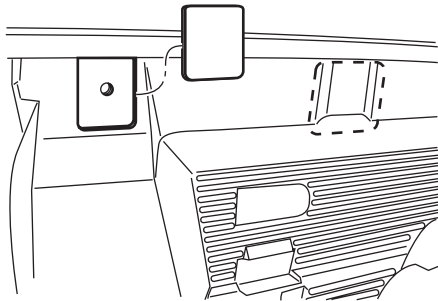


4

 Vehicles Not Equipped with Utility Tracks

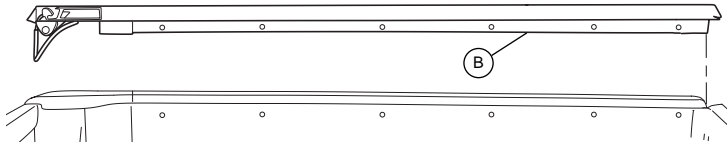


Aligning Side Rails to factory holes.

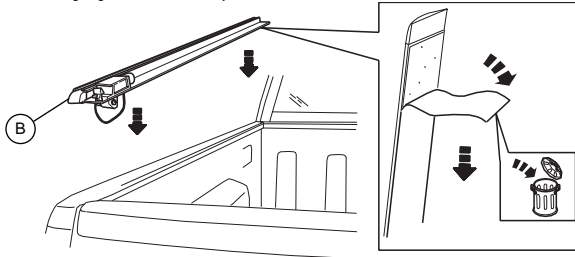


Remove the white backing from the foam on the front and side rails. It will be necessary to release the buckles on the front rail to do this but do not unroll the cover. Re-fasten the buckles once the foam backing is removed. With the tailgate closed, lay the ends of the driver side rail on the truck bed bulkhead and tailgate. The latches are positioned toward the rear and the foamed side of the rail faces the inner side wall of the truck bed.

5



 
Vehicles Not Equipped with Utility Tracks





Align side rails to threaded bosses in truck bed. Install fasteners (items D, E & F) through the Side Rail (item B) and into the factory bed holes. Torque to 35 in-lbs.

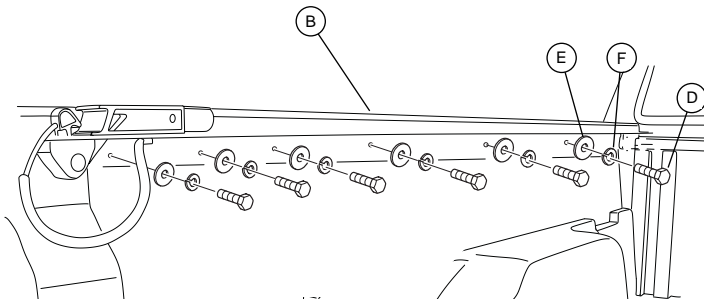


6

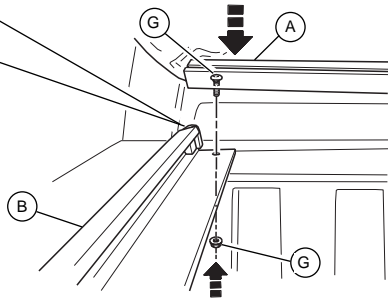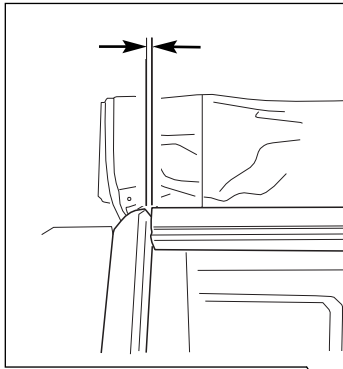 

Loosely install the flange nuts as shown.  
Position the front rail so the gaps at each end of the front rail are equal.  
Tighten both flange nuts.

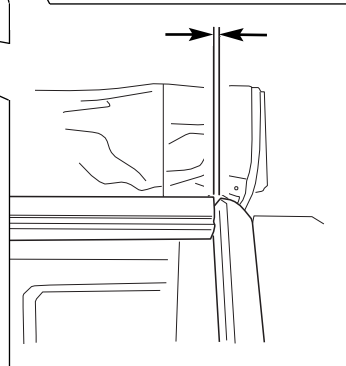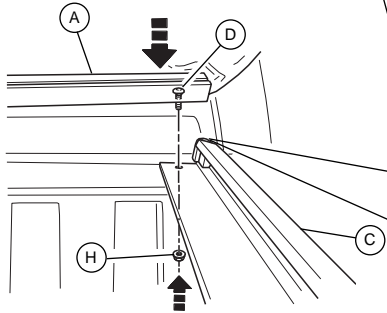


Installation Steps

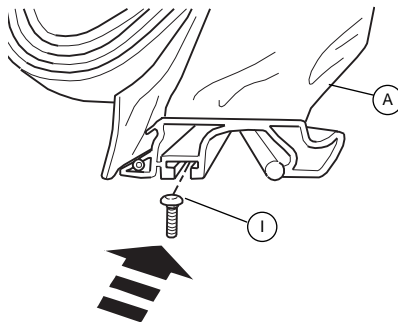


Slide one carriage bolt (item I) approx 1/2" into the t-slot at each end of the front rail as shown.

8

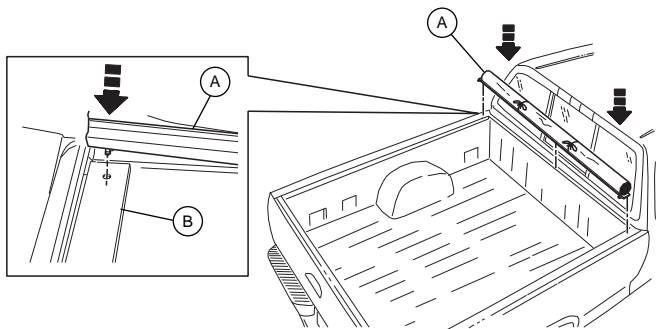




Set the cover assembly in place as shown.

9


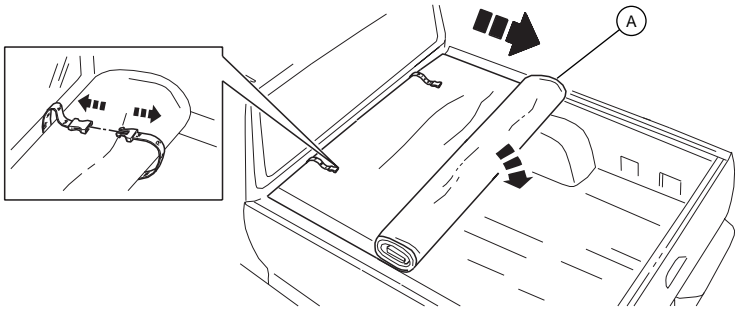


Release the buckles and unroll the cover.

 10

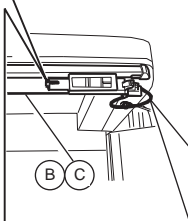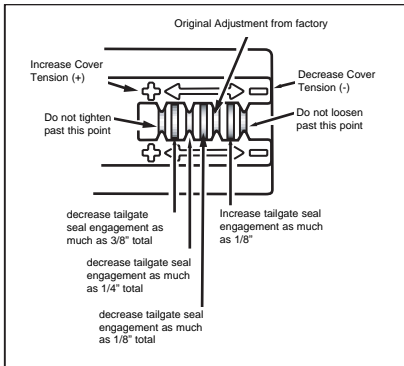

Adjusting tension increases or decreases the tailgate seal engagement. Proper tensioning shown above

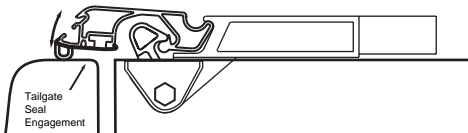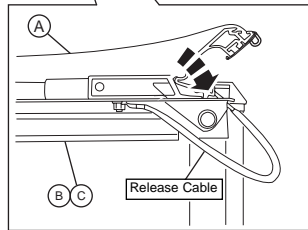

Engage rear rail to latch assembly and rotate down as shown.  
If the cover is too tight, loosen the adjusting bolts evenly on both sides towards the -  
If the cover is too loose, tighten the adjusting bolts evenly on both sides towards the +

Note: Proper cover tension is achieved when the rear rail requires moderate pressure to fully latch.

To access the truck bed, pull both release cables and roll cover forward.  
Fasten buckle straps to stow cover.

11

## Inspection After Installation

1. After installation is complete, confirm proper operation.

## Care and Cleaning

1. Wash only with mild soap & dry with a clean cloth.
2. Avoid the use of automatic "brush - style" car washes.
3. Do not use cleaning solvents of any kind.
4. Periodically check the cover tension and all components for tightness.  
Refer to step 9 for cover tension adjustment.
- ⚠ 5. Do not use release cables as handles.
- ⚠ 6. Do not pull on release cables to enter truck bed.
- ⚠ 7. Do not use any part of this tonneau as a tie down.
- ⚠ 8. Do not drive with the cover un-secured.

## Congratulations!

You have purchased one of the many quality products offered by Lund. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

Find out more about tonneau covers we have.