


WE  
KNOW  
MALONE

- ~ ROOF RACK SYSTEMS
- ~ STEELTOP™
- ~ 50", 58" and 65"

Rev 11/16  
MPG201  
MPG202  
MPG203



**CHANGING THE WAY YOU GET THERE**

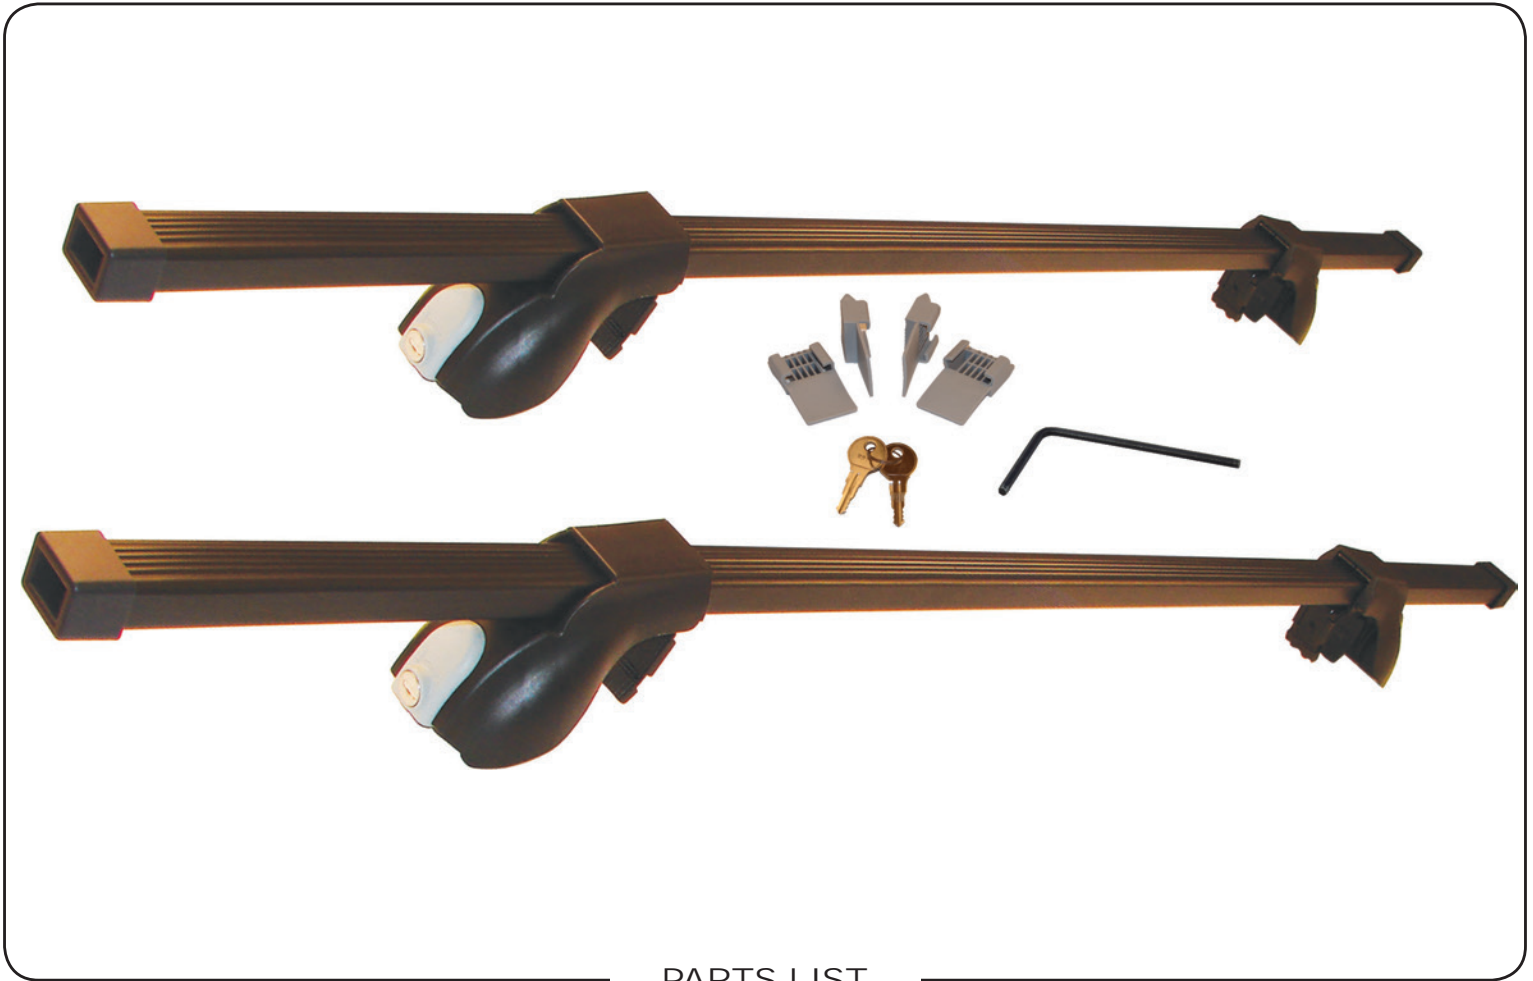

PARTS LIST


## *Installation & Loading Instructions - Please Read Before Beginning*

**IMPORTANT WARNING:** All vehicular transports are potentially hazardous. Any person(s) using Malone products are personally responsible for following the given directions for use and/or installation and accepts full responsibility for any and all damages or injury of any kind including death, which may result from their use and/or installation.

It is critical that all Malone racks and accessories be properly and securely attached to your vehicle. Improper attachment could result in a serious accident, and could cause serious bodily injury or death to you or to others. You are responsible for securing the racks and accessories to your car, checking the attachment's prior to use, and periodically inspecting the products for adjustment, wear, and damage.

You must read and understand all of the instructions and cautions supplied with your Malone products(s) prior to installation or use. If you do not understand all of the instructions and cautions, or, if you have no mechanical experience and are not thoroughly familiar with the installation procedures, you should have the product installed by a professional installer.


1). Remove the cross bars and components from the packaging. Using the key, unlock and remove the security shield. Insert the installation wrench into the hex head tightening bolt and turn counter clockwise to widen the capture distance of the feet.

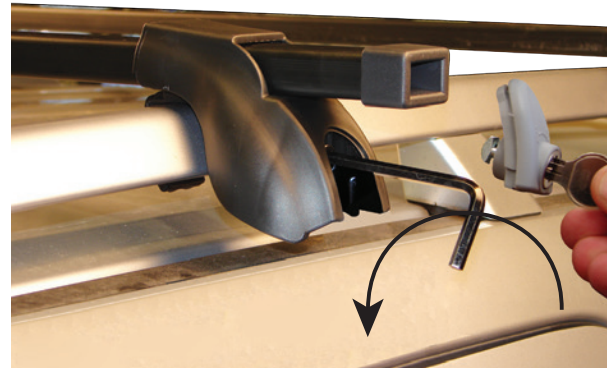

2). Lift the forward section of the tower to adjust its position. Center towers over the raised side rails.



3). Place cross bars onto the vehicle's raised side rails. Adjust the distance between the bars for the load to be carried. Note: The bars must be separated by a minimum of 24".

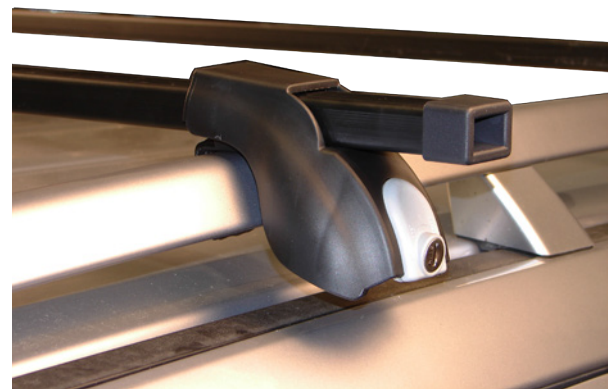

Warnings / Limitations: The load you are carrying plus the weight of the rack must not exceed the maximum weight limitation of the vehicle's factory raised side rails. Before installing, confirm your vehicle's factory specifications.

- . Never assume a cross bar will fit. Always refer to Malone's Fit Guide for proper, correct and approved vehicle fit.
- . Locks must be turned periodically and lubricated to ensure smooth operation. Use of a dry lubricant is recommended.
- . Confirm that all bolts and locks are firmly secured prior to transport. Periodically check the load during transport.
- . Do not continue to use the product if excessive corrosion, deformity or any mechanical defect is detected.
- . Check local and state laws governing projection of objects beyond the perimeter of the vehicle.
- . Malone locks are designed to deter vandalism and theft but should not be considered theft proof.
- . Obey all posed speed limits and traffic cautions. Adapt your driving for the load being transported.
- . Do not use Malone cross bars for purposes other than what they were designed for.
- . Not for use on trailers or any other modes of transport other than vehicle rooftop transport.
- . Failure to follow these guidelines will void the warranty.

4). Smaller sized factory side rails require the rubber spacer blocks. To attach, insert a rubber spacer block to the inside foot of each tower system.



5). Push the rubber spacer block up each foot until the top flat section is formed around the top of the foot.



6). To complete the installation, insert the installation wrench and tighten the bolt clockwise until the feet hold the cross bars firmly in place. Apply pressure to confirm that no movement of the cross bars can be felt. Position the security shield into the tower and lock with key.



Warnings / Limitations: The load you are carrying plus the weight of the rack must not exceed the maximum weight limitation of the vehicle's factory raised side rails. Before installing, confirm your vehicle's factory specifications.

- . Never assume a cross bar will fit. Always refer to Malone's Fit Guide for proper, correct and approved vehicle fit.
- . Locks must be turned periodically and lubricated to ensure smooth operation. Use of a dry lubricant is recommended.
- . Confirm that all bolts and locks are firmly secured prior to transport. Periodically check the load during transport.
- . Do not continue to use the product if excessive corrosion, deformity or any mechanical defect is detected.
- . Check local and state laws governing projection of objects beyond the perimeter of the vehicle.
- . Malone locks are designed to deter vandalism and theft but should not be considered theft proof.
- . Obey all posed speed limits and traffic cautions. Adapt your driving for the load being transported.
- . Do not use Malone cross bars for purposes other than what they were designed for.
- . Not for use on trailers or any other modes of transport other than vehicle rooftop transport.
- . Failure to follow these guidelines will void the warranty.