


R1234yf OIL INJECTOR

OIL INJECTION INSTRUCTIONS:

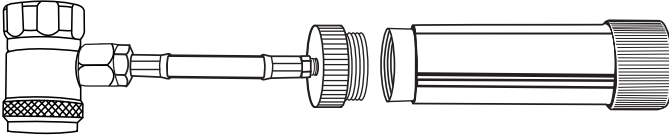

PLEASE USE CAUTION!!

- When injecting oil into a pressurized system, **ALWAYS** wear safety glasses and gloves!
- Never breathe refrigerant vapor!

A. PURGING AIR FROM THE HOSE ASSEMBLY

It is important to eliminate any air in the hose before injecting oil into the A/C system. (This process is necessary only once for the setup).

B. INJECTION

1. Turn the A/C system and engine off!
2. Connect injector to the low side service port of A/C system.
Hold body of injector.
Use (I) starting line on handle end as a guide.
Turn handle clockwise to inject 1 application of oil.
(Approximately 3 1/4 turn(s) for 1/4 oz oil).
3. Disconnect injector from the system and clean any excess oil left around the service port.

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm.