



# Mastercool<sup>®</sup> Inc.

*"World Class Quality"*

## CHARGING MODULE INSTRUCTIONS



### WARNING

**Wear Safety Goggles**

**Avoid Contact with Refrigerant**

**Make sure the battery light is OFF before using the charging module.**

### OPERATING INSTRUCTIONS:

1. Connect the USB cord from the charging module to the scale control box.
2. Connect the short red hose from the inlet port to the refrigerant supply tank. Connect the yellow service hose from your manifold gauge set to the outlet port. (If necessary, use the adapters provided to make the connections.)
3. Follow "Programmed Charging" Directions from the operating instructions of the scale. When charging begins, the solenoid valve will open and the green light will be on.

### IMPORTANT!

**The latching solenoid valve can become latched in the OPEN position during shipment.**

**To ensure that the charging module is in the CLOSED position, install all batteries and connect the USB cable between the control module and the charging module. Press the ON/OFF button twice to ensure that the solenoid valve returns to the CLOSED position. If the solenoid was in the OPEN position, a "click" will be heard when the solenoid closes.**

**Since the latching solenoid is sensitive to "jarring" by design, the above procedure should be applied whenever the equipment is moved or transported.**

**⚠ WARNING:** This product can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm.

98230-INST

Learn more about [other automotive a/c tools & equipment](#) by [Mastercool on our website](#).