## INSTALLATION INSTRUCTIONS FOR SWAY BAR LINK

FORM NUMBER
4477



CAUTION: Proper service and repair procedures are essential for safe and reliable installation of chassis parts and require experience and tools specially designed for the purpose. Installation of these parts MUST be performed by a qualified technician, otherwise an unsafe vehicle and/or personal injury could result.

CAUTION: Prior to servicing the steering and suspension system, the S.I.R. (Supplemental Inflatable Restraint) must be disabled. Failure to do so may result in an accidental air bag deployment and/or personal injury.

**NOTE:** The parts in this kit are designed to replace the worn or nonfunctioning original equipment parts in the vehicle as produced by the vehicle manufacturer. These parts are not designed for installation on vehicles where the vehicle suspension and/or steering systems have been modified for racing, competition, or any other purpose.

**NOTE:** This kit may contain self-tapping grease fitting(s) for threaded or non-threaded holes.

## **DISASSEMBLY**

1. Disconnect the negative battery cable from the battery.

- Raise and support the vehicle at the manufacturers recommended points.
- 3. Remove and discard nut retaining sway bar link to sway bar.
- 4. Remove upper link nut, washers and bushings at bracket.

## **ASSEMBLY**

- 1. Install 90° grease fittings, but do not tighten at this time.
- 2. Install sway bar link.
- 3. Torque sway bar link lock nut to sway bar to 69 N-m (51 ft lbs.).
- Install included kit bag components cup washers (2), centering washer (1), bushings (2), and lock nut (1) to rod at strut bracket.
  - Place one cup washer onto rod with concave facing threads.
  - Add one rubber bushing.
  - Position the flange of the centering washer through the hole on the strut bracket.
  - Place remaining rubber bushing on rod.
  - Add the other cup washer with concave facing socket.
  - Install lock nut
- 5. Torque sway bar link rod nut at bracket to 20 N-m (14 ft. lbs.).

Tighten and position grease fitting for easy access. Lubricate with a good grade of chassis grease.