



AIR BLEED VALVE
PART #63765

DO NOT INSTALL THIS VALVE WHEN COOLING SYSTEM AND ENGINE ARE HOT. Wait until engine and cooling system components are cool to the touch. You can receive serious burns if the warning is not followed.

- For optimum performance, install at the highest point in the system. This Valve can also be installed on the water pump.
- Drill and tap hole for 1/8" NPT thread, install Air Bleed Valve with Teflon tape or similar thread sealer to prevent leaks.
- After system is filled, run engine and water pump, push button on the Air Bleed Valve to release air. CAUTION: only do this while engine is cool.