



INSTALLATION INSTRUCTIONS
P/N 68790 - VALVE COVER BREATHER BAFFLE

NOTE: These baffles are not for use on engines equipped with stud girdles.

1. Center the baffle directly under the breather hole in the valve cover.
2. From the inside of the valve cover, transfer drill two 3/16" holes through the valve cover 2 3/8" apart.
3. Use the 10-32 x 1/2" bolts, washers and locknuts provided to secure the baffle in place. Put the washer between the head of the bolt and the valve cover and the washer will prevent oil seepage.

NOTE: The baffle can be mounted parallel with, or perpendicular to, the long axis of the valve cover. Be sure to check for clearance between rocker arm assembly and baffle before starting engine.

PARTS LIST

- | | |
|---|-----------------------------|
| 1 | VALVE COVER BREATHER BAFFLE |
| 2 | 10-32 X 1/2" HEX HEAD BOLTS |
| 2 | 10-32 LOCKNUTS |
| 2 | 3/16" SAE FLAT WASHERS |