



IMPORTANT NOTE for 1563 & 1564:

Gauge may not read 0 due to internal air pressure build up. It will read properly once pressurized with fuel.

199R11565