



Installation Instructions for Hood Lock #1472

1. Locate a convenient point on the hood directly over a horizontal surface below the hood, such as a radiator core support. Use rubber gasket as a template and drill 3/4" hole in hood.
2. Close hood and carefully mark a center hole on the horizontal cross piece inside hood compartment directly below large center hole. Drill 3/8" hole for striker bolt.
3. Adjust striker bolt to all 3/4" from top of striker to outer hood panel. Align slot in top of bolt to accept pin at base of lock.
4. Install stainless plate, gasket and lock from outer part of hood. On inside of hood, install special lock washer and tighten 3/4" nut.
5. Align indicator dog on key with notch in lock spindle, depress key and rotate clockwise to lock, counterclockwise to unlock.
6. Repeat operation on other side of hood to install second hood lock.
7. Hood locks are pin tumbler actuated circumferential locks, use only special lock lubricants.

CAUTION: *These locks are not designed to replace the hood latch. The factory installed hood latch must remain in use.*