



# INSTALLATION INSTRUCTIONS

## **MSD Blaster GM Dual Tower Coil Pack** **PN 8224**

**IMPORTANT:** Read instructions before attempting the installation.

**NOTE:** The PN 8224 Blaster Coil is designed as a direct replacement for most GM 2-tower coil packs used in the mid '80's to '90's.

### **Parts Included:**


1 - Blaster GM Dual Tower Coil Pack

**WARNING:** During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

This MSD GM Dual Tower Coil is designed as a replacement coil and produces a high voltage spark. To get even more ignition performance, install an MSD DIS Series Ignition Control. To ease installation of a DIS Ignition use MSD's Coil Interface Modules, PN 8870 (See Figure 2).

1. Remove the coil wires and the two retaining screws.
2. Remove the factory coil.
3. Position the new MSD GM Dual Tower Coil to the module making sure the terminals are aligned.
4. Install the hold-down screws and plug wires.

**WARNING:** High Voltage is present on the coil terminals. DO NOT touch the coil terminals or tower when the engine is cranking or running.

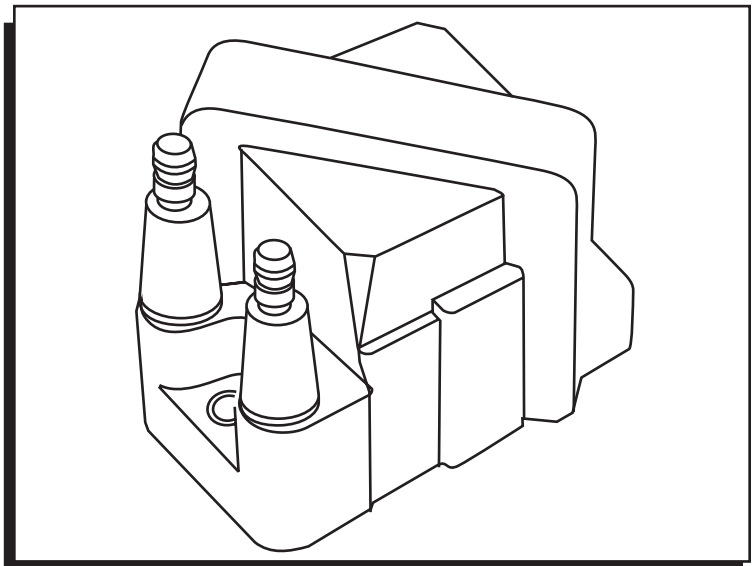

**Figure 1 The MSD GM Dual Tower Coil Pack.**

# MSD<sup>®</sup> IGNITION INSTALLATION INSTRUCTIONS

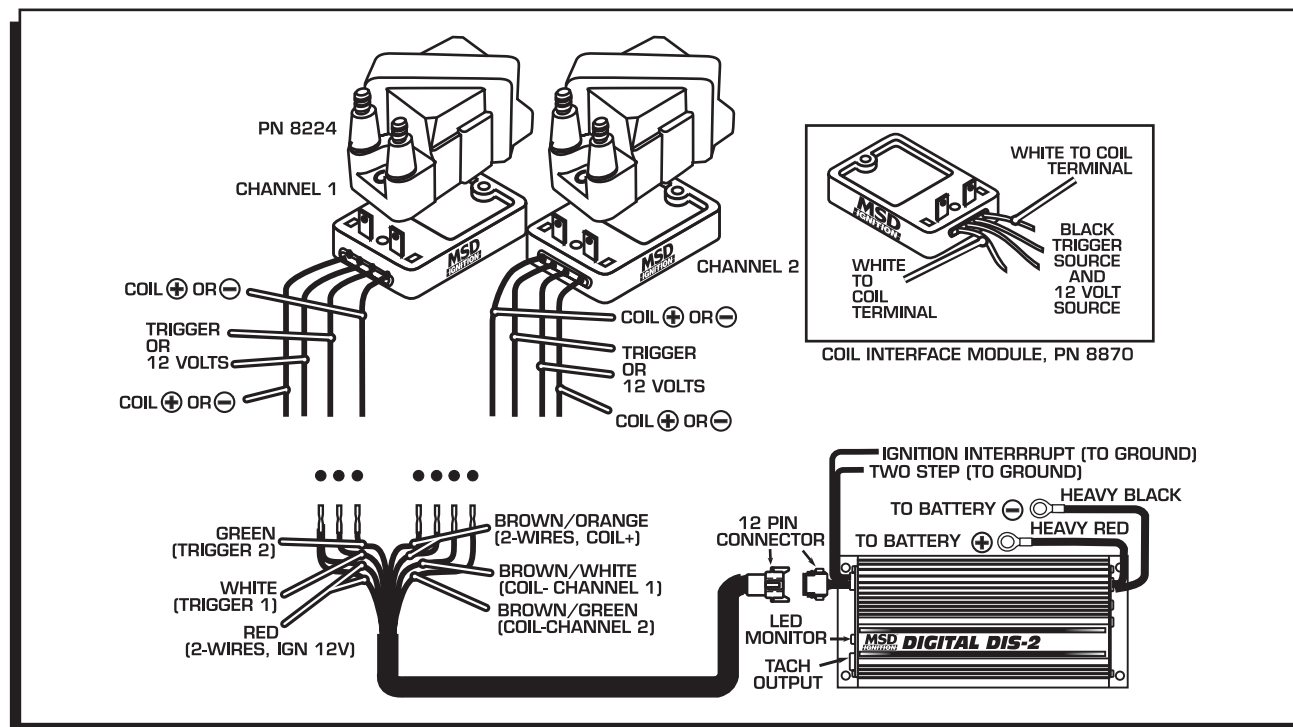


Figure 2 Complete Installation with an MSD DIS-2 Ignition.

## Limited Warranty

MSD IGNITION warrants this product to be free from defects in material and workmanship under its intended normal use\*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD Ignition. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD Ignition. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD Ignition or its suppliers be liable for special or consequential damages.

\*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD Ignition. Any modifications to this item or if it is used on an application other than what MSD Ignition markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD Ignition will accept no liability for custom applications.