

MSD[®] IGNITION INSTALLATION INSTRUCTIONS

MSD Blaster Ford 4-Tower Coil Pack

PN 8241

IMPORTANT: Read instructions before attempting the installation.

Parts Included:

1 - Blaster Ford 4-Tower Coil Pack
4 - Aluminum Spacers

4 - Socket Head Cap Screws
4 - Star Washers

WARNING: During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

Note: If the Coil Pack is being installed on a '99-'04 Ford Focus Zetec, the spark plug wires will require replacement. MSD offers a set, as PN 32939.

This MSD Ford 4-Tower Coil is designed as a replacement coil and produces a high voltage spark. To get even more ignition performance, install an MSD DIS Series Ignition Control (See Figure 3).

1. Note their position, then remove the coil wires, harness and the four retaining screws.
2. Remove the factory coil.
3. Install the new MSD Coil and retaining screws (On '99-'04 Focus 2.0L engines, refer to Figure 2).
4. Plug in the wiring harness and connect the plug wires.

WARNING: High Voltage is present on the coil terminals. DO NOT touch the coil terminals or tower when the engine is cranking or running.



Figure 1 The MSD Ford 4- Tower Coil Pack.

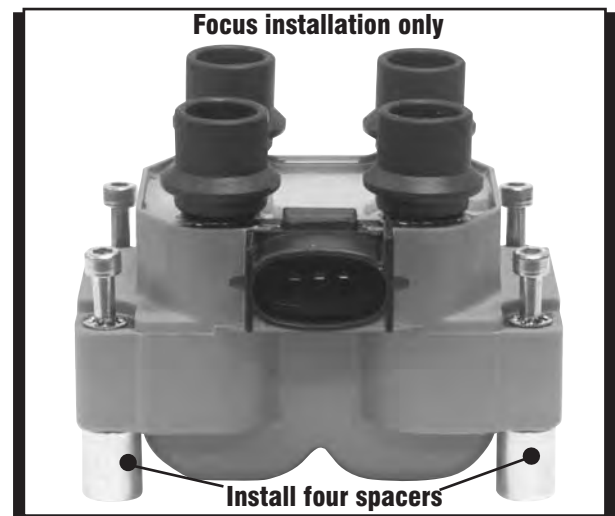 


Figure 2 Coil Installation on a Focus Zetec.

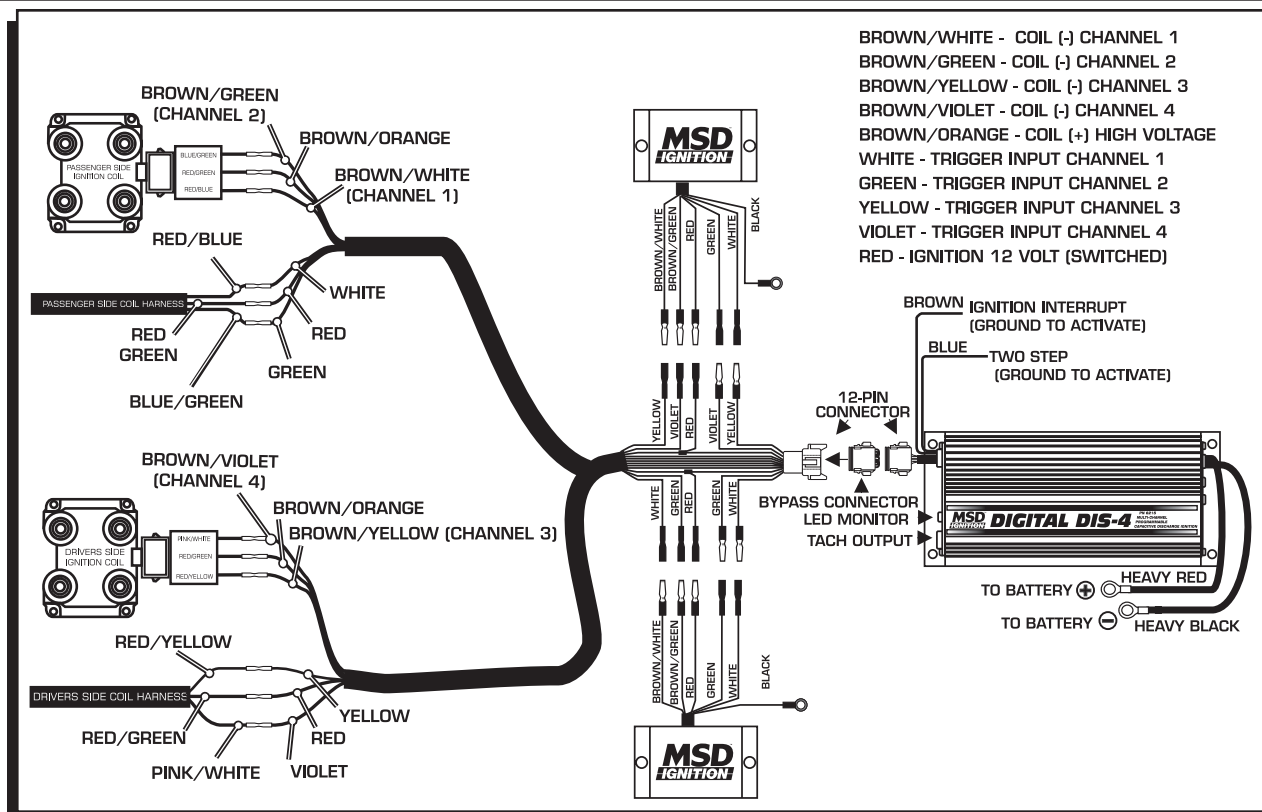 


Figure 3 Complete V8 Installation with an MSD DIS-4 Ignition.

Limited Warranty

MSD IGNITION warrants this product to be free from defects in material and workmanship under its intended normal use*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD Ignition. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD Ignition. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD Ignition or its suppliers be liable for special or consequential damages.

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD Ignition. Any modifications to this item or if it is used on an application other than what MSD Ignition markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD Ignition will accept no liability for custom applications.