

MSD **IGNITION** **INSTALLATION INSTRUCTIONS**

MSD Blaster HVC-2 Coil

PN 8253

Parts Included:

- | | |
|-----------------------------------|------------------------|
| 1 - Blaster HVC-2 Coil | 2 - Ring Lug Terminals |
| 4 - Vibration Mounts and Hardware | 2 - Brass Screws |
| 2 - Brass Lock Washers | |

WARNING: Disconnect the battery during installation. When disconnecting the battery, always remove the negative cable first and install it last.

The Blaster HVC-2 Coil is designed to be used with an MSD 6 Series Ignition Control only.

INSTALLATION

1. The Coil can be mounted in any position, but should be away from direct heat sources. Use the Coil Template (page 3) and mark the location of the mounting holes. Use a 3/16" bit to drill the holes.
2. Install the supplied vibration mounts to the coil and install the coil.
3. The MSD Orange wire connects to coil positive (+). Black connects to coil negative (-).

Note: If the wires need to be lengthened, it is recommended to use 14-Gauge wiring for the primary coil wiring.

4. Connect the coil secondary wire to the coil and distributor cap.

WARNING: Very high voltages are present at the coil when the engine is running. Never connect any test equipment or touch the coil while the engine is cranking or running.

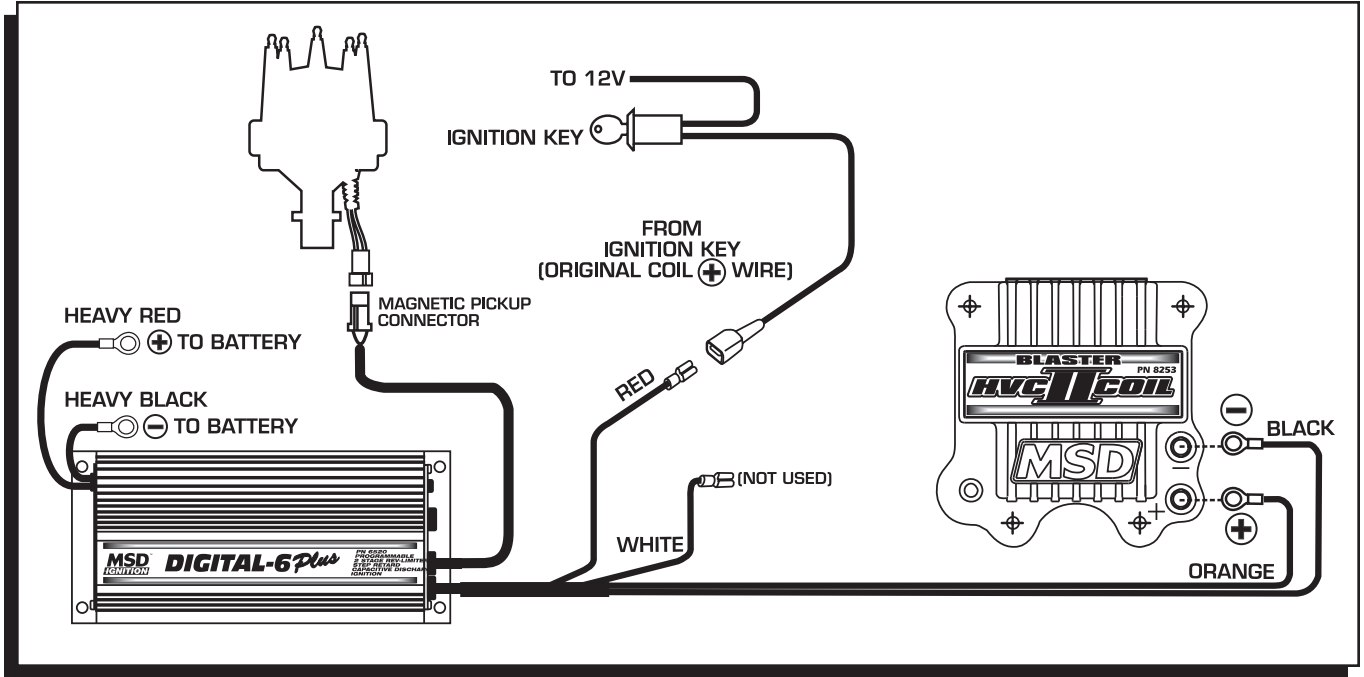


Figure 1 Wiring to an MSD Digital-6 Plus and MSD Distributor.

WARNING: Very high voltages are present at the coil when the engine is running. Never connect any test equipment or touch the coil while the engine is cranking or running.

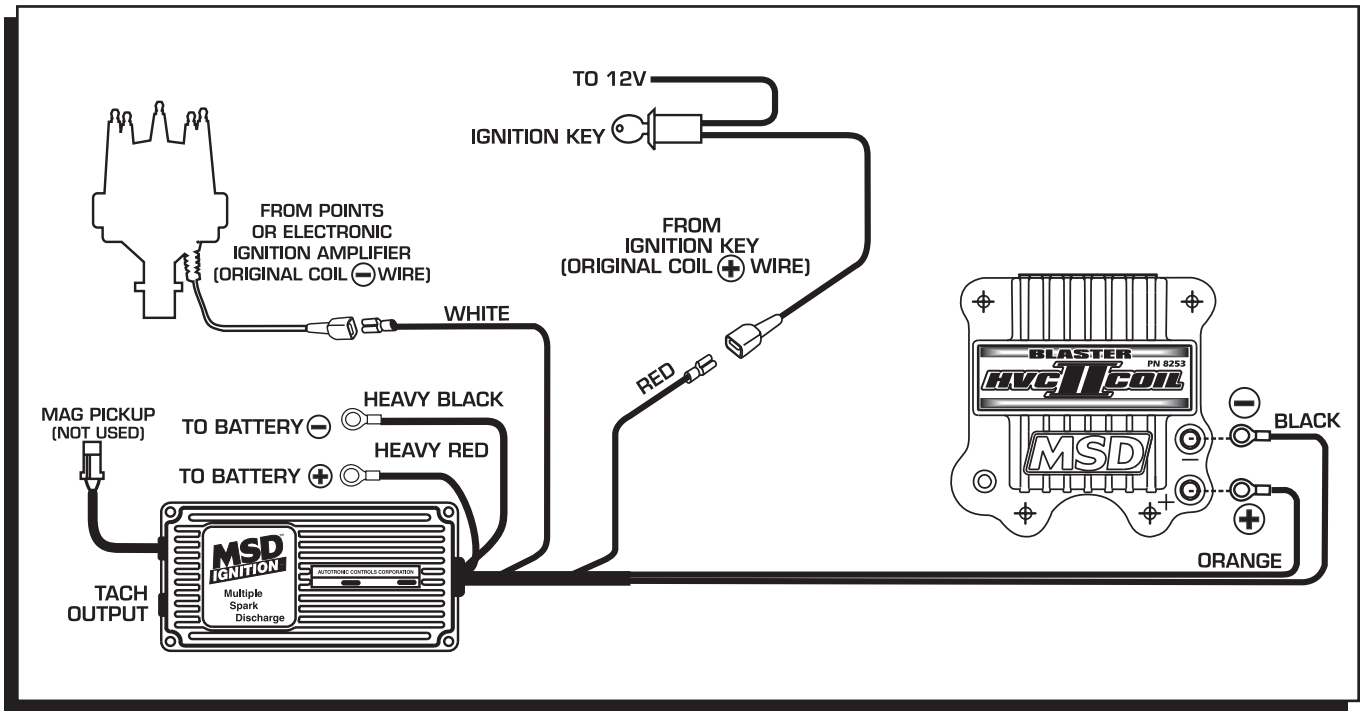


Figure 2 Wiring to an MSD Ignition with a Points/Amplifier Distributor.

MOUNTING TEMPLATE

CAUTION: Due to some printer settings, it is recommended to compare the document to the actual part dimensions before drilling holes! If the printed document does not match the actual part dimensions, correct the printer scaling settings and print again.

