

MSD[®] IGNITION

INSTALLATION INSTRUCTIONS

Rotor and Rotor Base **for MSD Crank Trigger Distributors** **with the Large Cap** **PN 8457**

Parts Included:

- 1- Rotor
- 1- Rotor Base
- 2- Screws and Belleville Washers

The Rotor and Base must be used with MSD Crank Trigger Distributors; PN 84697, 8558, 84997, 84698, 8448, 85691, 8569, 2340.

This Rotor and Base have been updated and **will not interchange** with the older style rotor or base. To differentiate between the two, see Figure 1. The PN 8457 Rotor and base replaces rotor, PN 84597, and base, PN 8465.

Note: The position of the new rotor on the base has also changed which means that the rotor phasing **must** be reset.

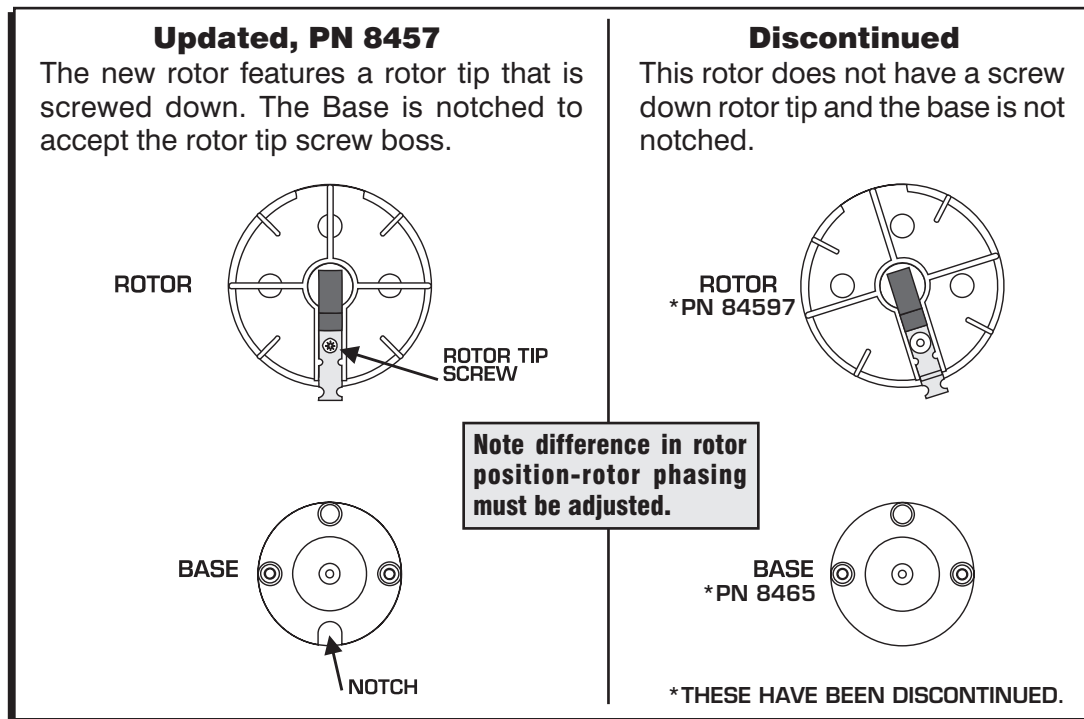


Figure 1 Updated and Discontinued Rotors and Bases.