

# **MSD** **IGNITION** **INSTALLATION INSTRUCTIONS**


## **MSD Rotor, HVC Pro-Billet Distributor** **PN 8484**

### **Parts Included:**

1 - Rotor

### **ROTOR REPLACEMENT**

1. Lightly lubricate O-rings on reluctor to ease rotor installation.
2. Install the reluctor. Tighten the pinch bolt until the gap in the rotor is closed. Do not overtighten (Figure 1).

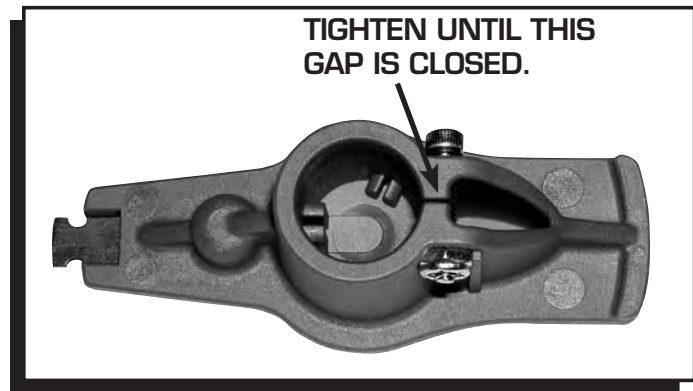

**Figure 1.**