



INSTALLATION INSTRUCTIONS

Ford® Modular Coil-on-Plug 4.6/5.4L, 4-valve, '99-'14, PN 5514/PN 55148 5.0L, 2011-14, PN 5515/PN 55158

IMPORTANT: Read the instructions before attempting the installation.

Parts Included: PN 5514/PN 5515
1 - Coil

Parts Included: PN 55148/PN 55158
8 - Coils

WARNING: During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

Note: MSD recommends using a dielectric grease such as Spark Guard, PN 8804, to help the installation, removal and to prevent moisture build-up in the spark plug boot.

1. Remove the coil cover from the valve cover.
2. Disconnect the coil connector.
3. Lift the coil out.
4. Check for debris inside spark plug hole.
5. Install the new coil over the spark plug. MSD recommends using Spark Guard, PN 8804. Make sure the boot slides over the plug and fits in place.
6. Plug in the connector.
7. Install the coil covers.

Ford is a registered trademark of Ford Motor Corporation.

Service

In case of malfunction, this MSD component will be repaired free of charge according to the terms of the warranty. When returning MSD components for warranty service, **Proof of Purchase** must be supplied for verification. After the warranty period has expired, repair service is based on a minimum and maximum fee.

When returning the unit for repair, leave all wires at the length in which you have them installed. Be sure to include a detailed account of any problems experienced, and what components and accessories are installed on the vehicle. The repaired unit will be returned as soon as possible using Ground shipping methods (ground shipping is covered by warranty).

Limited Warranty

MSD warrants this product to be free from defects in material and workmanship under its intended normal use*, when properly installed and purchased from an authorized MSD dealer, for a period of one year from the date of the original purchase. This warranty is void for any products purchased through auction websites. If found to be defective as mentioned above, it will be repaired or replaced at the option of MSD. Any item that is covered under this warranty will be returned free of charge using Ground shipping methods.

This shall constitute the sole remedy of the purchaser and the sole liability of MSD. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representation whether expressed or implied, including any implied warranty of merchantability or fitness. In no event shall MSD or its suppliers be liable for special or consequential damages.

*Intended normal use means that this item is being used as was originally intended and for the original application as sold by MSD. Any modifications to this item or if it is used on an application other than what MSD markets the product, the warranty will be void. It is the sole responsibility of the customer to determine that this item will work for the application they are intending. MSD will accept no liability for custom applications.



Discover other performance ignition coils on our website.