



INSTALLATION INSTRUCTIONS

Ford® Modular Coil-on-Plug 4.6/5.4L, 4-valve, '99-'14, PN 5514/PN 55148 5.0L, 2011-14, PN 5515/PN 55158

IMPORTANT: Read the instructions before attempting the installation.

Parts Included: PN 5514/PN 5515
1 - Coil

Parts Included: PN 55148/PN 55158
8 - Coils

WARNING: During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative cable first and install it last.

Note: MSD recommends using a dielectric grease such as Spark Guard, PN 8804, to help the installation, removal and to prevent moisture build-up in the spark plug boot.

1. Remove the coil cover from the valve cover.
2. Disconnect the coil connector.
3. Lift the coil out.
4. Check for debris inside spark plug hole.
5. Install the new coil over the spark plug. MSD recommends using Spark Guard, PN 8804. Make sure the boot slides over the plug and fits in place.
6. Plug in the connector.
7. Install the coil covers.

Ford is a registered trademark of Ford Motor Corporation.



Discover other performance ignition coils on our website.